



VOSS Insights Arbitrator Administration Guide

Release 25.3

December 03, 2025

Legal Information

- Copyright © 2025 VisionOSS Limited.
All rights reserved.
- This information is confidential. If received in error, it must be returned to VisionOSS ("VOSS"). Copyright in all documents originated by VOSS rests in VOSS. No portion may be reproduced by any process without prior written permission. VOSS does not guarantee that this document is technically correct or complete. VOSS accepts no liability for any loss (however caused) sustained as a result of any error or omission in the document.

DOCUMENT ID: 20251203114531

Contents

1	What's New	1
1.1	Arbitrator Administration Guide: Release 25.3	1
2	Getting Started	2
2.1	Welcome to Insights Arbitrator	2
2.2	Arbitrator and Dashboard Licensing	3
2.3	License Auditing	6
3	Arbitrator Main Interface	10
3.1	Arbitrator main interface	10
4	Configuration	33
4.1	System Configuration	33
4.2	Policy Configuration	34
4.3	Asset Configuration	51
4.4	Probe Configuration	62
4.5	Controls	71
4.6	Response Procedure Configuration	74
4.7	Credential Configuration	80
4.8	Customer Configuration	82
4.9	Access Control	85
4.10	Import & Export	101
4.11	Archive Management	103
4.12	Tools	130
4.13	Agent Configuration	132
5	Advanced Admin and Maintenance	139
5.1	Backup and restore Arbitrator	139
5.2	System recovery	141
5.3	Configure network observability	142
5.4	Configure Insights integration with CUBE	146

1. What's New

1.1. Arbitrator Administration Guide: Release 25.3

- EKB-24063: Allow update of HTTPS port for probes via Arbitrator GUI. See: [Probe Configuration](#)
- VOSS-1557: VOSS Insights Integration with Cisco Unified Border Element for CDR Ingestion and Monitoring. See: [Configure Insights integration with CUBE](#)

Docs added for adding and configuring a CUBE for integration with Insights, and for the CUBE dashboard reference dashboard.

2. Getting Started

2.1. Welcome to Insights Arbitrator

2.1.1. Overview

Insights Arbitrator (Correlation) is a powerful log analytics platform that allows multiple data sources and log formats to be consumed, extracted, analyzed, and correlated, for complete event, alarm, and systems monitoring.

This guide describes how to use and administer the Arbitrator platform. You can use this guide for help with importing assets, importing scripts, configuring new correlation rules, searching logs, assigning scripts to assets to create probes, and for overall performance management of the systems monitored.

Note: This guide is aimed at system administrators and users responsible for configuring and monitoring the Correlation platform. Users should have a working knowledge of operating systems, software applications, and network elements.

The Arbitrator platform design allows it to be used in multiple workflows. While you won't need to follow any particular linear flow, some elements must be configured in a specific order. Those will be pointed out in each section.

This guide covers the following:

- Main interface - allows you to visualize the monitored systems and to manage alerts for these systems. The views within this workspace are constantly updating with newly gathered data.
- System Configuration - admin users only, this is the workspace used to install and set up the platform.

2.1.2. Conventions Used in this Guide

Insights topics may display a badge to indicate that functionality is only available to administrator users.

-  admin-users-only

2.2. Arbitrator and Dashboard Licensing

admin-users-only

2.2.1. Overview

The VOSS Insights product and features are activated via a product key (license file) that is loaded on to every Arbitrator and Dashboard server.

2.2.2. Courtesy Product Key (License) on Install

When installing with an ISO file (new install), a 7-day courtesy product key (license) is automatically applied.

The courtesy product key allows you to log in and access the system user interface until you've received your official product key from VOSS.

You'll need to replace the courtesy product key via the **About** page within 7 days from install with your valid product key.



2.2.3. Load Product Key (License)

To load your Insights product key (license):


1. Obtain the product key from VOSS.
2. Click the **System Configuration** (Cog) icon on the toolbar, then select **About**
3. Click **EDIT PRODUCT KEY** and replace the existing product key with the new product key.

Note: When updating a license file, any custom theme that is applied remains active.

2.2.4. Update Expired Product Key (License)

The VOSS Insights product key (license) contains an expiry date. You'll need to activate and add a new product key once the expiry date is reached.


1. As an admin user, log in to the GUI.
2. View the activation window, which displays the product key.
3. Copy the product key for each individual server.
4. Provide details to the VOSS representative.
5. The VOSS representative provides the product key to activate the server.
6. The admin user applies the product key on the server (Arbitrator and Dashboard servers), accepts the license terms, and clicks Submit.

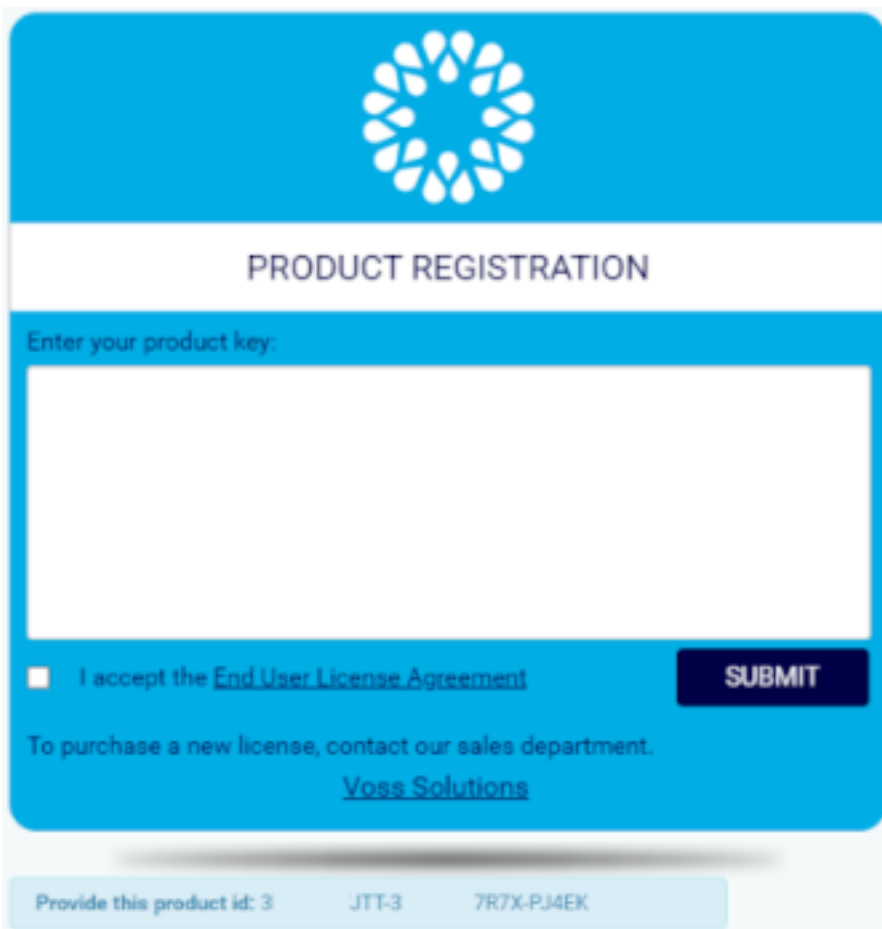

The screenshot shows a web form titled "PRODUCT REGISTRATION" with a blue header and footer. The header features a white circular logo. The form has a large text input field for the product key. Below the input field is a checkbox labeled "I accept the [End User License Agreement](#)". To the right of the checkbox is a dark blue "SUBMIT" button. Below the checkbox, there is a line of text: "To purchase a new license, contact our sales department." followed by a blue link "[Voss Solutions](#)". At the bottom of the form, there is a light blue box containing the text "Provide this product id: 3 JTT-3 7R7X-PJ4EK".

2.2.5. View License Days Remaining

The days remaining for the product key (license) display in the UI when logging in, or via the **About** menu. You can enable or hide the **View License Expiration** setting from the **Permissions** tab in **Access Controls**:

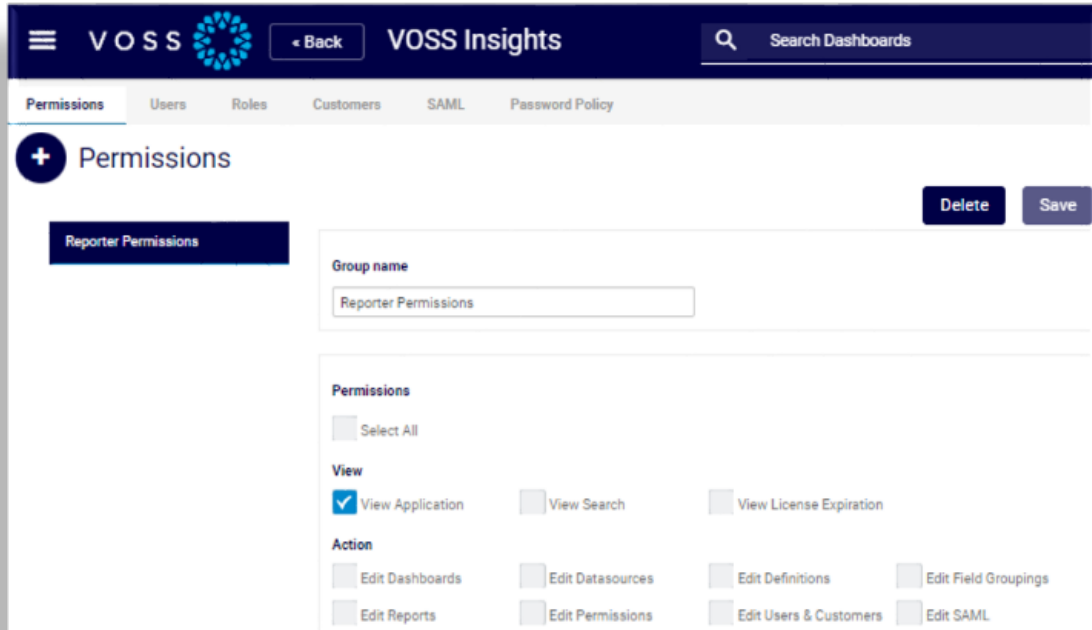


View “license days remaining” via the About menu:

1. Click the **System Configuration** (Cog) icon on the toolbar, then select **About**.
2. View the **DAYS LICENSED** and **DAYS REMAINING** values.

Enable or disable display of “license days remaining” on the GUI:

1. In **ACCESS CONTROL**, select **Permission Groups**.
2. Toggle the following setting: **VIEW - License Expiration**

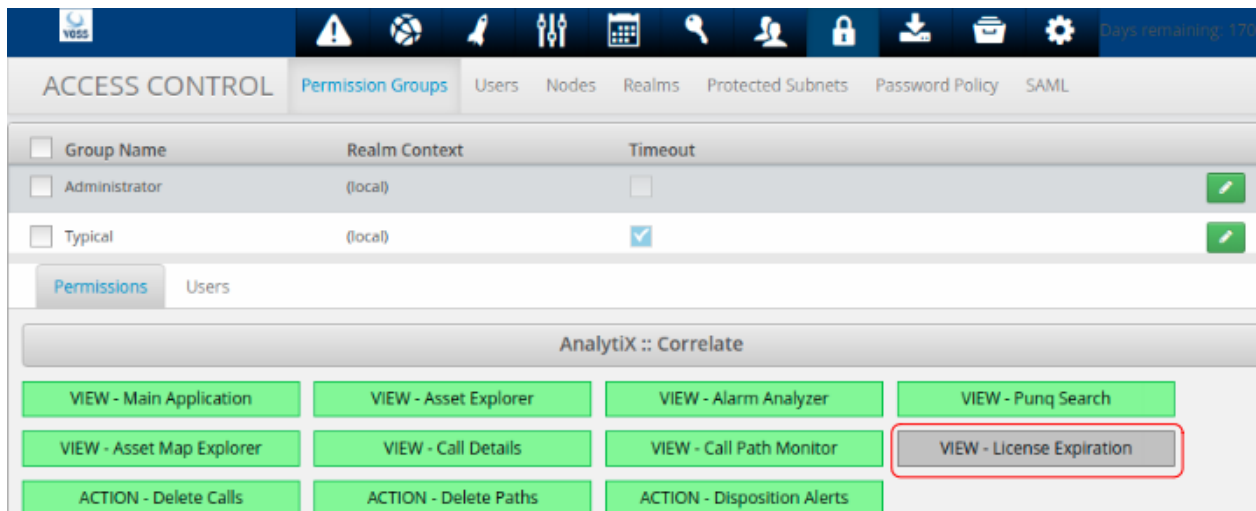

2.3. License Auditing


2.3.1. Overview

Insights integrates with the VOSS Cloud Licensing service to provide license auditing capabilities that allows you to view and inform VOSS of your license usage counts across various services and devices, including Cisco Unified Communications Manager (CUCM), Webex, Zoom, and Microsoft Teams.

A backend service on the Arbitrator detects probes already configured for CUCM, UCCE, UNITY, Webex, and MS Teams devices, and automatically retrieves the user accounts for the respective services.

Insights ships with resource files for the following views, which allow you to create dashboards that display user license counts for your system:

- data_user_view
- standalone_count_view
- meeting_room_count_view

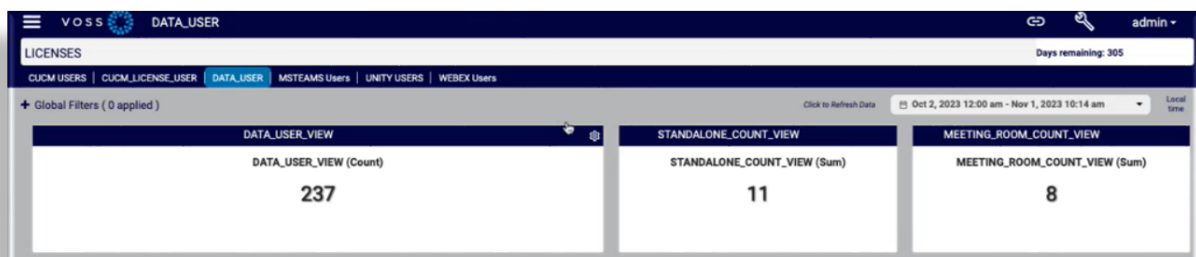

The license auditing service generates a file that can be automatically sent to the VOSS Cloud Licensing service for processing.

Note: If you prefer to opt out of the automated license delivery mechanism, you will need to manually upload the license user count details to VOSS. See [Alternative to registering with the VOSS Cloud Licensing Service](#)

Related topics

- [License Tab](#)

2.3.2. Register with the VOSS Cloud Licensing Service and Upload License File

This procedure registers your organization for syncing with the VOSS Cloud Licensing service, and optionally, allows for the license file to be automatically uploaded to the VOSS Customer Portal. Alternatively, once you've registered, you can manually upload the license file.

Registering allows licensed user counts to be added to a file that is generated on Insights Arbitrator. These files are generated daily.

Before you start

- Open the following ports to communicate with the VOSS Customer Portal at *voss.portalshape.com/*
 - Default HTTP: port 80
 - Default HTTPS: port 443
- Add the host name to an allowlist for trusted servers: *platform.voss-solutions.com*

Note: If your system is unable to reach external sites on the internet, you can use a proxy server that you set up on the Arbitrator (via **Configuration > Archive Management > Configuration Management > Proxy tab**)

Register and upload license file

1. Log in to Arbitrator as administrator, then click the toolbar **Wrench** icon (System Configuration) to open the **Configuration** GUI.
2. Click **Archive Management**, then on the **Archive Management** page, select the **License** tab.
3. Fill out your organization ID, your environment type (for example, staging, trial, or lab), and optionally, a device description.

Note: You can obtain your organization ID from the VOSS Customer Portal. Registration and file upload fails if the organization ID is incorrect.

4. To allow automatic upload of generated license file to the VOSS Customer Portal, set the value of the **enabled** drop-down to **true**.

Note: If you wish to opt out of automatic file uploads, set the value to **false** (default).

5. Click **Save** to generate the license file for the organization ID you provided.
6. (Optional) On the **License** tab, click **Fetch License File**.

Note: Clicking **Fetch License File** before saving triggers an error as the license file won't have been generated yet.

To view the content of the license file you can click **View Output**.

The screenshot displays the VOSS Configuration Management interface. The top navigation bar includes 'ARCHIVE MANAGEMENT', 'Configuration Management', and 'Log Management'. Below this, a sub-navigation bar lists various configuration options: 'API Config', 'Archive', 'Cisco SDL', 'Collect', 'Data User', 'Import', 'LDAP', 'License', 'Probe', 'Proxy', 'SNMP', 'Syslog', and 'Tunnel'. The 'License' tab is currently selected. On the left, a blue sidebar contains a 'License' button. The main content area features a yellow notification bar stating 'Changes have been made to this configuration item'. Below this, the 'License' section contains a description: 'This screen manages licensing with VOSS. This screen may be used to enable the periodic license delivery to VOSS. If applicable, please update firewall policies to allow interaction with platform.voss-solutions.com. Additionally, please configure proxy settings for external connectivity, if necessary.' The configuration fields include: 'enabled' (a dropdown menu set to 'false' with a note 'Opt-in/Enable the automatic sharing of the license file.'), 'organization id' (a text field containing 'adsl' with a note 'The VOSS organization id associated with this device.'), 'environment type' (a dropdown menu set to 'production' with a note 'The VOSS account id (organisation id) associated with this device.'), and 'description' (a text field containing 'A description' with a note 'A description of this device.'). At the bottom, there is a 'Fetch License File' button and a 'Fetch License File' link. A 'Running command' button is visible at the bottom left.

2.3.3. Alternative to registering with the VOSS Cloud Licensing Service

If you're unable to register with the VOSS Cloud Licensing service for usage reporting, you'll need to provide the license audit files to VOSS.

This procedure allows you to retrieve the required files, which you can then provide regularly as agreed with your VOSS account team and commercial agreement.

Note: The registration method is preferred since it automates this process.

Download the file and submit it to VOSS:

1. Copy the last part of the path that appears below the **Fetch License File** button (`license/latest.csv`).
See [Register with the VOSS Cloud Licensing Service and Upload License File](#)
2. Append the copied text to your system IP address in a URL (in a new tab).
3. The license file downloads as a `.csv` file.
4. Provide the file to the destination provided by your VOSS account team (typically email alias).

Related Topics


- Archive Management (Proxy) in the Insights Arbitrator Administration Guide.

3. Arbitrator Main Interface

3.1. Arbitrator main interface

3.1.1. Overview

The Arbitrator GUI has two sections. The main interface displays on first log in, while the **System Configuration** GUI, accessed via the **Wrench** icon on the main interface toolbar, is accessible only to admin users.

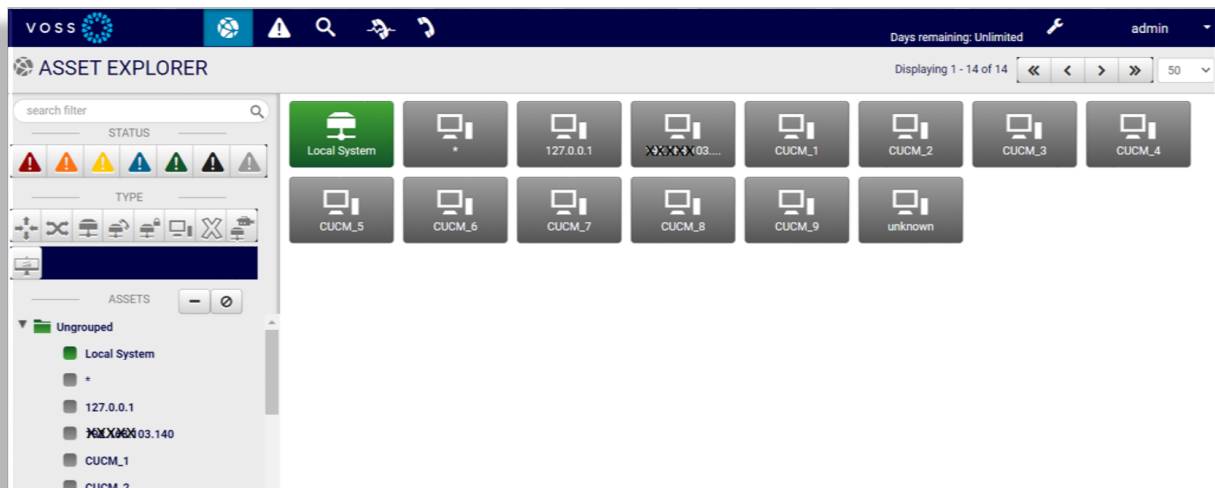

You can select the following functionality via the toolbar icons on Arbitrator's main interface:

- Admin menu
- *Asset Explorer*
- *Alert Analyzer*
- *Search*
- *Call Path Monitor*
- *Call Details Explorer*

Related topics

- [System Configuration](#)


Admin menu

Access the **admin** menu via the Arbitrator main interface. Here you can:

- Edit your profile, including your email address and password
- Update user settings, which allows you to override themes, and set tab titles for the product
- Configure system global settings (applies to all Arbitrator users) to enable/disable product usage event tracking (enabled by default).

Note: When enabled, the system securely tracks and measures anonymized product usage events, such as login/logout, UI operations, and permission groups. This data helps VOSS gain insights into product usage and improve user experience.

- View system version and license details
- Sign out

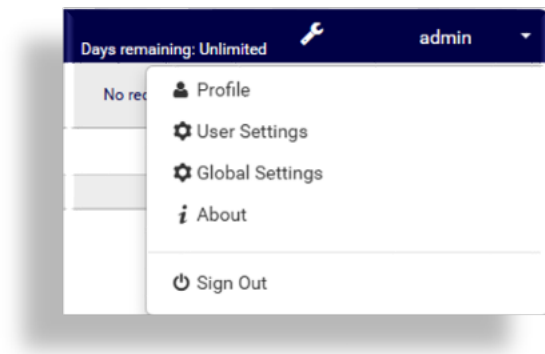


3.1.2. Asset Explorer

Overview

The **Asset Explorer** tab lists devices created as assets in Arbitrator, displaying up to 100 assets per page. On this page you can also view the alert severity status of each asset, and click on an asset to view further details.


Note: If you have more than 100 assets, use the toolbar paging icons to display the next increment of assets.

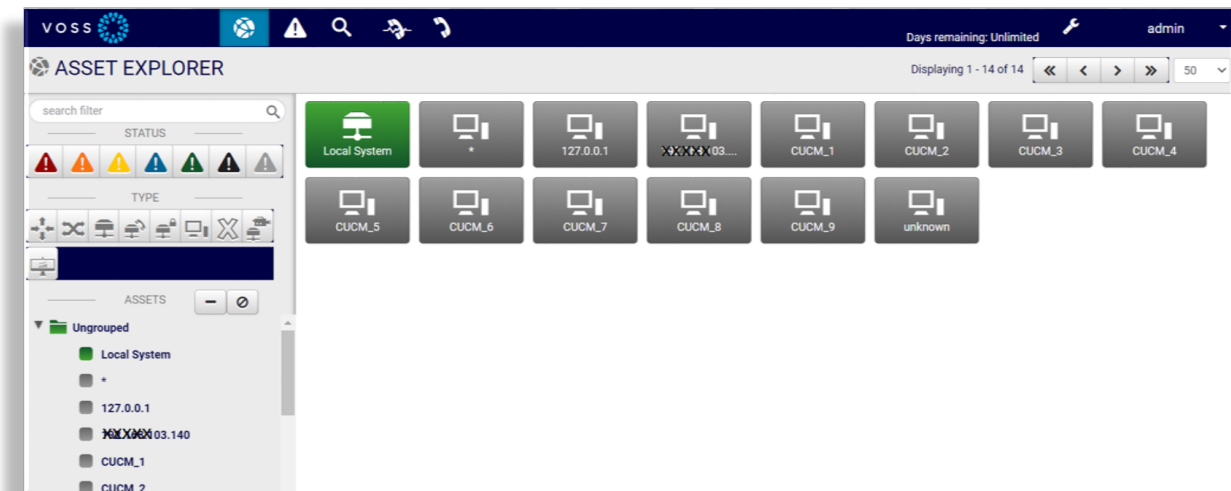

Asset Alert Severity Status

Assets display the color of the current highest-level alert for that asset in the system.

Color coding is used to indicate the alert severity status of each asset:

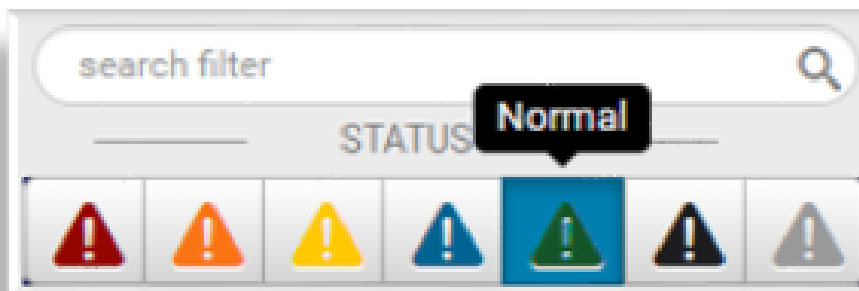

- Critical (Red)
- Major (Orange)
- Minor (Yellow)
- Informational (Blue)
- Normal (Green)
- Maintenance (Black)
- None (Gray)

Assets Search Filter

You can apply a search filter in the Asset Explorer to display only relevant assets (assets matching specified filters). You can filter assets by:

- Alert severity level, including maintenance mode
- Asset type
- Asset groups
- Keyword



Asset Details

Click on an asset in the Asset Explorer to open a summary of that asset's alarm statistics on the **Asset Details** page.

You can select the following tabs on the **Asset Details** page:

- Alerts
- Probes
- Search


Asset Details - Alerts Tab

The **Alerts** tab displays all alerts associated with the asset and allows you to disposition, add alert journal entries for the alert, and see a report of the alert and events.

See Alert Disposition, Alert Journal and View Report within the [Alert Analyzer](#) section.

Asset Details - Probes Tab

The **Probes** tab displays all probes associated with the asset. Clicking on each probe displays the probes output. If output is a numerical value, such as CPU usage, then a graph will be displayed of that value over time. If the probe output is non-numerical then just the last probe output displays.

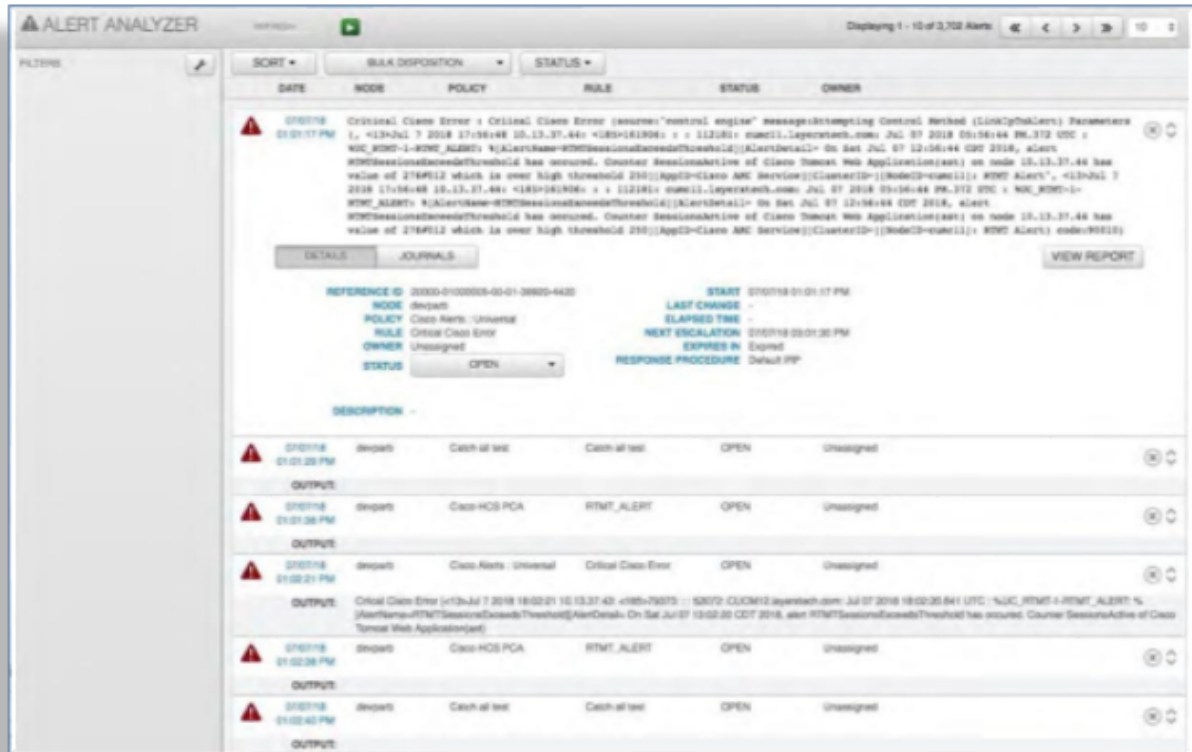

Disposition


Disposition allows you to set the status of each alert, either one at a time, or in bulk.

The table describes the options for alert dispositions:

Option	Description
Open	Default status for a new alert.
Under Review	The assigned owner is working on the alert.
Acknowledge	Alert has been seen, but is not currently being worked on.
Release	The assigned owner has released the alert to be worked on by others.
Close	The alert has been resolved, but the alert journal can still be edited.
Disregard	The alert is deleted from the system.
Close + Lock	Alert has moved to a Closed state and the alert journal cannot be edited.

Disposition a Single Alert

1. Expand the alert to open it (click the up/down arrows to the far right of the alert).
2. From the **Status** drop-down, select the disposition state.

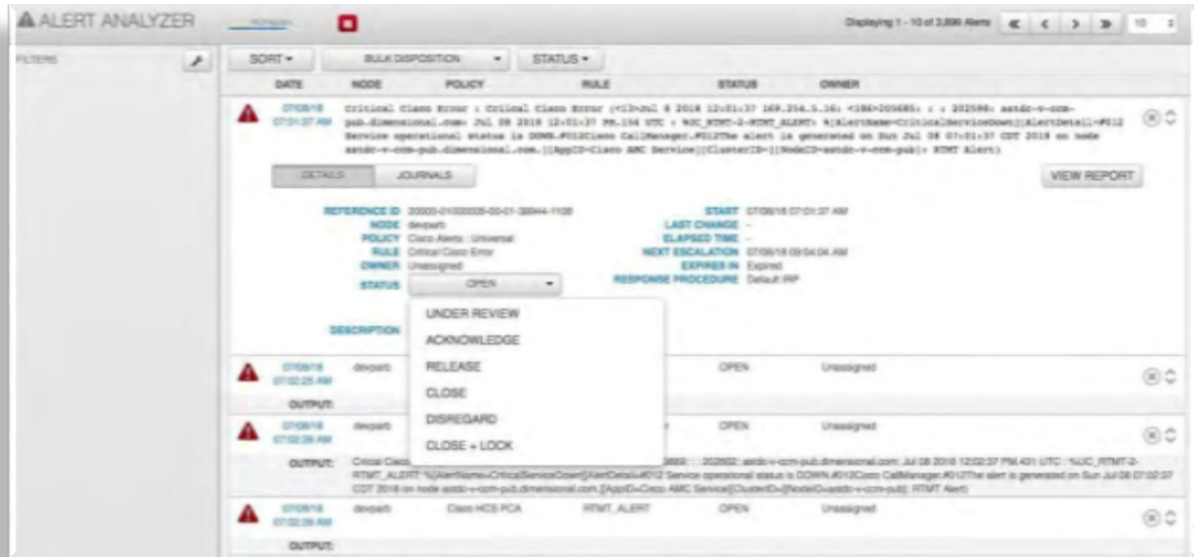


Bulk Disposition Multiple Alerts

This procedure dispositions a group of alerts at once.

1. Apply the required filter to the alerts - use the Filter Manager (see Alert Filters).
2. Once you have the group of alerts filtered, choose the required disposition state from the **Bulk Disposition** drop-down.

Filter by Disposition

1. Click the down-arrow at the **Status** drop-down.
2. Select a disposition status.
3. Click **Update** to apply the filter to see only those alerts with the disposition you've selected.
4. View alerts, filtered by the selected disposition status.

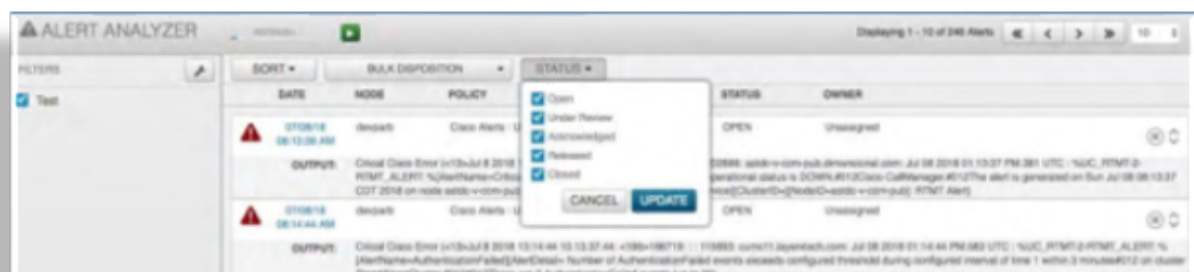

Filter Manager

You can apply filters to alerts to view only a subset of alerts. You can filter by keywords, severity, and by date and time.

1. On the **Alert Analyzer** page, click the **Wrench** icon in the **Filters** pane to open the **Filter Manager**.
2. Click the Plus icon (+) to add a new filter.
3. Fill out filter criteria across the tabs: Keywords, Severity, Date & Time:
 - On the **Keywords** tab, fill out a name and description for the filter, then fill out filter criteria, which can be any or all of the following: correlation policy, correlation rule, group name, customer name, site, node, owner, or message

The screenshot shows the 'Filter Manager' dialog box with the 'KEYWORDS' tab selected. On the left, there is a list of filters with one filter named 'Test' (description: 'This is a test filter') and buttons for '+ ADD', '- REMOVE', 'ALLOW', and 'DISREGARD'. On the right, there are input fields for NAME, DESCRIPTION, POLICY, RULE, GROUP, CUSTOMER, SITE, NODE, MESSAGE, and OWNER. The 'SAVE' and 'CANCEL' buttons are at the top right.

- On the **Severity** tab, select one or more severity states:
 - Active: Alert is currently in one of the active states
 - Escalated: Alert has been escalated based on the timer in the correlation rule
 - Acknowledged: Alert is in an acknowledged disposition state
 - Expired: Alert has expired based on the timer set in the correlation rule

The screenshot shows the 'Filter Manager' dialog box with the 'SEVERITY' tab selected. On the left, there is a list of filters with one filter named 'Test' (description: 'This is a test filter') and buttons for '+ ADD', '- REMOVE', 'ALLOW', and 'DISREGARD'. On the right, there is a table for selecting severity states. The table has columns for 'ACTIVE', 'ESCALATED', 'ACKNOWLEDGED', and 'EXPIRED'. The rows are 'CRITICAL', 'MAJOR', 'MINOR', and 'INFORMATIONAL'. Each cell contains a checkbox.

	ACTIVE	ESCALATED	ACKNOWLEDGED	EXPIRED
CRITICAL	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
MAJOR	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
MINOR	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
INFORMATIONAL	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

- On the **Date & Time** tab, set a date range for the filter, either “All Day”, a specific start and end time, a day of the week, or any combination.


The screenshot shows the 'FILTER MANAGER' dialog box with the 'DATE & TIME' tab selected. The dialog includes a list of filters on the left (currently showing a 'Test' filter) and configuration options on the right. The 'DATE' section has 'START DATE' and 'END DATE' fields. The 'TIME' section has an 'ALL DAY' checkbox and time selectors for 'START' and 'END' (each with 'HOUR' and 'MINUTE' dropdowns). The 'DAY OF WEEK' section has checkboxes for all days of the week, all of which are currently checked.

Alert Journal

The Alert Journal displays the alert history as well as system and user actions. Users can add journal entries to update status or actions.

Add an Alert Journal

1. On the **Alert Analyzer** page, click the **Pause** button to stop the automatic refresh.
2. Expand the alert where you want to add an entry.
3. Click **Journals**, then fill out a journal entry in the field displaying the text, **NEW JOURNAL ENTRY**.
4. Click **Add**.
5. Click the **Play** button to resume refresh on the Alert Analyzer.

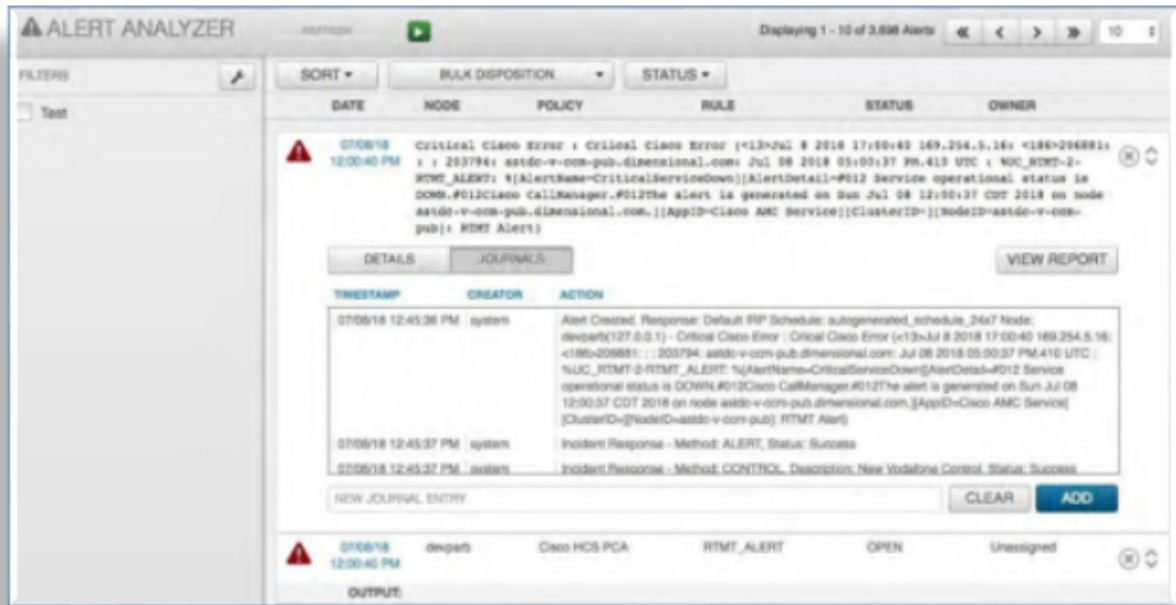


Alert Sort

Alerts in the Alert Analyzer can be sorted based on the following categories:

- Time to Expire/Escalate
- Alert Severity
- Alert Date & Time

The sort order for each category can be toggled between ascending and descending. Additionally, the order of each sort category will be the first to last in priority. To change this, click the down arrow or the up arrow adjacent to each category.

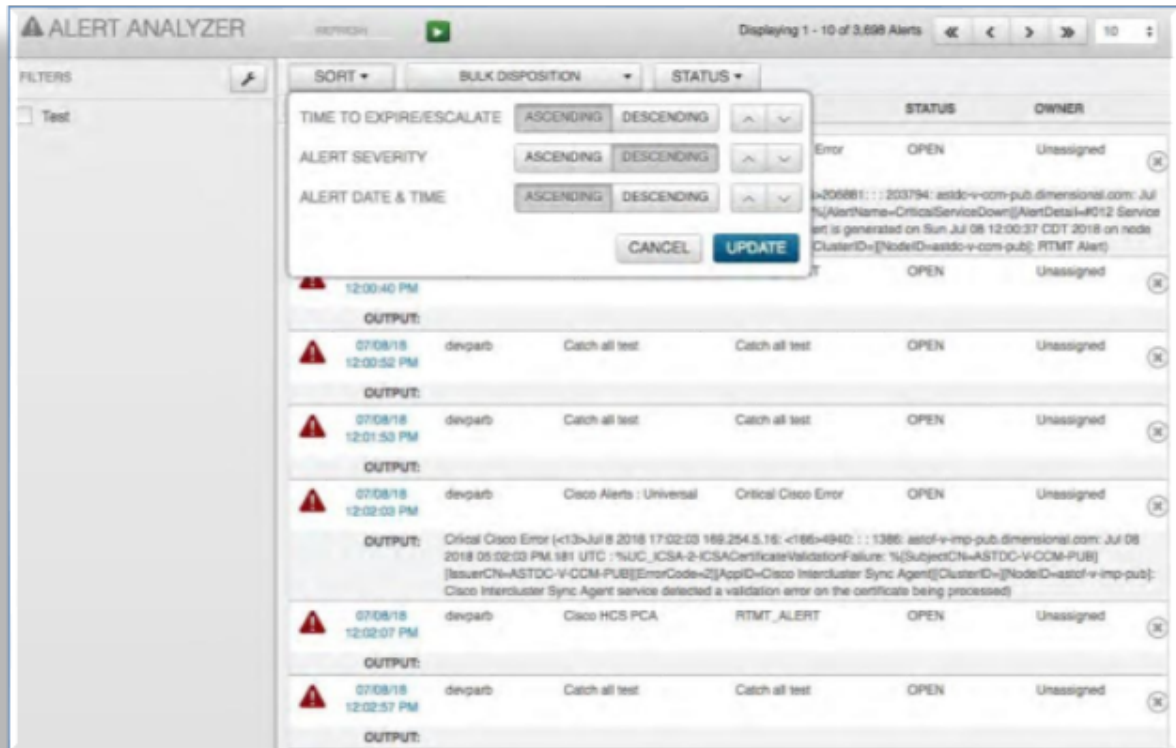

3.1.4. Search

Overview

Arbitrator's main interface provides the following search options:

- *Event Search*
- *Simple Search*
- *Keyword Search*
- *Use Operators with Search*
- *Date Range Search*

Event Search

The Event search view provides access to all raw data coming in to Arbitrator and provides a simple interface to search for and display results.


Arbitrator builds a dictionary of all words from all received logs, enabling rapid search across large volumes of data, making an otherwise complex amount of data quickly searchable and more useable.

Simple Search

To perform a simple search across all logs based on the default time of “Last 24 Hours”, use the “*” wildcard character.

1. In the search text input field type *
2. Press **Enter**, or click the magnifier icon.
3. View search results, which displays all log data received in the last 24 hours.

The default number of logs per page is 10, but can be increased via the drop-down below the time bar.

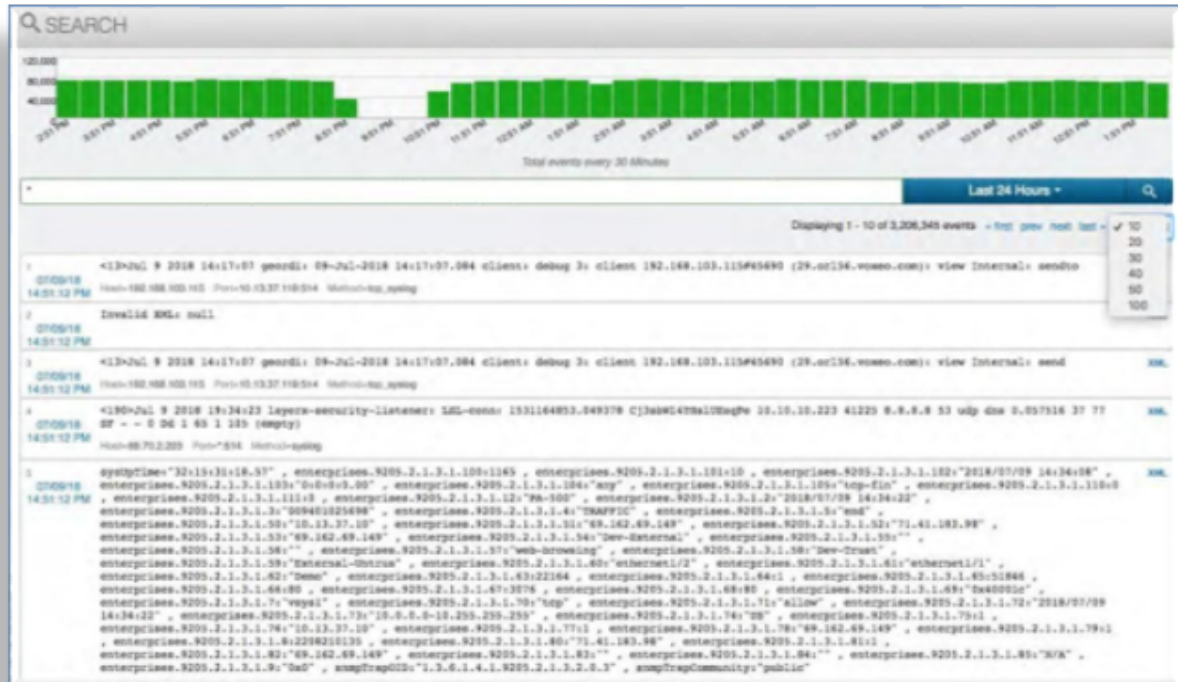


Keyword Search

To perform a keyword search across all logs based on the default time of “Last 24 Hours”:

1. Fill out a word or part of a word that you know is present in your data, such as “Cisco”.
The event search auto suggests a keyword as you type, based on data the Arbitrator has collected.
2. Press **Enter** to select the auto-suggested word, or click the Magnifier icon to run the search.
3. View search results, which displays all log data from the past 24 hours that contains the specified criteria.

The default number of logs per page is 10. To increase the number of logs per page, select the required number from the drop-down below the time bar.

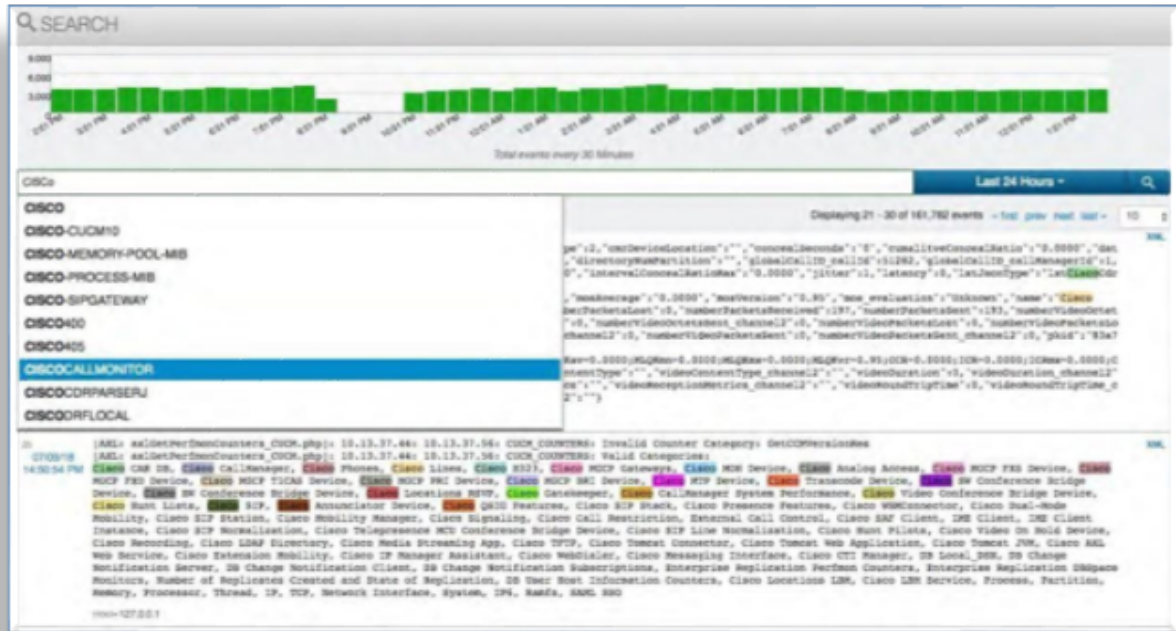

Use Operators with Search

The Event Search allows the use of operators (AND, OR, NOT) to combine keywords that you know are present in your data for a more granular search. A search with operators searches across all logs based on the default time of “Last 24 Hours”.

1. Fill out a word or part of a word that you know is present in your data, such as “Cisco”, followed by the relevant operator (AND, OR, NOT).

Note: When using operators, the logic must match in order to retrieve data.

2. Select a keyword from the auto-suggest, or press **Enter** to run the search.
3. View search results, which displays all log data from the past 24 hours that contains the specified criteria.

The default number of logs per page is 10. To increase the number of logs per page, select the required number from the drop-down below the time bar.



Date Range Search

You can search for and apply a date to any of the possible search types discussed in this section.

The default is the last 24 hours, or choose an option from the drop-down:

- Last 24 Hours: The default
- Last 1 Hour
- Last 30 Minutes
- Last 5 Minutes
- Custom date range showing from and to. Clicking in the “From” box opens up a calendar from where you can select a specific “From” date. Clicking in the “To” box will do the same.




Search Result Metadata

The event search engine uses Arbitrator's core processes to store, tag, and manage data.


Click on the blue text ("XML") that displays with each log entry to open up an XML representation of the data along with additional important elements, specifically, the entity ID's, which make every event unique and formulates the "Reference ID" seen on the Alert Analyzer page. For compliance purposes, a hash of the raw log is also available, if required.

To return to the main search page, click **Raw**.

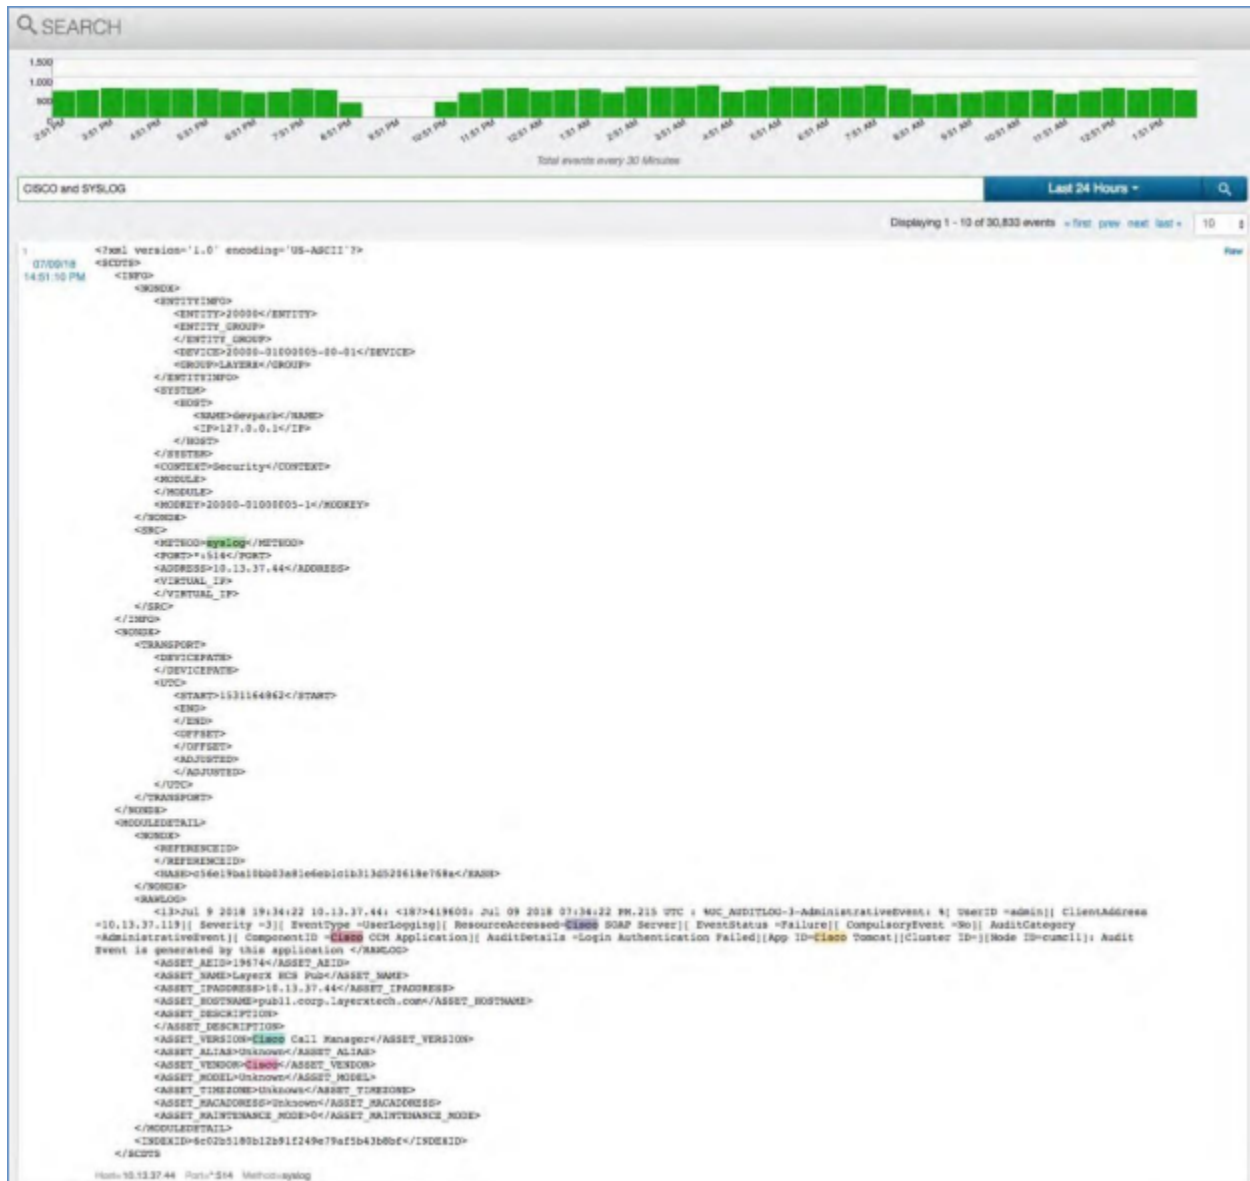

3.1.5. Call Path Monitor

Arbitrator's **Call Path Monitor** allows you to manage unified communications, and the particular call path that a Voice over IP call (VoIP) takes. It displays the paths or routes that a call takes from source to destination. Each path contains the IP Addresses, number of hops, delay, and latency during the call.

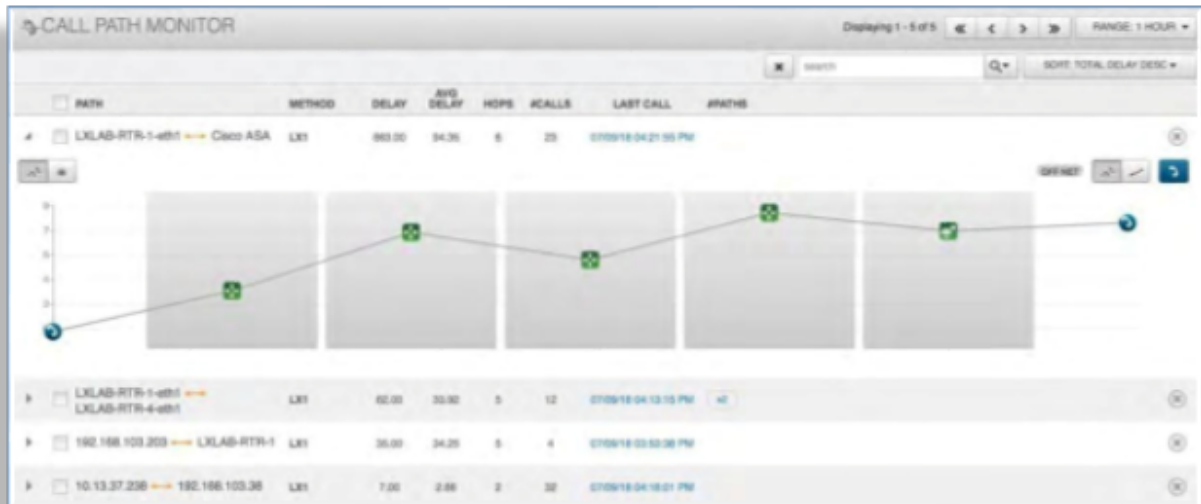

Sorting Call Paths

The Call Path Monitor provides three options for sorting data on the page and for represented call paths:

Total Delay	The total latency on the call.
Average Delay	The average latency on the call.
Total Hops	The total number of layer-3 hops the call took.


For each sort option, you can also choose to view the data in ascending or descending order.



Call Path Time Range

The Call Path Monitor time range setting allows you to define the time range for which you wish to view collected call paths. The **Range** drop-down provides the following options:

- All
- 1 Hour
- 1 Day
- 2 Days
- 3 Days
- 4 Days
- 5 Days

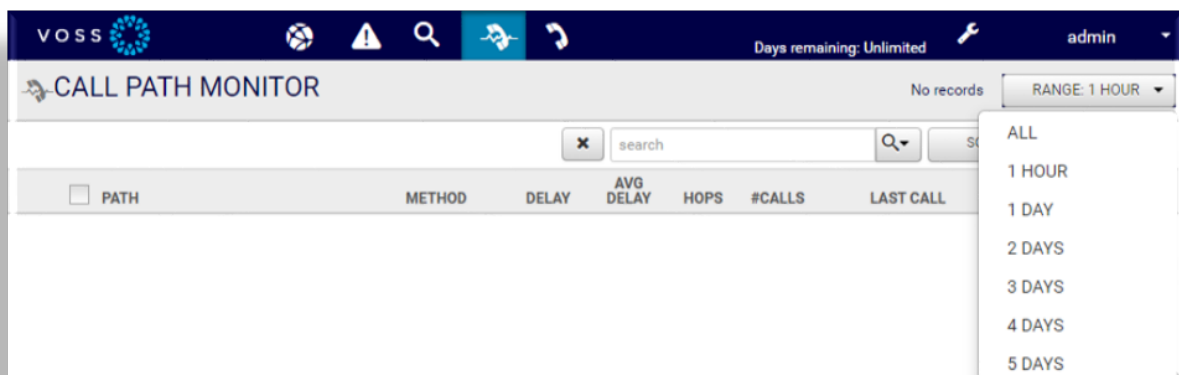


Expanded Call Path View

Expanding a call path allows you to see the path by hop or by IP Address. In addition, it provides an option to view it by the total per hop or cumulative delay, latency, and Jitter. The expanded view also shows you whether the call was ON Network or OFF Network. The expanded view can be toggled to show in graph or table views.

To expand a call path and toggle between graph and table views, click the arrow adjacent to the relevant call path.

By default, the view is in graph mode. To switch to the table view, choose the table view icon in the upper left corner of the now expanded call path.

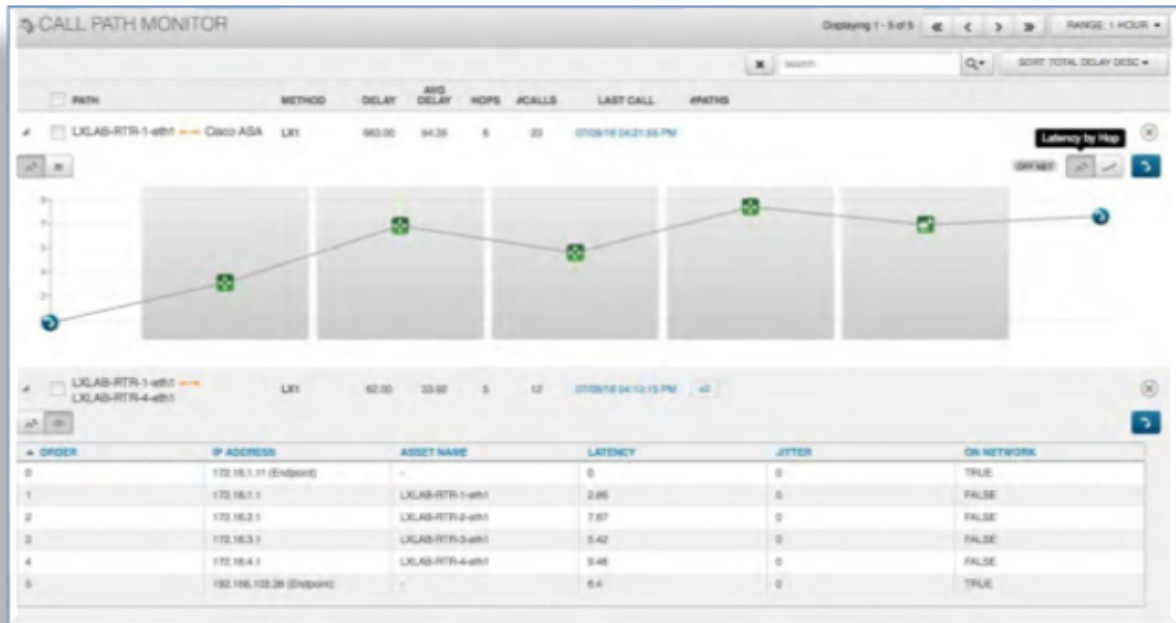

Searching Call Paths

Each call path has several fields you can use to search and filter for a relevant call (one or more).

- Source
- Destination
- Method
- Hops

The screenshot shows a search filter dialog box. It has a search input field at the top with a magnifying glass icon. Below the input field are four checkboxes, each with a corresponding label and an empty text input field to its right:

- ☒ SOURCE
- ☒ DESTINATION
- ☒ METHOD
- ☒ HOPS

At the bottom of the dialog box are two buttons: 'CLOSE' and 'SEARCH'.

View Call Details from the Call Path

In the Call Path Monitor you can drill into the specific call details directly from the chart.

Click the blue Phone icon in the path row to open the Call Details Explorer view for that call path.

3.1.6. Call Details Explorer


The Call Details Explorer is the main page for managing unified communications and the details of a particular call path that a Voice over IP (VoIP) call takes. This page displays the time, source destination, vendor, latency, and hops (at the top of the page). The bottom pane displays the call path with each hop, along with the call metrics, such as packets lost, jitter, R-Factor, and MOS.



Call Details Explorer Toolbar


The table describes the functional elements on the Call Details Explorer toolbar:

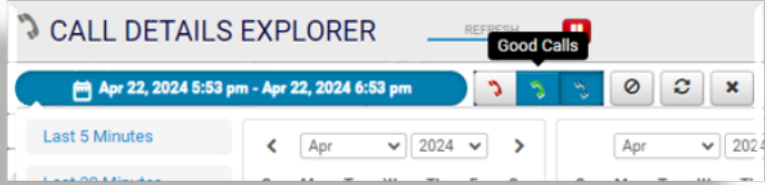

Element	Description
Filter by date and time	The date and time calendar allows you to search call details for a specified date and time range. You can select a date and time from the calendar, or select from a range of predefined options, from Last 5 Minutes, to Last 12 Months, or for the previous hour, day, or week.
Filter by call quality	<p>The Phone icons allow you to filter your data to view only good calls, only bad calls, or view both good and bad calls.</p> <ul style="list-style-type: none"> • Bad Calls (Red) • Good Calls (Green) • Bad and Good Calls (Blue) 
Clear Filters	Removes all applied filters and displays call details in the default display mode.
Update	Applies a predefined refresh timer to the page. Click Update to request new data, on demand.
Delete Selected Calls	Deletes any call selected on the page.
Refresh, Play, or Pause Data	Click the Pause/Play icon to pause or restart the data refresh cycle. This is useful when reviewing a specific call.
Sort	<p>Provides the following sort options for call details. You can sort by:</p> <ul style="list-style-type: none"> • The time the call was placed • The source that placed the call • The call destination • The vendor, which identifies the method that created the call. The only options are LX1 (the VOSS Raptor Call Path generator) and RTCP (Avaya-specific RTCP and call path data) • Latency - the aggregate latency recorded on the call • The total number of hops the call took <p>You can sort each option in ascending or descending order.</p>
Search	<p>A free text search field that also has options to use predefined criteria, either of the following:</p> <ul style="list-style-type: none"> • Search by the source IP that made the call • Search by the destination IP that received the call • Search by vendor, which identifies the method that created the call. Options are LX1 (the VOSS Raptor Call Path generator) and RTCP (Avaya-specific RTCP and call path data)

Element	Description
Call Management Configuration	<p>Click the File icon adjacent to the Search bar to open the Call Management Configuration dialog, where you can configure settings to manage the call table on the Call Details Explorer page.</p> <p>In very busy or large environments it is imperative that you manage the data being collected in the Call Detail Explorer. Having potentially thousands of calls can lead to the data becoming difficult to manage. These settings provide optional time and methods for which call data can be archived. Options are daily, weekly, monthly, or quarterly. Ensure that you toggle on Alert on Archive Failure, and Alert on Archive Success. Available archival methods are SCP, SFTP, or SMB. Each requires a host, path, and credential. Multiple methods may be added.</p>

The image shows the Call Management Configuration dialog:

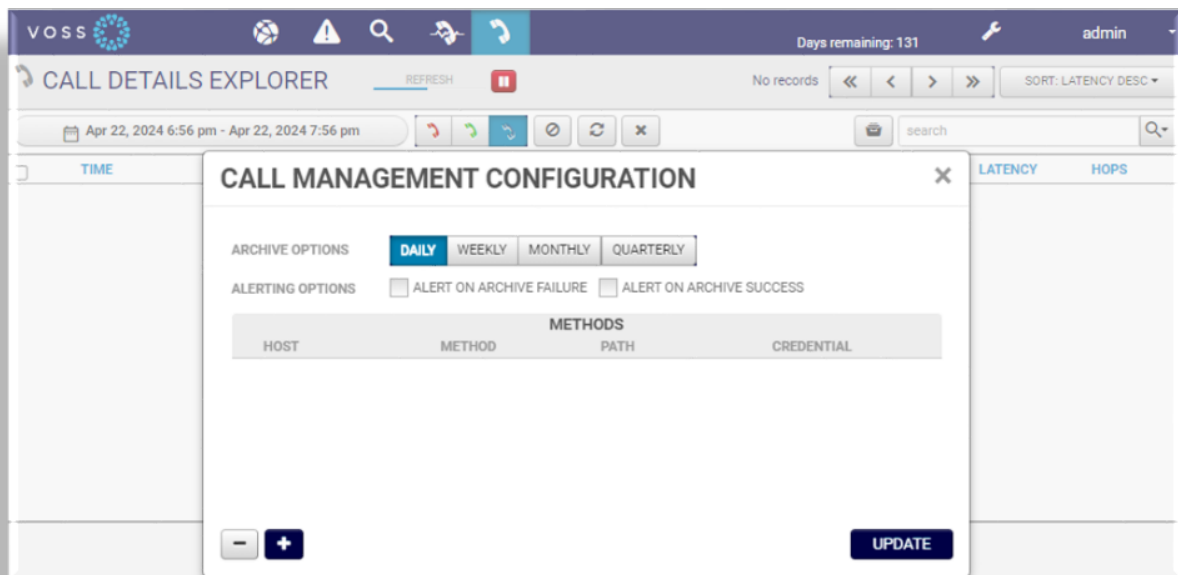

4. Configuration

4.1. System Configuration


4.1.1. Overview

Insights Arbitrator's **System Configuration** GUI is accessible via the toolbar **Wrench** icon (System Configuration), on the main user interface.



The **Configuration** GUI toolbar icons provide access to configuration options for the following:

- *Policy Configuration*
- *Asset Configuration*
- *Probe Configuration*
- *Controls*
- *Response Procedure Configuration*
- *Credential Configuration*
- *Customer Configuration*
- *Access Control*
- *Import & Export*
- *Archive Management*
- *Tools*

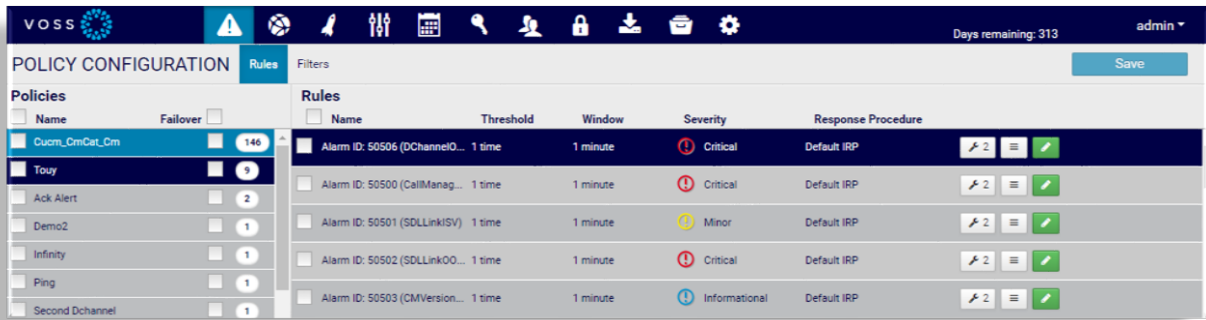

Related Topics


- [Arbitrator main interface](#)

4.2. Policy Configuration

4.2.1. Overview

Policies are modular groupings of correlation rules, actions, and response procedures that define how to respond to certain situations that happen on the monitored systems. Policies are usually system and manufacturer specific but can contain custom scripts for actions and response procedures. Each policy will also contain several correlation rules that are designed to create alerts based on the best practices of that particular system manufacturer. These alerts can apply to:

- Business processes
- Infrastructure
- Security
- Applications
- Unified communications
- Network behavior
- Metrics and threshold violations

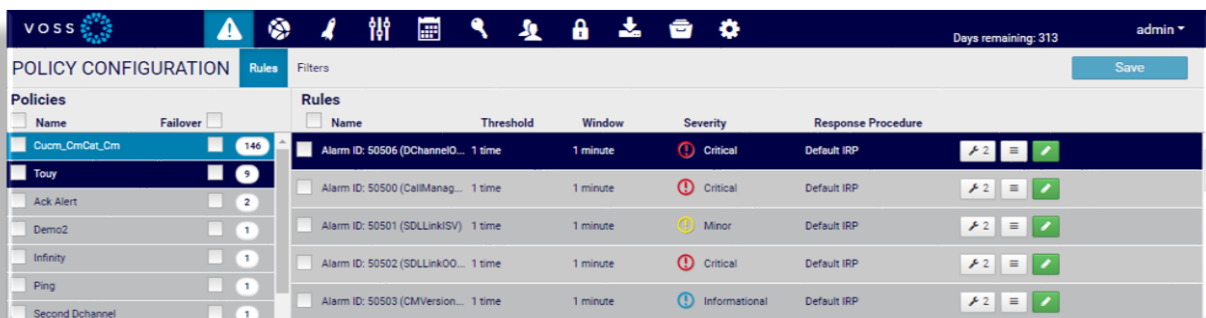


4.2.2. Correlation Rules

A correlation rule extracts data from the various sources and then defines the parameters for creating an alert within a policy. It may contain one or more correlation definitions along with specific actions and response procedures. Each correlation rule consists of the following parameters:

Parameter	Description
Name	Descriptive name for the correlation rule, which will be displayed within an alert and viewed in Alert Analyzer.
Description	A complete description of the problem that created the alert along with any specific remediation steps that should be taken to resolve the problem.
Type	Simple: Select if the rule is to analyze a single log and as a result of the rule, you want to execute an action. Compound: Select if the rule is to correlate more than one log, the results of another correlated event or multi-tiered rules. A compound rule can be one or more simple rules that feed into one primary rule, or it can come directly from the source. Unique: Same as Simple but as a definition will be the only one.
Threshold	Defines how many times this rule is to match before an action occurs.
Window	The time window for the rule to match before an action occurs.


Parameter	Description
Severity	<p>Indicates what is to appear in the Status field on the Alert Viewer monitor.</p> <p>Select the severity for this rule:</p> <ul style="list-style-type: none"> • Informational • Minor • Major • Critical
Action	<p>Choose the action that is to occur for this rule, based on the selection in the Severity field</p> <ul style="list-style-type: none"> • Respond - If the condition is met, set a marker and send an alert. • Track - If the condition is met, track the event, but do not post it to the Alert Analyzer. • Track/Respond - If the condition is met, send an alert and continue to monitor. • Respond on Expire – If the condition is met, wait to send an alert until the window time has expired. If you want the policy/rule to only alert after an application does not respond, based on the setting (for example, to ping 9 times in 10 minutes), choose Track and Respond. For the example in this case, the alert triggers as soon as it sees 9 ping failures. This setting (Respond on Expire) does not track. • Submit - Submit the results of a correlation event back into the Correlation Engine so that the behavior can be analyzed and re- correlated. • Submit/Respond - Submit this alert back into the Correlation Engine so that the event can be analyzed and re-correlated. Then set a marker and send an alert.
Response Procedure	For any rule that is satisfied, an incident response procedure occurs and an event is posted to the Alert Analyzer. Select the response procedure from the drop-down to execute when conditions have been met.
Definition Output	Selects a single correlation definition's extracted value to be displayed with the alert.
Enabled	Toggle to enable/disable the rule
Inherit Output	Toggle to enable/disable whether the rule will include the results of the filter attached to the policy module.
Halt Processing	Toggle to halt processing of logs to any other rules within the policy if the rule matches. This will highlight the Policy in Green to indicate that this function is in use.
Correlation Definitions	Click the wrench icon where you can define one or more definitions match and or extract the required data from a log or event. See Correlation Definitions.
Output Order	Sets the preferred order to output the extracted data from the Correlation Definitions.
Done	Click the Done box when the rule is complete
Save	Be sure to click the Save button so your rule (or changes) are saved and committed.

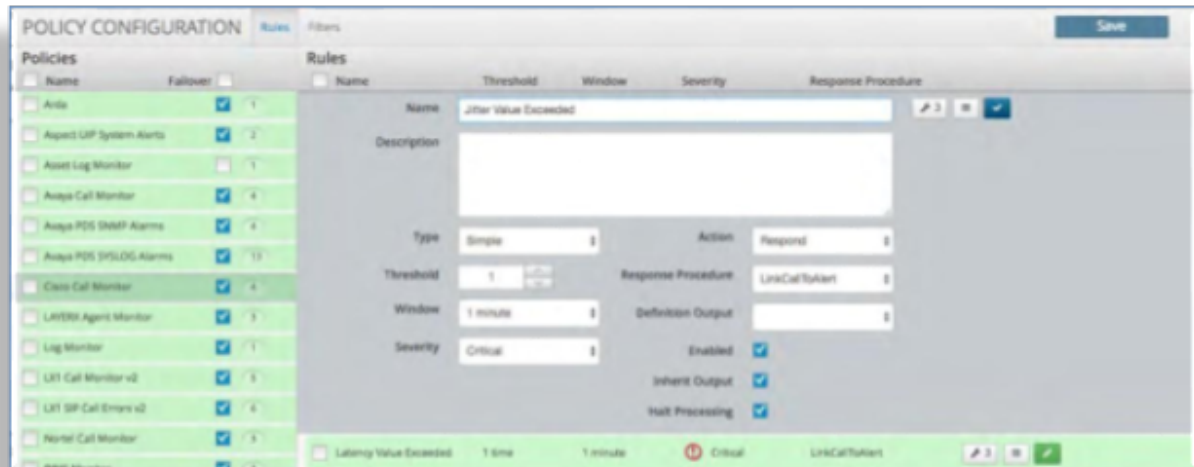

Correlation filters provide a simple way of ensuring that all of the correlation rules within the policy are firing on the correct set of data. The engine first looks at the filter criteria, then it selects only the data that matches the criteria, and then it applies the correlation rule. You can add as many of these as required.

Each filter has the following options:

Filter Option	Description
Name	Provide a name as close as possible to the data elements you wish to filter. This allows the output to match the name once viewed in the alert text.
Pattern	<p>The extraction method used to pull a particular data point out. Click the Wrench icon adjacent to the box to launch the Regex Wizard, which helps you to find and extract the data.</p> <p>The Regex Wizard has two sections:</p> <ol style="list-style-type: none"> 1. Select a Log: In the top section you can search and select the log or data set you will be utilizing. That will then show up in the bottom portion under the phrase "Select log from the list above or paste log here:". You can copy and paste a log into this section as well. 2. Create Regex: Once you have your log then go to this section. Here you can use the wizard to create the Regular Expression required. Close the wizard and copy this pattern the Regex into the box under Pattern.
Source Field	From the drop-down, choose the source from which data is extracted.
Pattern Type	<p>From the drop-down, choose the type of expression you want to use:</p> <ul style="list-style-type: none"> • String Match • Regular Expression Match • Regular Expression Match/Extract (Most Often Used) • Regular Expression Multi-Valued Extract
Function	<p>If the extracted data is integer-based, you can apply the following functions for comparing data:</p> <ul style="list-style-type: none"> • None • Greater Than • Less Than • Same
Value	This field is available only if the data extracted is an integer.

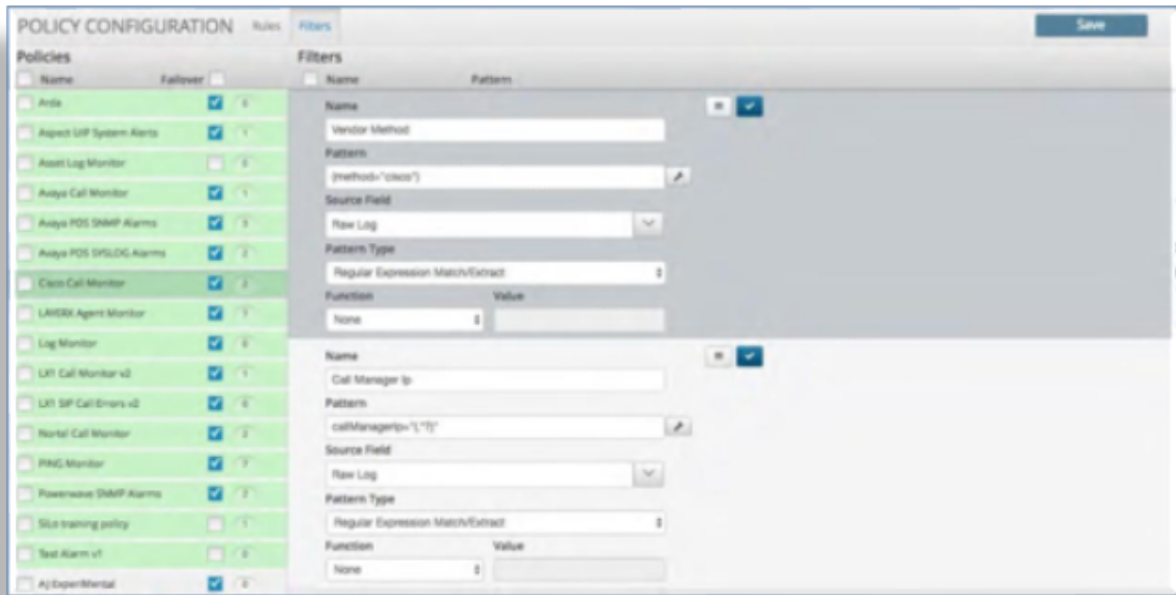

4.2.3. Example - Policies and Alerts

Let's say you have a Ping policy that you've set to alert after 10 failures in 20 minutes.

Depending on how you've set up your rules, the following may occur:

- The policy may run against all your assets and trigger an alarm if the cumulative Ping failure (across all assets) hits 10
- The policy may trigger an alarm for each asset that fails a ping 10 times in 20 minutes

Thus if it sees 10 failures (across all assets) in 20 minutes, an alert is triggered. However, if you want 10 failures per asset, you need a definition for the IP address, and set the filter function to **Same**, which defines that when you see 10 failures for the same IP address, trigger an alert.

You can configure this definition in two ways:

- As a filter on the policy
- As a specific rule definition.

4.2.4. Correlation Definitions

A Correlation Definition defines what criteria to match within the data. Each definition will consist of the following parameters:

Parameter	Description
Name	<p>Name this as close as possible to the data elements being extracted. That way the output matches the name once viewed in the alert text. It is also utilized in the key value pair within the alert text.</p> <p>This is the extraction methodology utilized to pull the particular data point(s) out. Simply find the log containing the data by utilizing the search bar above. Within that log you can highlight the text you want to extract. Once highlighted a box will pop up allowing you to name the field and extract it. This will automatically create the Regex to extract the data. The highlight method is about 95% accurate.</p> <p>If you have trouble with this method due to special characters in the data set, then you can utilize the “wrench” icon beside the Pattern box and it will bring up the “Regex Wizard” to assist in finding and extracting the data.</p>
Pattern	<p>Within the Regex Wizard there are 2 sections:</p> <ul style="list-style-type: none">• Select a Log: In the top section you can search and select the log or data set you will be utilizing. That will then show up in the bottom portion under the phrase “Select log from the list above or paste log here:”. As the phrase indicates you can copy and paste a log into this section as well.• Create Regex: Once you have your log then go to this section. Here you can utilize the wizard to create the Regular Expression required. Close the wizard and copy this pattern the Regex into the box under Pattern.

Parameter	Description
Source Field	In the drop-down box select the source from which the data is being extracted.
Pattern Type	<p>Select from the drop-down box the type of expression you want to utilize:</p> <ul style="list-style-type: none"> • String Match • Regular Expression Match • Regular Expression Match/Extract (Most Often Used) • Regular Expression Multi-Valued Extract <hr/> <p>Note: The “Extract” pattern types above will cause the correlation engine to include the definition name and the matched value in the Alert Message.</p> <hr/>
Function	<p>The functions below may be used to change what the correlation engine counts as a “match” in the log. Alerts are only triggered if the specific number of matches are found.</p> <ul style="list-style-type: none"> • None - Default. Only use Pattern type matching to trigger a match. • Greater Than - Should only be applied to integer values. If the extracted value is greater than the configured value, then a “match” is made. • Less Than - should on be applied to integer values. If the extracted value is less than the configured value, then a “match” is made. • Same - Can be applied to both Text or Integer. If the extracted value is the same as previous occurrences, a match triggered. For example, if multiple devices are sending an error message, only the first error will trigger an alert. If the desired goal is to trigger an alert for unique IP address, then the IP address definition should have the Same function applied.
Value	This field will only be available if the function selected is either “Greater Than” or “Less Than”.


The screenshot shows the Jitter Value Explorer interface. At the top, there's a header "RULE DEFINITIONS • Jitter Value Explorer" with buttons for "Changes made" and "Cancel Update". Below this is a search bar with "0000" and a "Last 24 Hours" filter. A link "Click here for help building rules" and a button "Build a New Definition Manually" are present. The main area displays a log entry with a "Source Field" dropdown set to "Raw Log". A modal dialog titled "Extract Field" is open, prompting the user to "Name this field:" with an input field containing "IP Address". The dialog has "Cancel" and "Save" buttons. The log entry shows a timestamp "03/11/18 16:54:10 PM" and a message starting with "GET/PHONE-socks Created. Sockets Connected." followed by a detailed error message and a stack trace.

[illegible][illegible][illegible]

4.2.5. Add a Policy

To add a policy:


1. Click the Policy View from the Configuration Menu Bar at the top of the page.
2. Click the Plus Icon at the bottom left of the Policies panel
3. Fill in the Policy name and press enter.

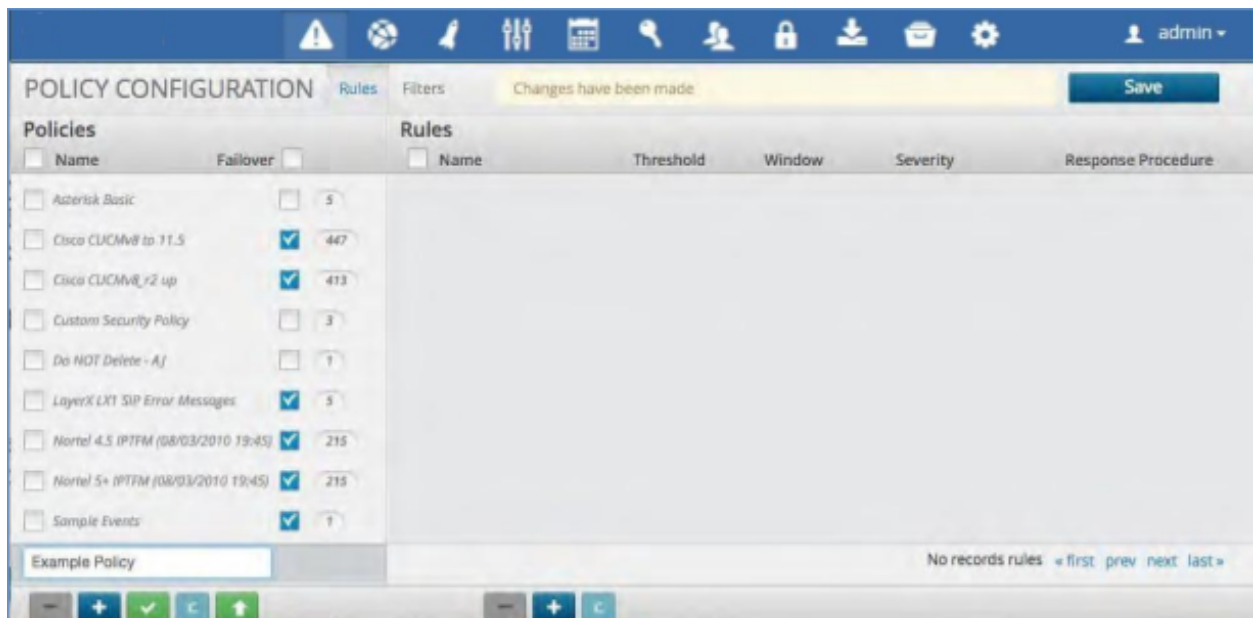

4.2.6. Add a Correlation Rule

To add a new correlation rule:

1. Click the Policy to which you wish to add the rule.
2. Click the Plus icon at the bottom of the Rules panel.
3. Fill in the rule name and the parameters.

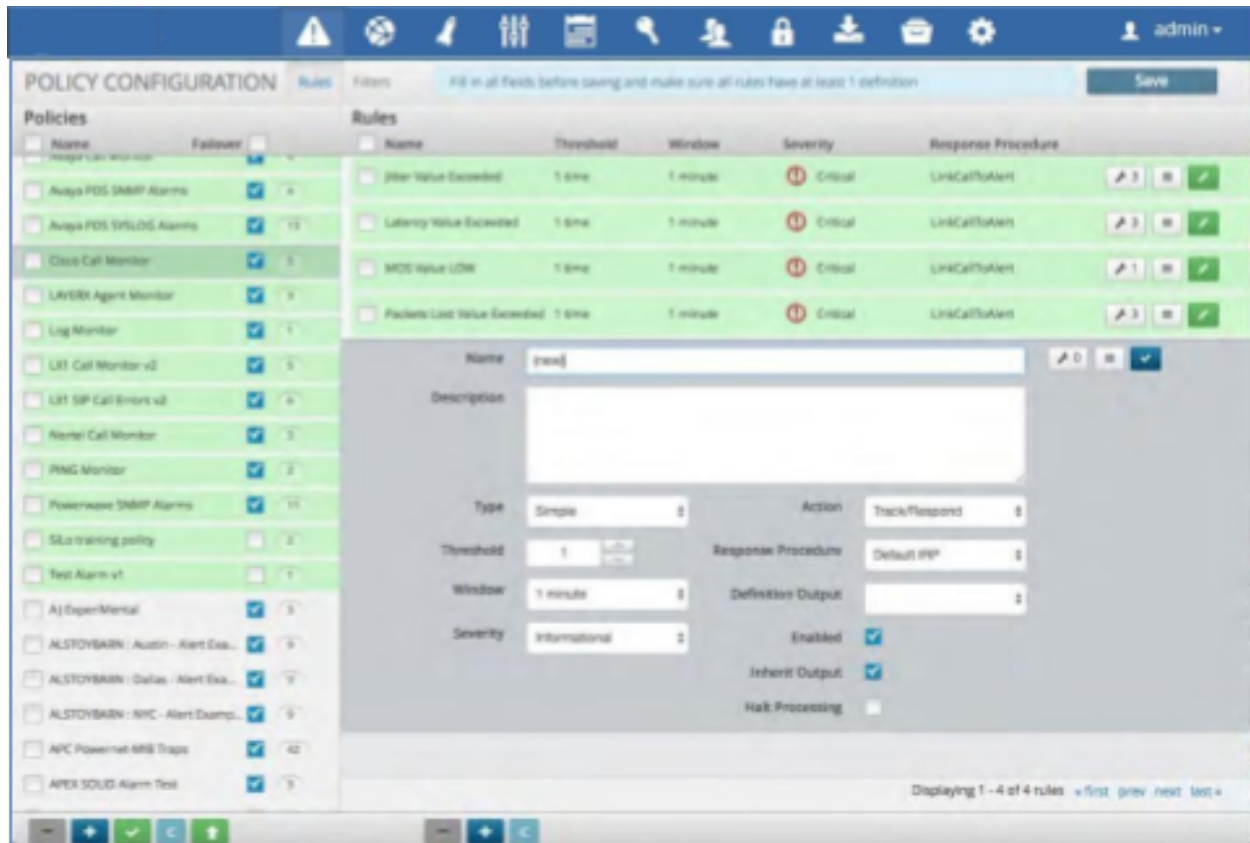

4.2.7. Add a Definition

To add a new definition:

1. Click the wrench icon within any rule to bring up the search engine.
2. Enter a search term that is relevant or is in the log that you would like to match and press Enter. This will return the last 10 logs with this term in them.
3. Utilize the highlight and extract procedure or the Regex Wizard as described in the in “Correlation Definitions” section above.
4. Once finished click Update in the top right of the screen and be sure to save your Definition on the next page.

POLICY CONFIGURATION Rules Filters

Policies

Name	Follower	Rules	Threshold	Window	Severity	Response Procedure
Cisco Call Monitor	<input checked="" type="checkbox"/>	4	1 time	1 minute	Critical	LinkCallToken

Rules

Name	Threshold	Window	Severity	Response Procedure
Jitter Value Exceeded	1 time	1 minute	Critical	LinkCallToken

RULE DEFINITIONS - Jitter Value Exceeded

Click here for help building rules Build a New Definition Manually

Displaying 1 - 10 of 154,942 events

Source Field: Raw Log

Pattern:

Pattern Type: Regular Expression Match/Extract

Function: None

Value:

Regex Wizard

1) Select a Log 2) Create Regex

Search for logs:

Displaying 1 - 10 of 2,961,263 events

WHERE DOES THE SWITCH BEGIN?

LIST ALL PHRASES YOU ARE TRYING TO MATCH

Enter a phrase or multiple phrases you want to match.

STEP 4: WHERE DOES THE SWITCH BEGIN?

Is there any text that immediately precedes your search?


Is there any text that immediately follows your search?

REGEX GENERATED:

4.2.8. Delete a Correlation Rule

To delete a correlation rule:


1. Click the policy name on the left side of the screen.
2. Click the check box on the Correlation rule you wish to delete.
3. Click the minus icon at the bottom of the correlation panel.
4. Click the Save icon in the upper right to save your change.

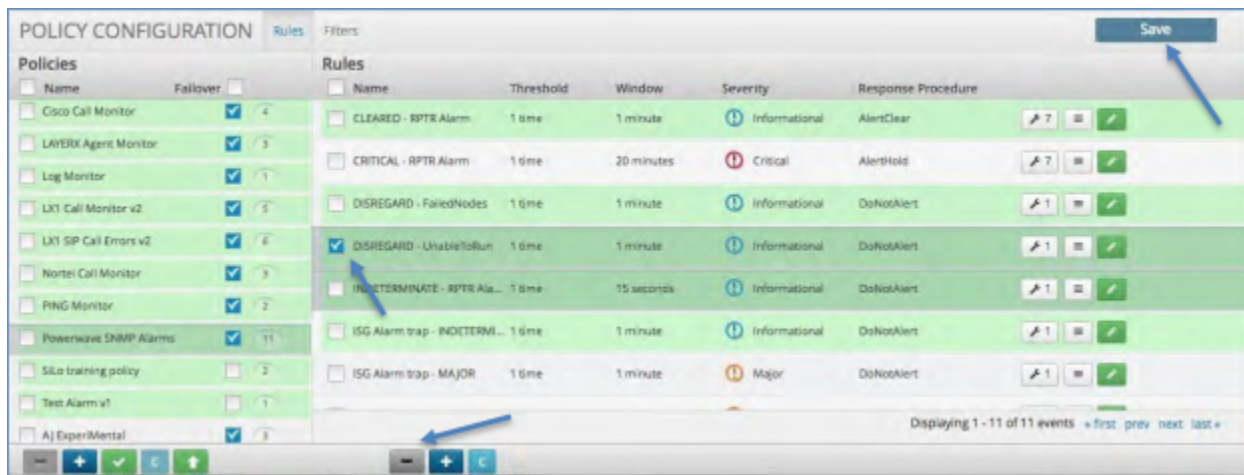

4.2.9. Delete a Policy

To delete a policy:


1. Click the check box next to the name of the Policy you wish to delete.
2. Click the minus icon in the bottom left of the policy panel.
3. Click the Save icon in the upper right to save your change.

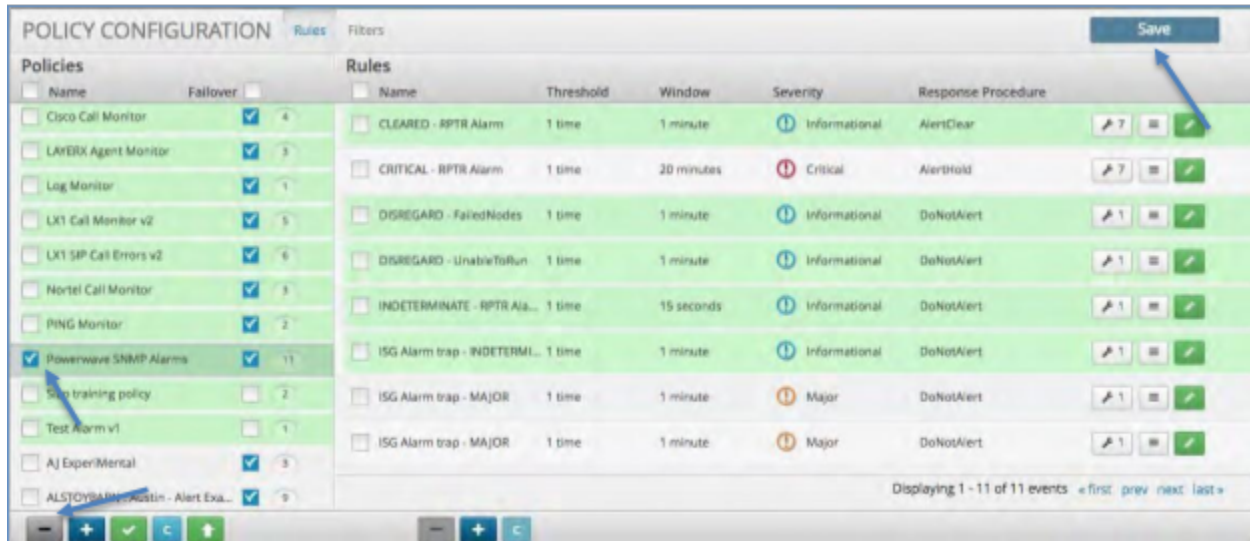

4.2.10. Disable or Enable a Policy

To Disable and Enable a Policy:

1. Select the Policy by clicking the check box next to the name of the policy.
2. Click the Green Check Box at the bottom of the Policies listing column.
3. The Name of the Policy will become italicized indicating that the Policy is Disabled
4. To Enable the Policy: Click the Green Check Box again. The name will turn back to a normal font indicating it is enabled.

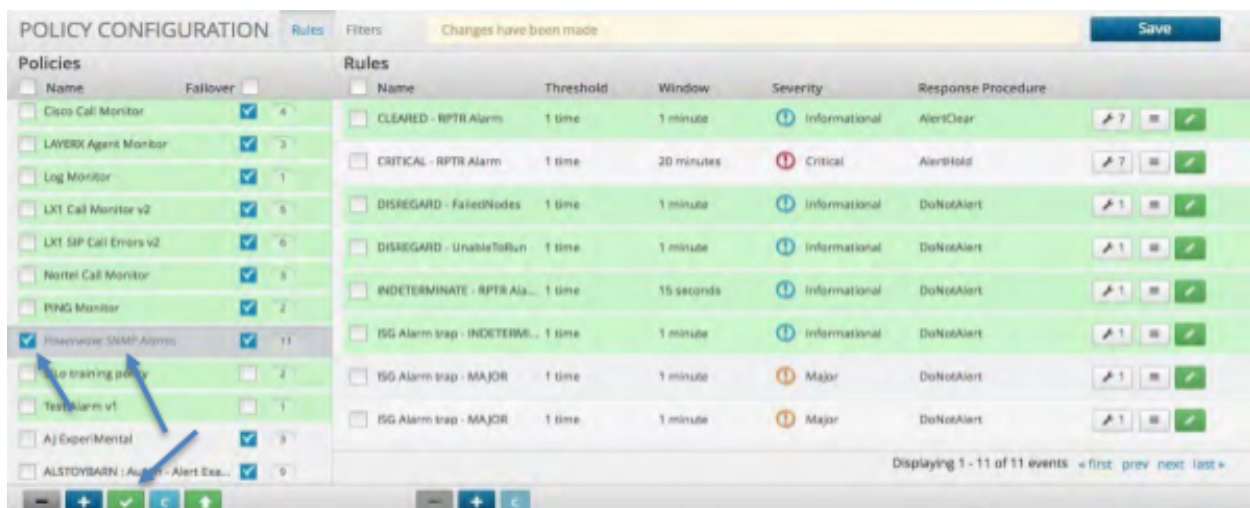


4.2.11. Clone a Policy

Cloning a policy allows the quick replication of all of the Correlation Policy rules and definitions. The user then can simply change only the required elements for the new policy.

To clone a policy:

1. Select the Policy by clicking the check box next to the name of the policy.
2. Click the Blue “C” Box at the bottom of the Policies listing column.
3. Rename the Policy and make your modifications.
4. Click **Save** to save the new policy.

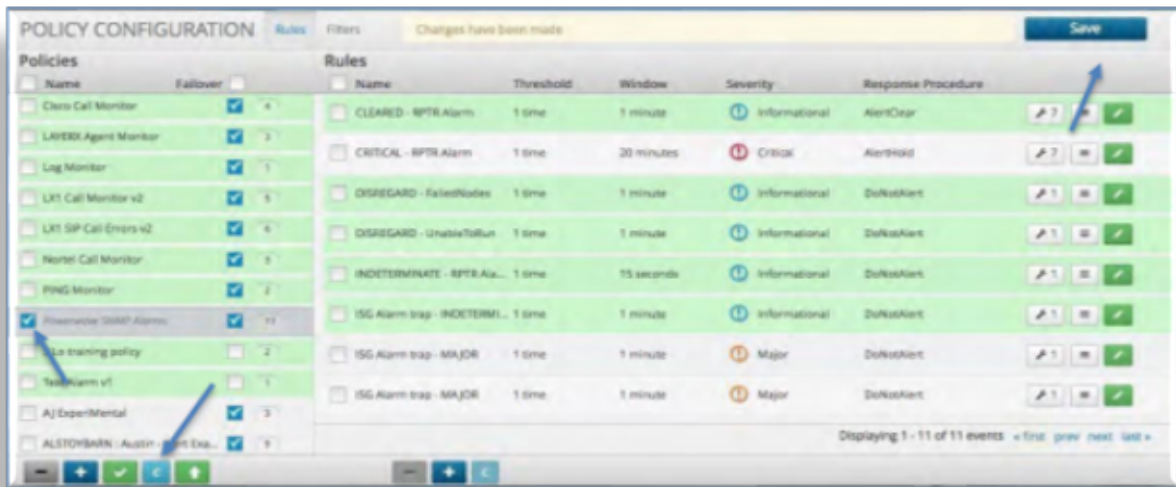

4.2.12. Export or Import a Policy

The Arbitrator platform allows for full export / import of all of its configuration. Within the Policy Configuration section, you can export and import the policy that you exported from another system.

A new system log table `insights_system_log` has also been added to log user actions and a user can create a dashboard to view these actions.

Global Filters (0 applied) Click to Refresh Data Mar 9, 2022 9:09 am - Mar 9, 2022 10:09 am

System log

Search

	txt timestamp epoch (America/Chicago)	username	action	area	status	duration	details
7	03/09/22 9:24:49 am	admin	import	asset	SUMMARY	19	{'csvRows':1, 'numInsert':0, 'numUpdate':2, 'numDelete':0}
8	03/09/22 9:19:31 am	admin	import	asset	SUMMARY	13	{'csvRows':1, 'numInsert':1, 'numUpdate':0, 'numDelete':0}
9	03/09/22 9:18:06 am	admin	export	asset	SUMMARY	0	{'csvRows':2}
4	03/09/22 9:27:56 am	admin	export	asset	SUMMARY	0	{'csvRows':3}
1	03/09/22 10:07:28 am	admin	import	policy	SUMMARY	1	{'csvRows':4, 'numGroup':1, 'updateRows':'1,2,3,4', 'numUpdate':4}
5	03/09/22 9:26:24 am	admin	import	asset	SUMMARY	14	{'csvRows':6, 'numInsert':0, 'numUpdate':6, 'numDelete':0}
10	03/09/22 9:13:30 am	admin	import	asset	SUMMARY	11	{'csvRows':6, 'numInsert':1, 'numUpdate':4, 'numDelete':0}
6	03/09/22 9:25:13 am	admin	import	asset	SUMMARY	43	{'csvRows':6, 'numInsert':1, 'numUpdate':5, 'numDelete':0}
3	03/09/22 10:03:12 am	admin	export	policy	SUMMARY	0	{'numExportPolicyGroups':1, 'csvRows':4}
2	03/09/22 10:05:50 am	admin	export	policy	SUMMARY	0	{'numExportPolicyGroups':3, 'csvRows':28}

Related topics

- Log Search Section in the Dashboard and Reporting Administration Guide.

Export a Policy

1. Select the check boxes of the policies to export, or select the **Name** check box at the top of the **Policies** list to select *all* policies.
2. Click the green Down arrow button at the bottom of the **POLICY CONFIGURATION** panel.
3. The **Export CSV** dialog opens. Enter a **CSV file name** (You do not have to add the .csv file extension) and click **Export**.
4. The **Export finished** dialog shows when the export file has been created. Click **Download** to save the CSV file to your selected download location.

Import a Policy

1. Click the green Up arrow button at the bottom of the **POLICY CONFIGURATION** panel.
2. A pop-up box will appear asking you choose your file.
3. Click the **Choose file** button and select the exported CSV file that you have saved to your computer.
4. Click the **Import** button.

Policy CSV Format

The following columns are in an exported CSV file:


```
"row action","policy group name",name,description,type,action,severity,
"respond procedure","SubCategory (definition: regular expression match)",
"Message (definition: regular expression match/extract)"
```

Note:

- The "row action" column is used when importing and if it contains "delete", then the row will be deleted upon import.

- The "respond procedure" column can be used when importing and should then contain the Response Procedure name *exactly* as it exists on the system. If a procedure is found, then it will be assigned to the associated rule. If a new value is entered, a new Response Procedure is created. The default Response Procedure is used if no value is entered.
- The combination: "policy group name", "name", "respond procedure" should be unique in CSV row. If a policy found, its data will be updated. If not found, new policy will be inserted. The "name" has to be unique. If a rule is found, its data will be updated. If not found, new rule will be inserted to the policy indicated in "policy group name".

See: [Response Procedure Configuration](#).

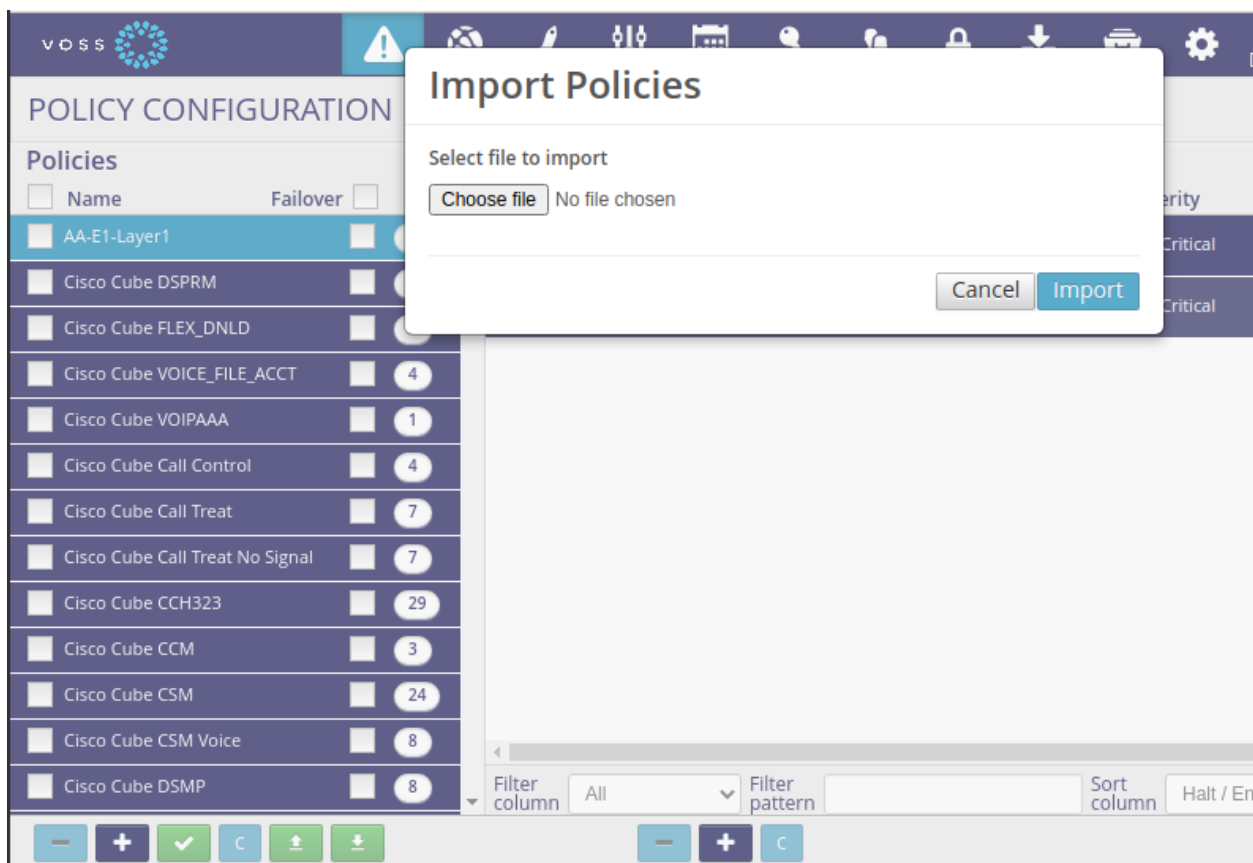

4.3. Asset Configuration

4.3.1. Overview

On the **Asset Configuration** tab you can add, edit, and remove assets and asset groups, import or export assets, and configure monitor profiles.

Assets can be any devices that are either sending data or from which data is being retrieved. Each asset can be assigned to a specific customer to create a multi-tenant environment.



The screenshot shows the Voss Asset Configuration interface. On the left, there is a 'Groups' panel with a tree view showing 'All groups' and 'Ungrouped' (14 items). The main area displays a table of assets. The table has columns for IP Address, Asset Name, Description, Type, and Monitor Profile. The assets listed include a 'Local System' (Local Arbitrator Platform, Server) and several 'CUCM' devices (CUCM_1 through CUCM_6). Each asset has a 'No profiles set' status and edit/delete icons. At the bottom, there are filters, a sort column dropdown (set to 'IP Address'), and pagination (Displaying 1 - 14 of 14 assets).

IP Address	Asset Name	Description	Type	Monitor Profile
*	*		Unknown	No profiles set
XXXXX.173	Local System	Local Arbitrator Platform	Server	1 profile set
127.0.0.1	127.0.0.1		Unknown	No profiles set
XXXXXX.140	XXXXXX.140		Unknown	No profiles set
CUCM_1	CUCM_1		Unknown	No profiles set
CUCM_2	CUCM_2		Unknown	No profiles set
CUCM_3	CUCM_3		Unknown	No profiles set
CUCM_4	CUCM_4		Unknown	No profiles set
CUCM_5	CUCM_5		Unknown	No profiles set
CUCM_6	CUCM_6		Unknown	No profiles set

Note: A system log table (insights_system_log) logs user actions, and a user can create a dashboard to view these actions.


Related Topics

Log Search in the Dashboard Administration Guide

4.3.2. Add an Asset Group

To add a new asset group:


1. On the **Asset Configuration** tab, click the Plus icon (+) at the bottom left corner of the **Groups** panel.
2. Click in the new folder created in the panel, fill out a group name, and press **Enter**.
3. Save your changes.

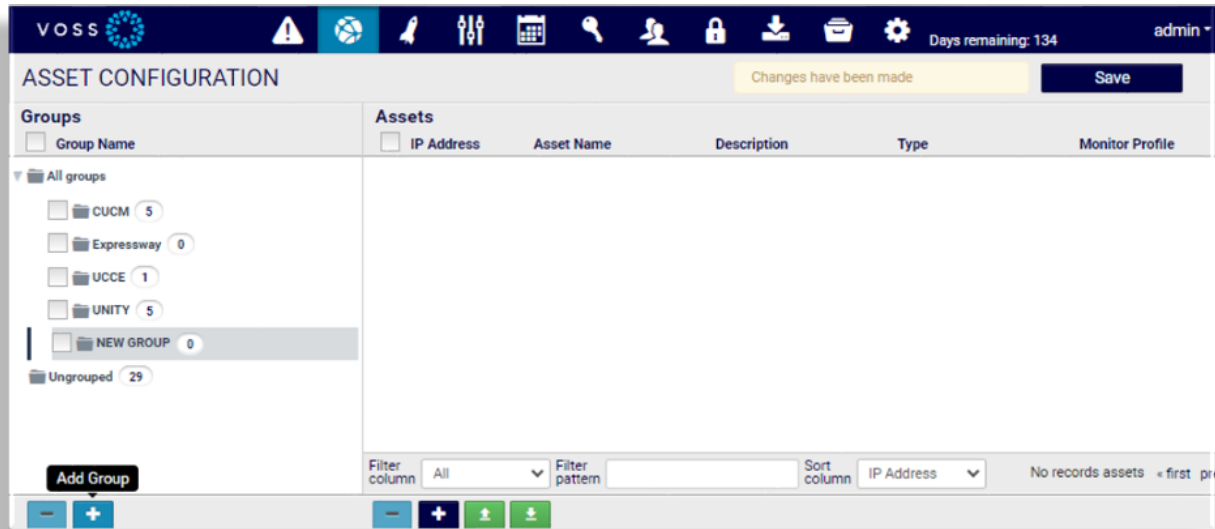


4.3.3. Add an Asset to a Group

To add a new asset to a group:

1. On the **Asset Configuration** tab, select the asset group where you want to add an asset.
2. Click the Plus icon (+) at the bottom of the **Assets** panel.
3. On the **Properties** tab for the new asset, fill out at least the mandatory fields, **IP Address** and **Asset Name**, then select an asset type, if know, for example, group, router, firewall switch, or one of the other asset types listed in the drop-down.
4. On the **Interfaces** tab for the new asset, add new interfaces, one or more.
5. Click the **Check** icon to the right of the asset details panel to add the new asset.
6. Save your changes.

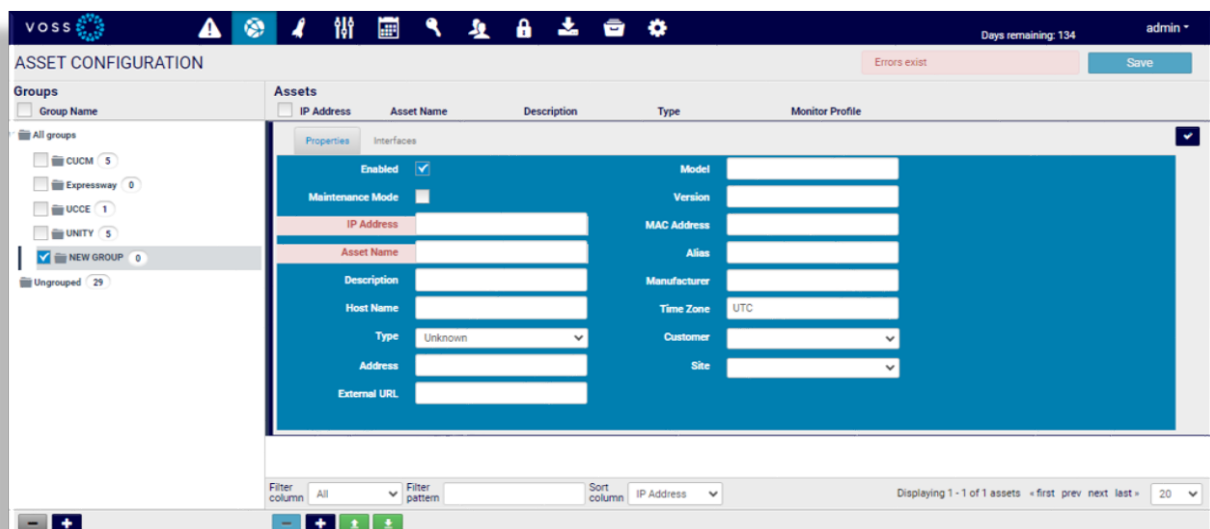


Note: Modification: If present, then more than one asset in more than one group can be modified when *modifying* assets. Change bars are displayed next to each asset and group when the assets or groups modified, for example:

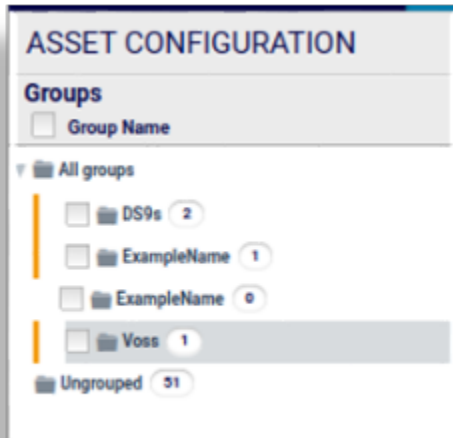

4.3.4. Delete Assets

To delete assets in an asset group:


1. On the **Asset Configuration** tab, select the relevant group to display its assets.
2. From the **Assets** panel, select the checkbox for each asset in the group that you wish to remove (one or more).
3. Click the **Minus** icon (-) at the bottom of the **Assets** panel.
4. Click **Save**.

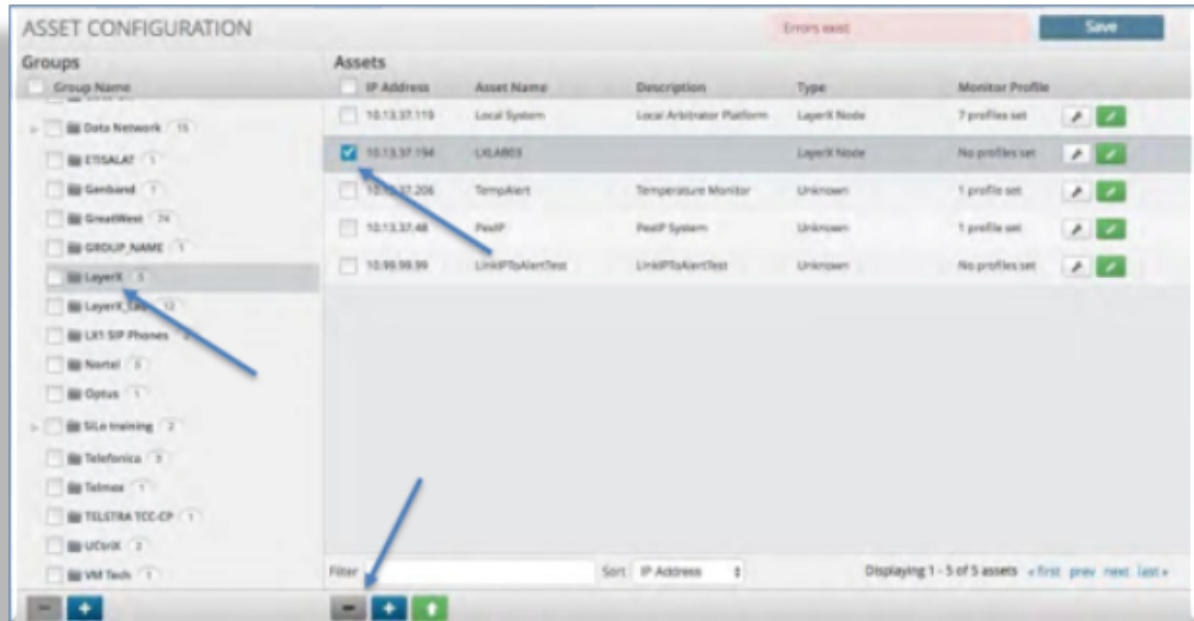

4.3.5. Delete an Asset Group

To delete an asset group:

1. On the **Asset Configuration** tab, select the asset group you wish to delete (one or more).
2. Click the **Minus** icon (-) at the bottom of the **Groups** panel.
3. Click **Save**.

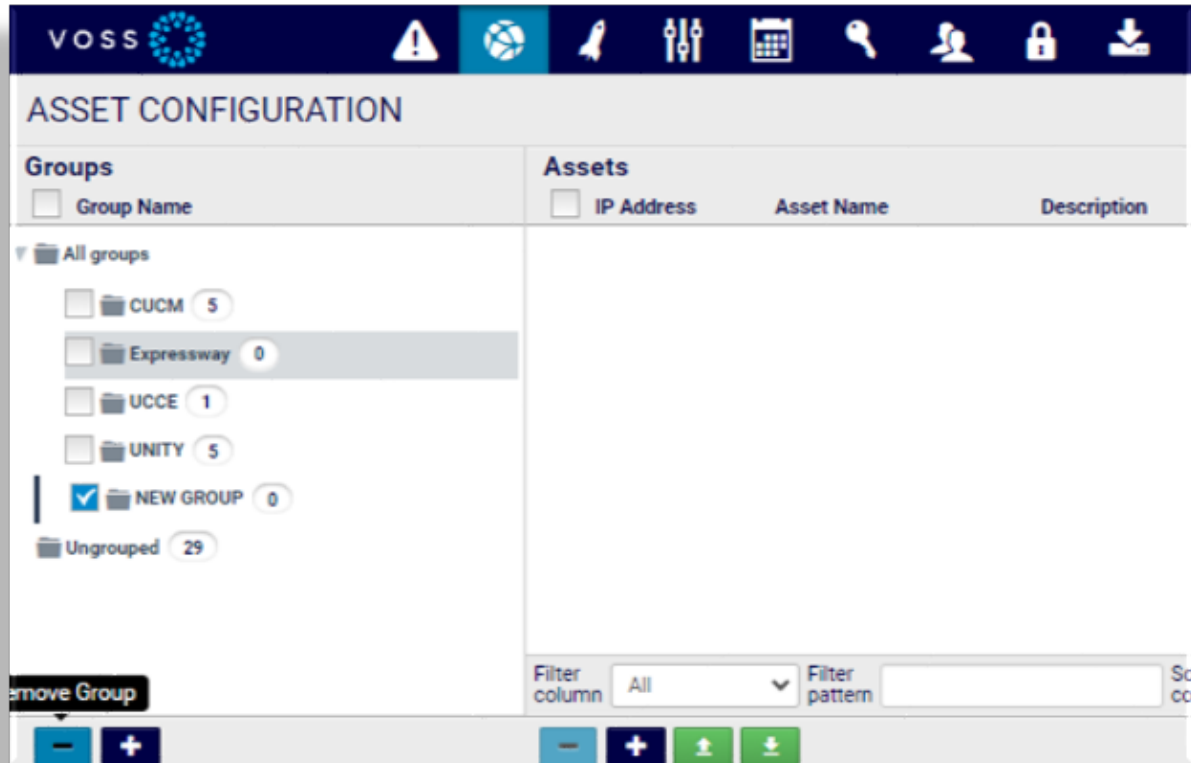

4.3.6. Assign a Probe to an Asset

A probe is a script or set of commands that are saved in the system and can be used to gather data, to issue commands to systems, and to auto repair or send data.

Assigning a probe to an asset is typically done to retrieve data from that asset. Commands such as an SNMP GET or an API call are used to retrieve data from a particular asset.

To assign a probe to an asset:

1. On the **Asset Configuration** tab, select the relevant asset group to display its assets.
2. In the **Assets** panel, select the relevant asset in the group that the probe will run against, then click the **Wrench** icon for the asset to open the **Monitor Profile** screen, where you can add a monitor profile to the asset.
3. On the **Monitor Profile** screen, view available saved probes.
4. From the **Probe Group** pane, select and then drag the probe you want to assign to the asset to the **Template/Profiles** panel.



- Click the **Edit** icon (Green Pencil) at the relevant profile entry in the **Template/Profiles** panel (the probe group you dragged to the panel).
- Edit the profile to define the frequency the probe runs, the credentials needed for the probe to run, the schedule for the probe to run. You can also choose to start it immediately.


Note: For SP25, the frequency for Polycom devices is set at 5 minutes.

- Click **Update** to save your changes and to return to the **Asset Configuration** tab.

Note: In order to configure performance monitor probes for CUCM publishers and their related subscribers, the publisher IP address is used to create a probe with that **Cucm IP Address** value.


Each related subscriber is then created as an asset and this probe is attached to each asset.

Refer to the diagram below:

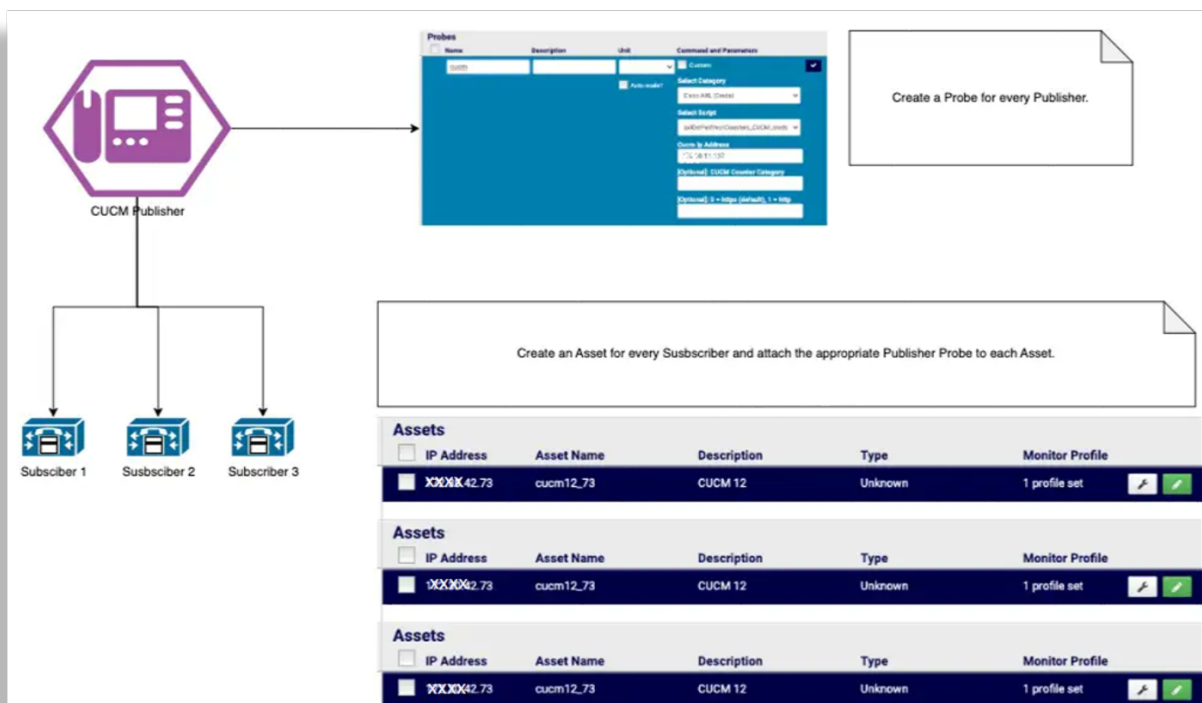

4.3.7. Bulk Assign Probes to an Asset

1. In the Arbitrator **System Configuration** Gui, select the **Probes** icon to open the **PROBE CONFIGURATION** tab.

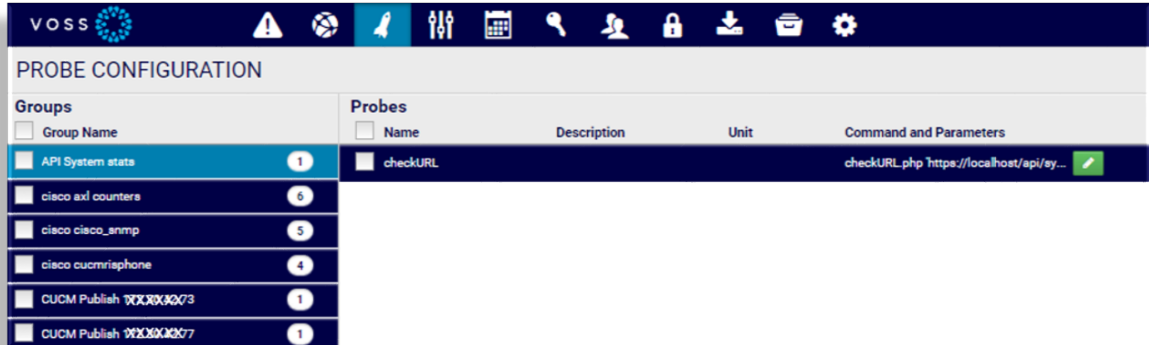

2. Click the Globe icon at the bottom of the **Groups** panel to open the **ASSIGN PROBES TO ASSETS** page.
3. From the **Probe Group** drop-down in the **Configure** panel, select a probe group.
4. From the **Assets** panel, expand the tree and select the checkbox for each asset where you want to assign the selected probe group.

Note: A green check mark adjacent to any asset indicates an existing assignment.

5. In the **Configure** panel, at **Create Profile**, configure frequency and credentials.
6. Click **Save** to assign the probe to all the assets you selected.

4.3.8. Assign a Customer to an Asset

Arbitrator ships with multi-tenancy, which allows different customers to see correlated or collected results of only their data.

Within the configuration of assets, you can assign each asset to a specific customer.

To assign a customer to an asset:

1. On the **Asset Configuration** tab, click the relevant asset group to display its assets.
2. In the **Assets** panel, click the Edit icon (pencil) for the relevant asset to open its configuration screen.
3. On the **Properties** tab, click the down-pointing arrow at the **Customer** drop-down to view available customers.
4. Select the customer that the asset belongs to, then click the Blue Check Mark icon at the top right of the panel to update the configuration.

5. Click **Save**.


The screenshot shows the Voss Asset Configuration interface. On the left, a 'Groups' sidebar lists 'All groups', 'CUCM' (5), 'Expressway' (0), 'UCCE' (1), 'UNITY' (5), and 'Ungrouped' (29). The main 'Assets' panel displays a table with columns: IP Address, Asset Name, Description, Type, and Monitor Profile. One asset is listed with IP Address 172.17.1.42, Asset Name CUCM-172.17.1.42, Description, Type Unknown, and Monitor Profile 1 profile set. Below the table, the 'Properties' tab is active, showing a form for the selected asset. The 'Enabled' checkbox is checked. The 'Maintenance Mode' checkbox is also checked. The 'IP Address' field contains 172.17.1.42. The 'Asset Name' field contains CUCM-172.17.1.42. The 'Description' field is empty. The 'Host Name' field is empty. The 'Type' dropdown is set to Unknown. The 'Address' field is empty. The 'External URL' field is empty. The 'Model' field is empty. The 'Version' field is empty. The 'MAC Address' field is empty. The 'Alias' field is empty. The 'Manufacturer' field is empty. The 'Time Zone' dropdown is set to UTC. The 'Customer' dropdown is set to Customer1. The 'Site' dropdown is empty. At the bottom, there is a filter and sort section with 'Filter column' set to All, 'Filter pattern' empty, 'Sort column' set to IP Address, and a pagination bar showing 'Displaying 1 - 5 of 5 assets'.

4.3.9. Place an Asset in Maintenance Mode

Arbitrator allows any asset to be placed into maintenance mode. Placing an asset in maintenance mode stops Arbitrator from responding with alerts until the asset is removed from maintenance mode. Data is still collected, but no alerts are sent when an asset is in maintenance mode.

1. On the **Asset Configuration** tab, select the asset group to display its assets.
2. Select the asset you wish to place into maintenance mode.
3. Click the Pencil icon for the selected asset to open its configuration screen.
4. On the **Properties** tab, select the **Maintenance Mode** checkbox, then select the Blue Check Mark at the top right of the panel to update the configuration.
5. Click **Save** to save the maintenance mode settings.

Note: You can filter the **Assets** panel to display any assets in maintenance mode by selecting **Maintenance** from the **Filter column** drop-down at the bottom of the **Assets** panel.

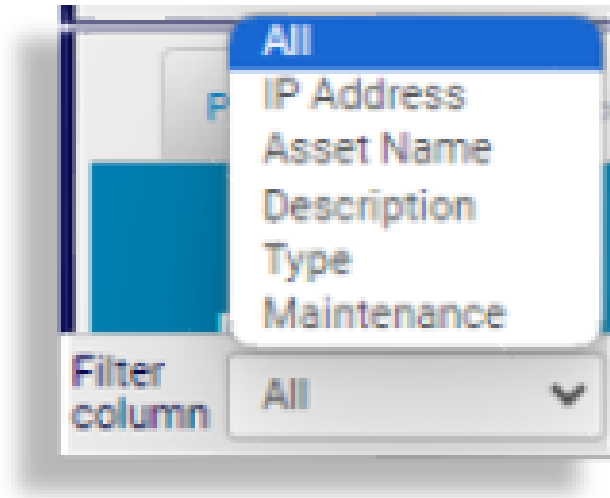

4.3.10. Export and Import Assets

On the **ASSET CONFIGURATION** tab you can export and import an asset that you exported from another system.


- When selecting asset groups, all assets belonging to those groups are selected (selecting individual assets will not take effect).
- If the **Group Name** checkbox is selected, all assets are included - both **All groups** and **Ungrouped**.

Export Assets

1. On the **Asset Configuration** tab, select a group to display its assets, and select relevant assets for the group. Alternatively, select **Group Name** at the top of the **Groups** pane to select all assets in all groups.
2. Click the **Export Assets** button (green down arrow at the bottom of the **Assets** panel) to launch the **Export CSV** dialog.
3. Fill out a CSV filename. You won't need to fill out the file extension, .csv.
4. Click **Export** to create the export file, then view progress until the **Export finished** dialog displays.
5. Click **Download**. The CSV file is saved to a download location you choose.

Import Assets

1. On the **Asset Configuration** tab, click the **Import Assets** button (green up arrow at the bottom of the **Assets** panel) to launch the **Import Assets** dialog.
2. Click **Choose File**, then browse to an exported (and optionally modified) CSV file on your local computer.

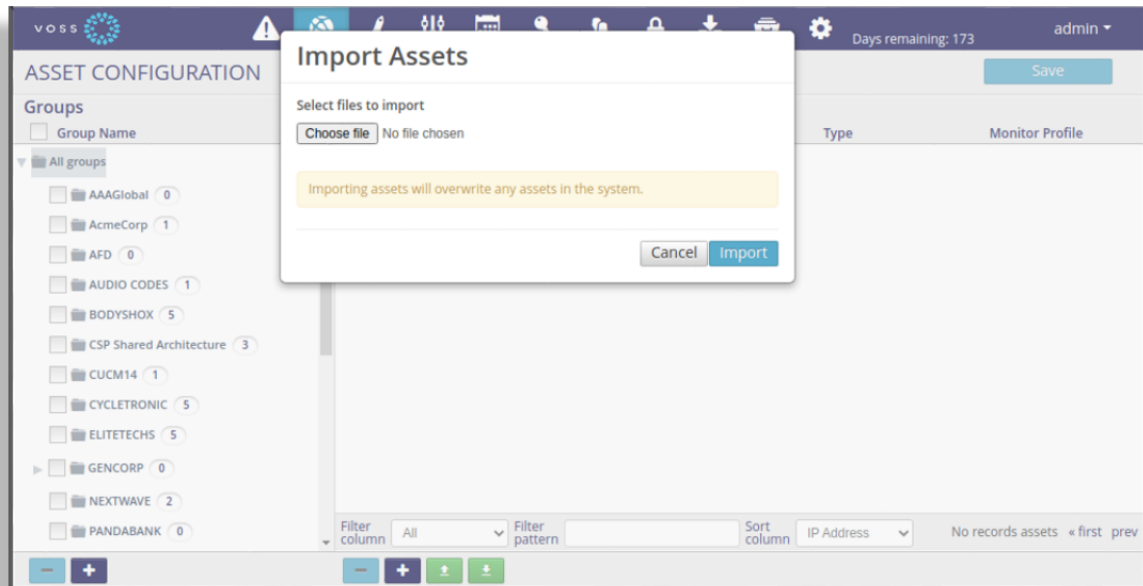

3. Click **Import**.

Next steps

- Assign probes to the imported assets - see *Assign a Probe to an Asset* in this guide.

Asset CSV Format

The following columns are in an exported CSV file:

```
"Asset Name",Description,"IP Address","MAC Address",Vendor,
Model,Version,"Host Name",Alias,"Asset Group Name",
"Type of Device(see below)","Device's Timezone",Comments,
"Physical Address","Customer Name","Site Name","Row Action"
```

Note:

- Mandatory fields are: Asset Name, IP Address.
- The "Row Action" column is used when importing and if it contains "delete", then the row will be deleted upon import.
- Row uniqueness is the combination of: "IP Address", "Customer Name", "Site Name". If an asset found, its data will be updated. If not, new asset will be inserted under the asset group indicated in column "Asset Group Name".
- The column "Asset Group Name" has to be unique. If an asset group is found, its data will be updated. If not, a new asset group will be inserted.
- There are 2 entries in the import CSV:
 - An asset with data in all columns. Most important is the very first column "Asset Name".

- An interface is a property of an asset. An interface only has data in from column “Description” to “Host Name”. Most important is that it does not have data on the very first column “Asset Name”. All CSV interface row(s) will be under an asset just right above it(them).

4.4. Probe Configuration

4.4.1. Overview

The Probes Configuration panel allows you to assign a group of scripts to an asset that can run on a set interval. These scripts will allow for data collection from many types of devices. The protocols can be API, SNMP or custom CLI scripts. SNMP v3 is also supported.

The return data from the Probes can then be injected into the system for correlation or can be stored in the database to allow for analysis on the Dashboard/Reporting server.


For PRI and SIP Trunk probes for Cisco Voice Gateways, reference:

Arbitrator Cisco PRI and SIP Probe Configuration

4.4.2. Add a Probe Group

To create a new Probe Group:


1. Click the Probe icon from the Menu bar.
2. Click the “Plus” icon within the Groups pane in the bottom left corner.
3. Enter the “Group” name and press Enter.
4. Click the “Save” icon in the upper right corner.

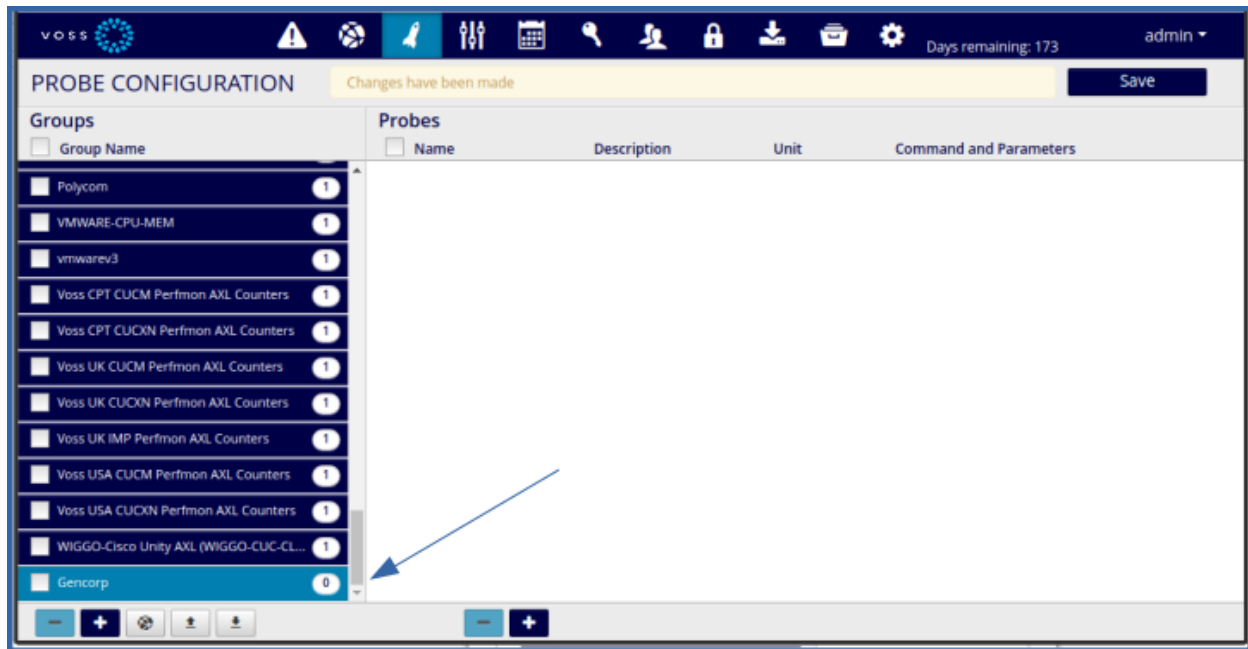

4.4.3. Clone a Probe Group

To clone an existing Probe Group:


1. Click the Probe icon from the Menu bar.
2. Select a Probe group to clone from.
3. Click the “C” icon within the Groups pane in the bottom left corner.
4. The cloned “Group” name shows: *<source group name> clone*. Modify this name to the required name.
5. Click the “Save” icon to save the added Probe.
6. The probes contained in this new group can also be modified. Refer to the steps to add, clone and modify probes.

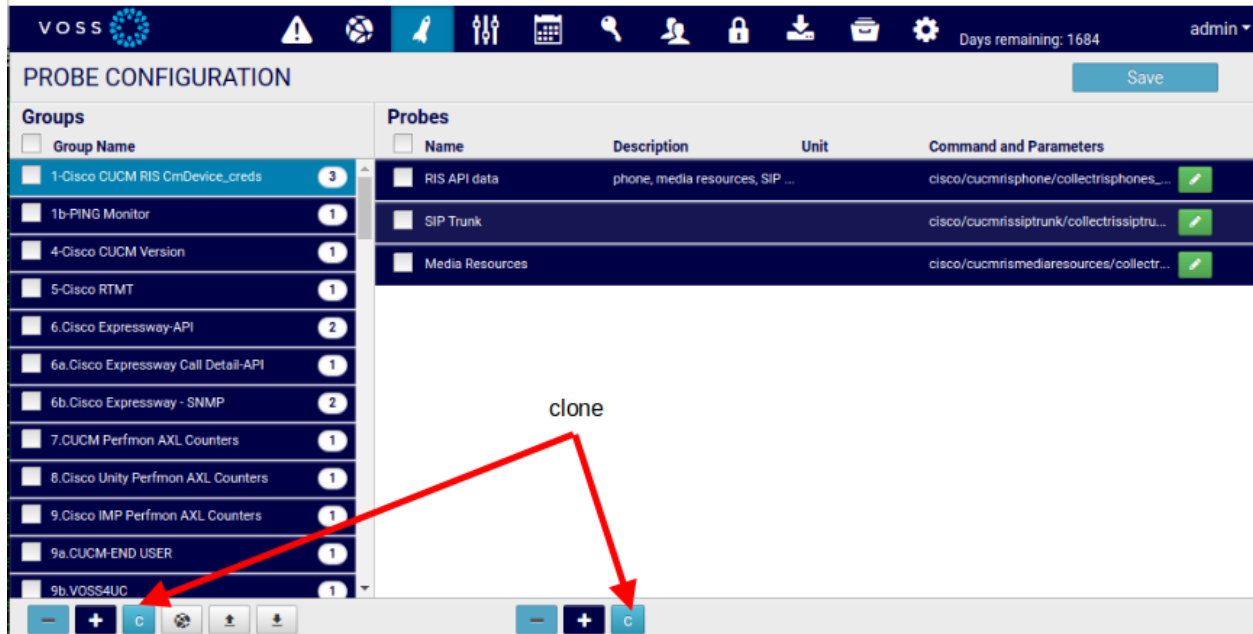

4.4.4. Create a Probe

To create a new Probe:

1. Click the group in which you wish to create a new Probe.
2. Click the Plus icon within the Probes panel.
3. Enter the name and description of the Probe.
4. De-select the check icon from the field titled "Custom". This field is utilized when putting a custom probe in place versus utilizing the ones within the system.
5. Select the Probe Category from the drop-down list. This will populate the scripts available in that category within the drop-down menu titled "Select Script".
6. Select a script from the script drop-down list.
7. Enter any additional information required by the selected script, such as the hostname, IP, etc.
8. Click the "Check" icon to close the probe in the far right of the Probe panel.
9. Click the "Save" icon to save the added Probe.

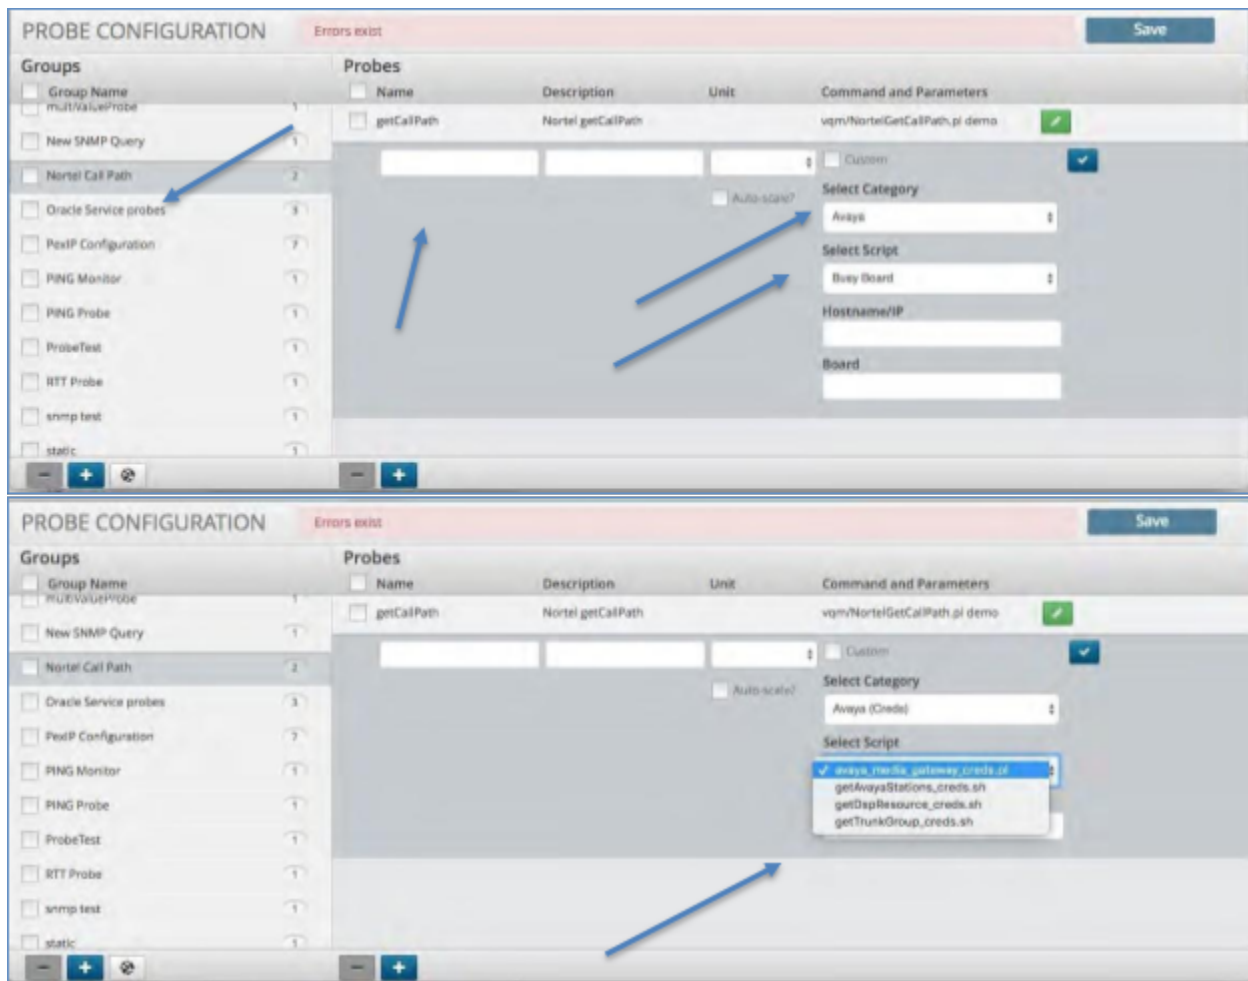

4.4.5. Clone a Probe

Since devices such as CUCM and Unity Connection require dedicated probes, it is useful to clone (create a copy) and modify an existing probe for this purpose.

To clone a probe:

1. Click the probe from which you wish to clone.

Note: Insights also provides a list of templates that can be cloned for the specific purpose.

2. Click the **Clone probe** icon (C) at the bottom of the **Probes** panel.
3. The clone is created, displaying with naming format, *<source probe name> clone*. Modify this name to the required name, and update any other required properties.


Note: For a CUCM probe, this typically includes **Cucm Ip Address**.

4. Click the **Done** icon (blue check mark to the right of the clone's properties panel).
5. Click **Save** to add the new probe created from the clone.

4.4.6. Create a Custom Probe

To create a new Probe:


1. Click the group in which you wish to create a new Probe.
2. Click the Plus icon within the Probes panel.
3. Enter the name and description of the Probe.
4. Select and click the check icon from the field titled “Custom”. This field is utilized when putting a custom probe in place versus utilizing the ones within the system.
5. Enter the path and script that you wish to run.
6. Click the “Check” icon to close the probe in the far right of the Probe panel.
7. Click the “Save” icon to save the added Probe.

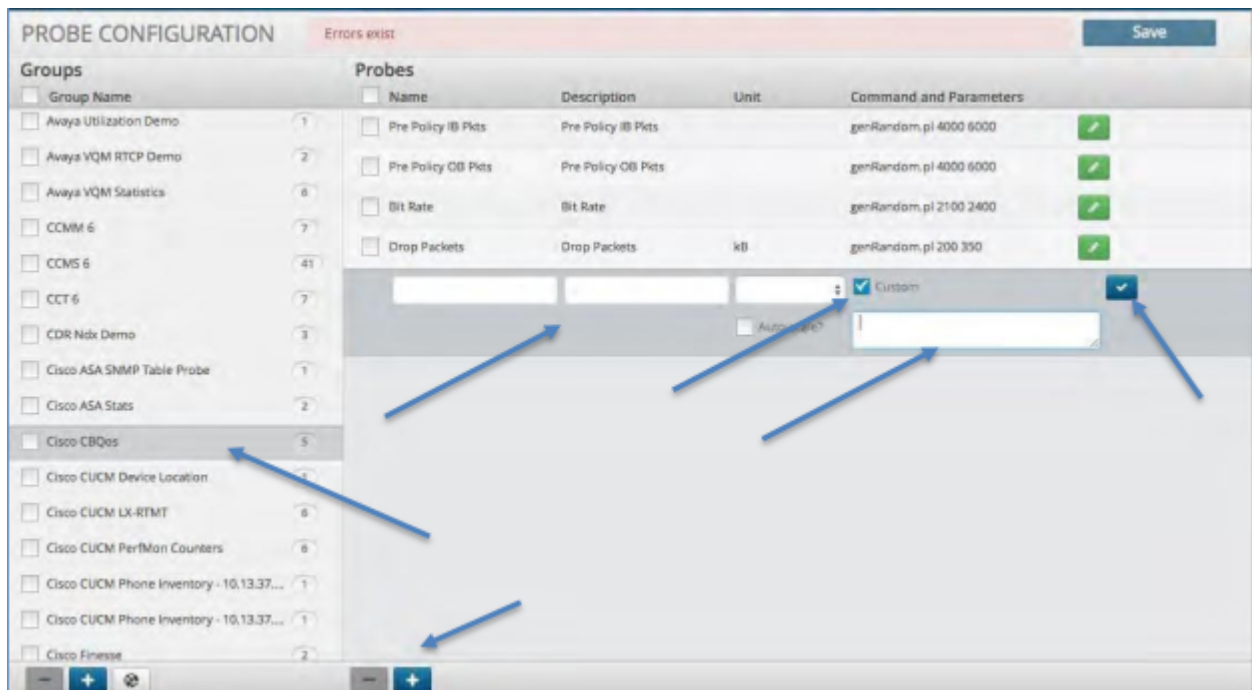

4.4.7. Delete a Probe Group

To delete a Probe Group:


1. Click the check box next to the group name you wish to delete.
2. Click the Minus icon within the Probe Group panel in the bottom left.
3. Click the “Save” icon to save the changes.

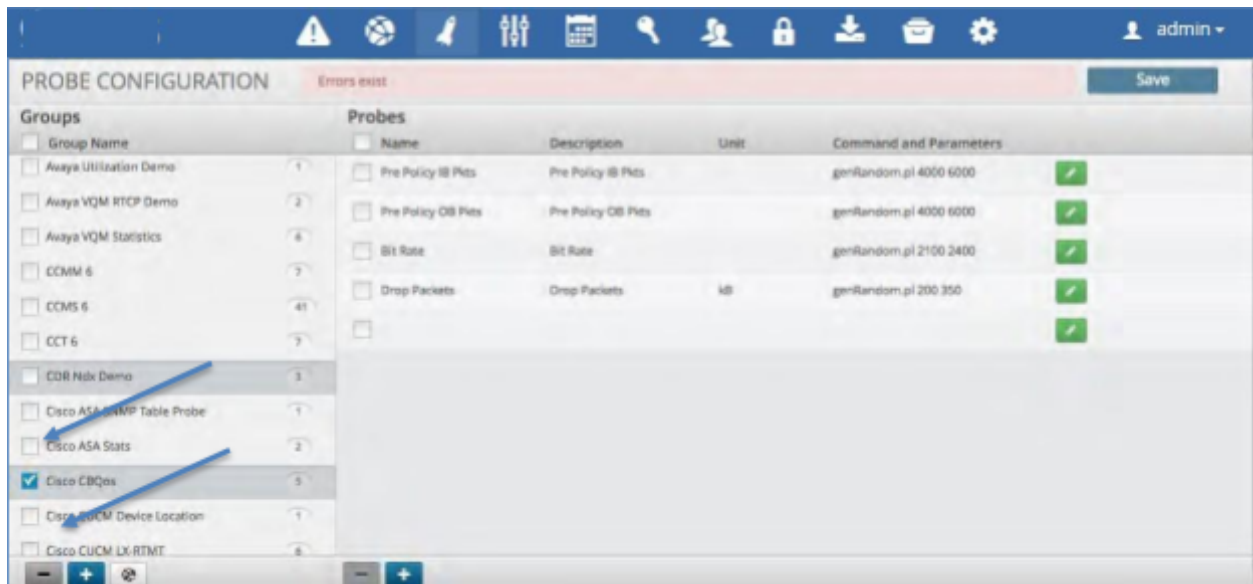

4.4.8. Delete a Probe

To delete a Probe:

1. Click the check box next to the Probe name you wish to delete.
2. Click the Minus icon within the Probe panel in the bottom right.
3. Click the “Save” icon to save the changes.

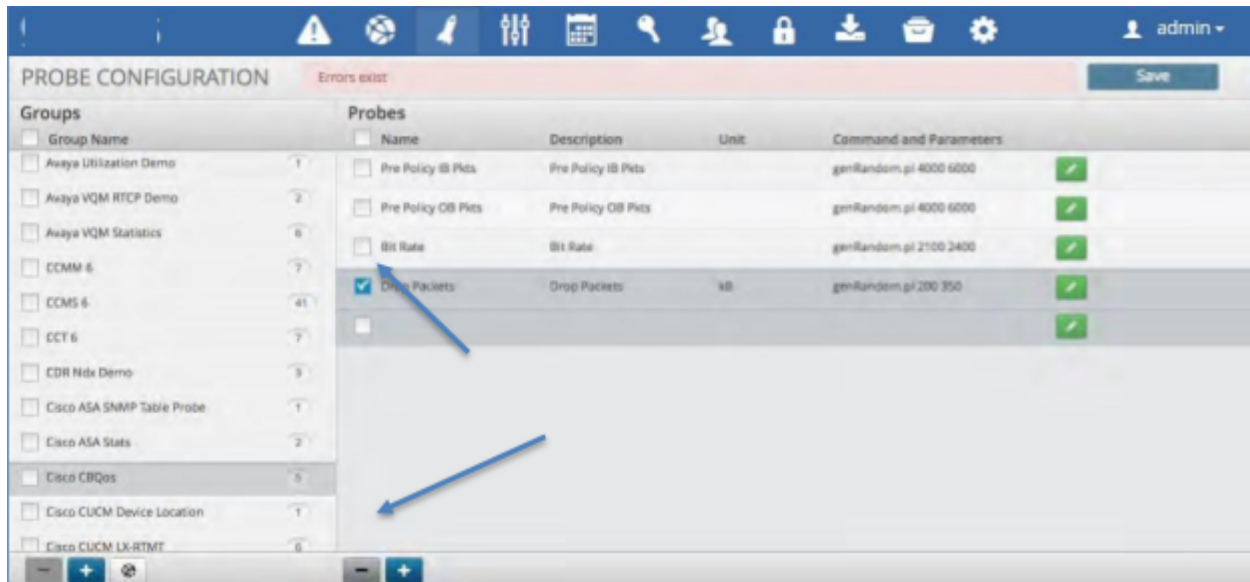

4.4.9. Export and Import a Profile

Important: This import/export is special. Since we do not have a Profile main screen, the import/export profiles are in Probe Configuration; the same as the legacy push button (right next import/export buttons).

Within the **PROBE CONFIGURATION** section, you can export and import the profiles that you exported from another system.

A new system log table `insights_system_log` has also been added to log user actions and a user can create a dashboard to view these actions.

See the:

Log Search Section in the Dashboard and Reporting Administration Guide.

Export a Profile

1. Click the Down arrow button at the bottom of the **PROBE CONFIGURATION** panel.
Since this is a probe configuration, we cannot select individual profiles, so it will export all profiles in the system.
2. The **Export CSV** dialog opens. Enter a **CSV file name** (You do not have to add the .csv file extension) and click **Export**.
3. The **Export finished** dialog shows when the export file has been created. Click **Download** to save the CSV file to your selected download location.

Import a Profile

1. Click the Up arrow button at the bottom of the **PROBE CONFIGURATION** panel.
2. A pop-up box will appear asking you choose your file.
3. Click the **Choose file** button and select the exported CSV file that you have saved to your computer.
4. Click the **Import** button.


Profile CSV Format

The following columns are in an exported CSV file:

```
"Row Action","Asset Name","IP Address","Customer Name",  
"Site Name","Probe Group Name","Credential 1 Name",  
"Credential 2 Name","Frequency (s)","Enable"
```

Note:

- The "Row Action" column is used when importing and if it contains "delete", then the row will be deleted upon import.
- "Probe Group Name" must be unique.
- Combination: "IP Address","Customer Name","Site Name" must to be unique.
- "Asset Name" is used as a reference of the asset.
- When importing and if an asset and a probe group are found, then a profile will be updated/inserted. If not, nothing to import.

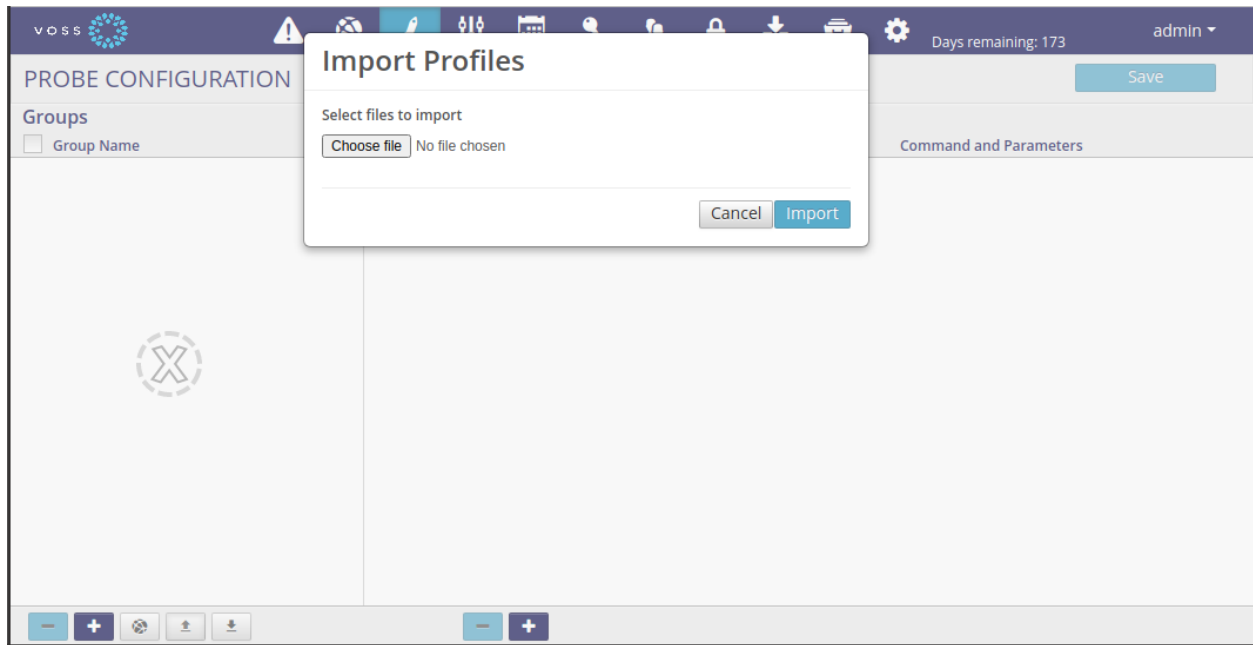

Assign a Probe to an Asset

A probe group assigned to an asset can be modified using a profile CSV file import by specifying the related “Asset Name” and “Probe Group Name” in the CSV file.

For example, consider an asset “Local System” that has 3 profiles:

MONITOR PROFILE > Local System					
Groups		Templates/Profiles			
Probe Group		<input type="checkbox"/> Name	Frequency	Credentials 1 & 2	Enabled
» Cisco CUCM Version	1	<input type="checkbox"/> Local System Stats	1 Minute	None & touy	<input checked="" type="checkbox"/>
» Cisco Expressway	3	<input type="checkbox"/> Test Probe	1 Minute	None & loc	<input checked="" type="checkbox"/>
» Cisco Telepresence API - Call Details	1	<input type="checkbox"/> PING Monitor	1 Minute	ray & loc	<input checked="" type="checkbox"/>

We can assign probe “Cisco CUCM Version” to asset “Local System” as a CSV file import:

Row Action	Asset Name	IP Address	Customer Name	Site Name	Probe Group Name	Credential 1 Name	Credential 2 Name	Frequency (s)	Enable
	Local System	10.13.37.149			Cisco CUCM Version	ray	loc	60	TRUE

After importing, the profile is added to the probe group.

MONITOR PROFILE » Local System

Groups

Probe Group

▶ Cisco CUCM Version

1

▶ Cisco Expressway

3

▶ Cisco Telepresence API - Call Details

1

Templates/Profiles

☐ Name

Frequency

Credentials 1 & 2

Enabled

☐ Local System Stats

1 Minute

None & touy

☒

☐ Test Probe

1 Minute

None & loc

☒

☐ PING Monitor

1 Minute

ray & loc

☒

☐ Cisco CUCM Version

1 Minute

ray & loc

☒

4.5. Controls


4.5.1. Overview

The **Controls** configuration panel allows you to define a script or routine that can be executed by a response procedure or attached as a probe. These controls can be passed variables extracted from a correlation rule. The resulting return of the scripts execution can be mapped to the database, used as an action or can be injected back into the system to be correlated against another element.

4.5.2. Add or delete a control

To add a new control or delete an existing control:

1. Log in to Arbitrator, then click the toolbar **Wrench** icon to launch Arbitrator's **System Configuration** GUI.
2. Select the **Controls** icon to open the **Controls** configuration panel.

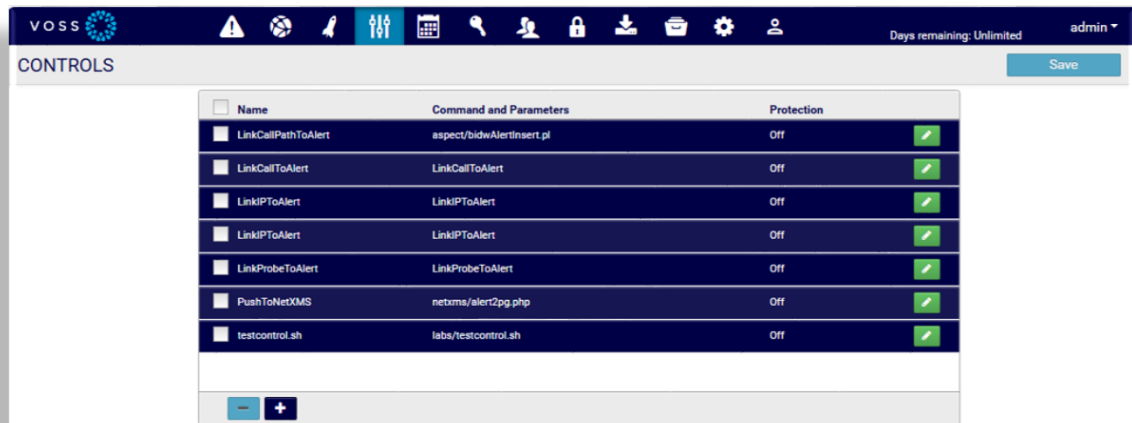


3. Are you adding a new control or deleting an existing control?

- **Adding a new control.** Click the Plus icon to add a new control. Go to the next step.
- **Deleting an existing control.** Select the checkbox adjacent to the control name; then, click the **Minus** icon at the bottom of the panel. The control is removed.

4. Fill out a name for the new control.

5. Is this a system or custom control?

- **Custom control.** Select the **Custom** checkbox. Fill out a command and parameters (the script to execute).

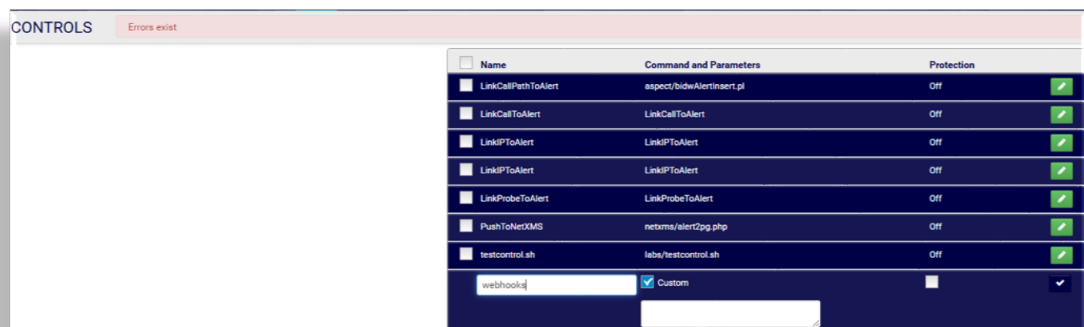

- **System control.** Clear the **Custom** checkbox. From **Select Category**, select a control category to populate the **Select Script** drop-down, then select a script, and fill out any additional information required for the selected script (additional fields may display).

6. When you're done, select the checkmark icon to add your changes, then click **Save** to add the new control.


4.5.3. Send alerts to a 3rd party system using a webhook

This procedure adds a control to send JSON format alerts to a 3rd party system using a webhook.

Note: This control specifies a script to push alert information via a curl command (POST) that includes the URL of the system that will receive the alert.

1. In Arbitrator, add a control for the alert. See [Add or delete a control](#).
 - Add a name for the alert.
 - Ensure the **Custom** checkbox is selected.
 - In the **Command and Parameters** field, fill out the script name, `webhooks/alert_webhooks.php`, then fill out the URL of the 3rd party system, for example, `webhooks/alert_webhooks.php https://10.45.0.55/log/events/webhooks`.

Note: When an alert is generated, the destination specified by this URL must be able to receive the alert data from Arbitrator via a curl POST.

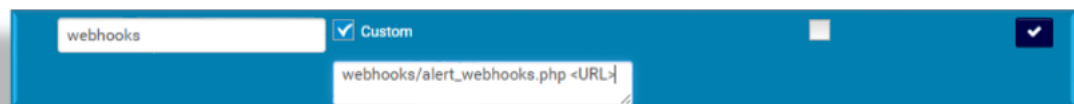

- Click the checkmark to the right of the fields you're working with to mark your configuration as done, then click **Save** to add the control.
2. Assign the control to a response procedure. See [Response Procedure Configuration](#).
 - In Arbitrator, go to **Response Procedure Configuration**.
 - Create the webhook response procedure and select it.
 - In the **Response Procedure Details** pane, select **Alert**.
 - Click **+ Control** to assign the webhook to the alert control.
 - Add credentials for the receiver (the destination specified in the URL for the control).
 3. Assign the alert control to a policy. See [Policy Configuration](#).

What happens when an alert is triggered?

When a policy associated with the webhook alert is triggered, it triggers the webhook alert. The alert is sent to the receiving system as a POST. The destination system receives a JSON format alert message.

The alert payload message includes the following details:

- Status code
- The policy
- The rule
- The reference ID
- A timestamp


```

04/28/25 10:35:24 AM <13>Apr 28 2025 15:35:24 127.0.0.1: {\"hdr\": {\"txthdr\": {\"txthdr_local_address\": \"127.0.0.1\", \"txthdr_local_port\": 1514, \"txthdr_method\": \"tcp_syslog\", \"txthdr_msg_id\": \"\", \"txthdr_source_address\": \"127.0.0.1\", \"txthdr_source_port\": 27985, \"txthdr_tag\": \"tcp_syslog\", \"txthdr_time_epoch\": 1745854524}, \"txthdr_log\": {\"txthdr_log_address\": \"10.13.37.80\", \"txthdr_log_port\": 4431, \"txthdr_log_source_address\": \"10.13.37.87\", \"txthdr_log_source_port\": 39088, \"txthdr_log_content_type\": \"application/json\", \"txthdr_log_request_uri\": \"\", \"txthdr_log_request_method\": \"POST\", \"txthdr_log_request_time\": \"1745854524\", \"txthdr_log_time_epoch\": 1745854524, \"txthdr_log_tag\": \"webhooks\", \"txthdr_log_method\": \"webhooks\", \"txthdr_log_event\": {\"tags\": {\"webhooks\": {\"insights_alert\": {\"type\": \"Voss Insights Alert\", \"severity\": \"Critical\", \"timestamp_epoch\": 1745854524, \"timestamp\": \"2025-04-28 15:35:24\", \"alert_message\": \"Critical Alert : ipaddress (10.13.37.87)\", \"event_policy\": \"Demo2\", \"event_rule\": \"Critical Alert\", \"event_id\": \"12345-0100001-00-01-456-174245\", \"policy_description\": \"\"}}}}}}

```

4.6. Response Procedure Configuration

4.6.1. Overview

The Response Procedure configuration panel allows you to define an automated response to a correlated event. Each Response Procedure can be assigned to one or more Correlation Rules while also containing and/or executing one or more of the following responses:

Action	Description
Alert	Visually show the alert in the alert views within the User Interface.
Email	An email will be sent to the recipients address and contain the Policy and Correlation Rule details that are triggered. Additionally, any data that is extracted from the correlated event will be included.
Control	Executes the selected Control Script as a result of the correlated event. Data from the correlated event will be passed to the script as well. These scripts can be utilized as run-book and/or automated remediation.
Forward	The forward allows the correlated event to be forwarded to another Arbitrator Correlation platform.

From release 24.2, alert details can be sent to platforms like Slack, MS Teams and Webex Teams - providing improved visibility and allowing instant collaboration.

4.6.2. Create a Response Procedure


To create a response procedure:

1. Click the "Calendar" icon at the top of the Configuration panel.
2. Click the plus icon in the bottom left of the Response Procedure name panel. A box will open up where you can fill in the name of your response procedure.
3. The panel to the right is broken into two sections:
 - a. Response Procedure Details – This is the section that you select to add the elements defined in the table above.
 - b. Do Not Run Windows – Allows you to define certain date and times that you don't want the system to take the actions within the Response Procedure.

4.6.3. Assign an Alert to a Response Procedure

To assign the Alert function to a response procedure:

1. Click the Alert check box in the top left of the Response Procedure Details panel.
2. If this system you are configuring is intended to be the redundant platform then click the Disable on Failover box to allow all data to flow but no actions to take place.

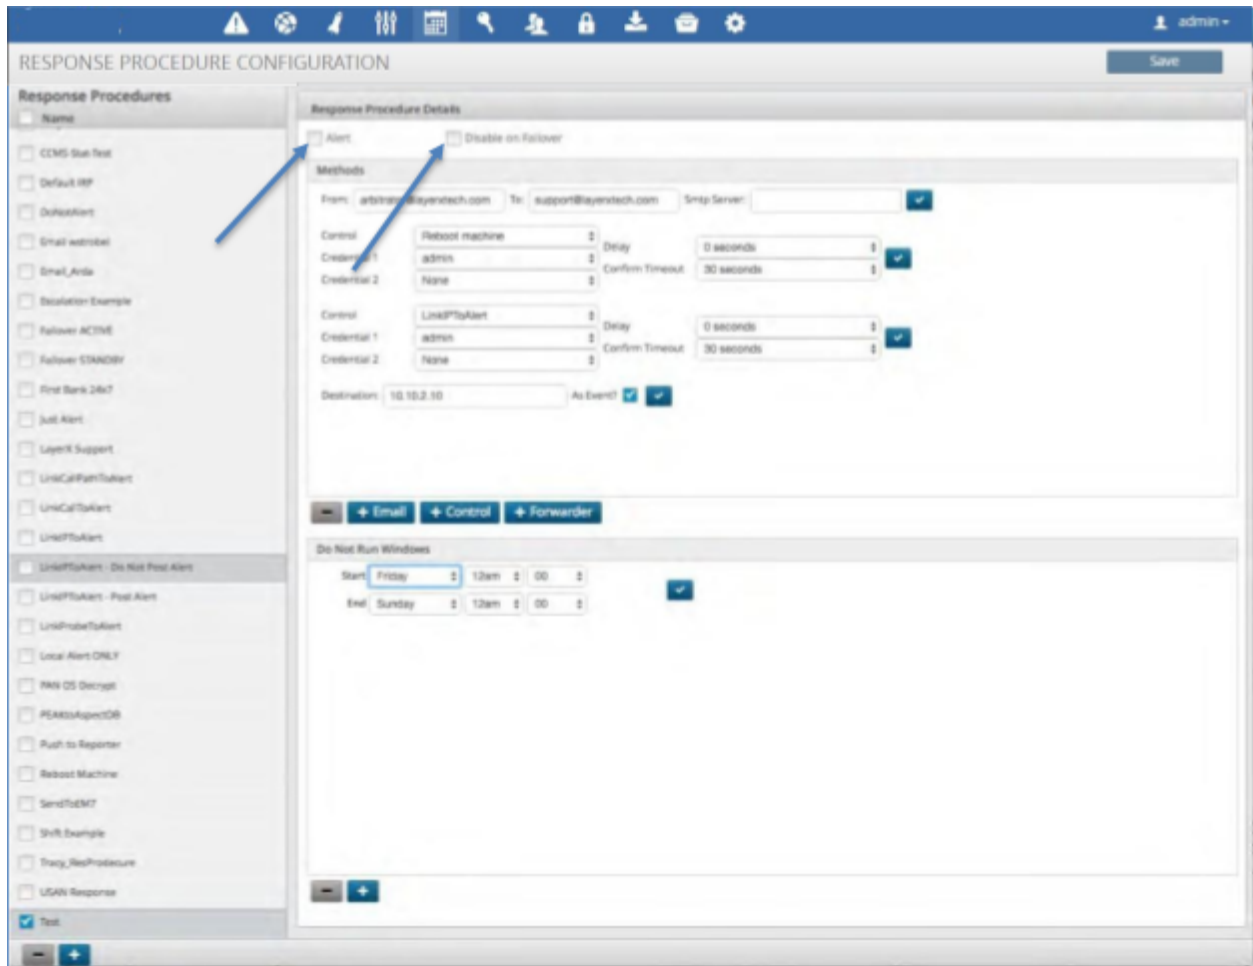

4.6.4. Delete a Response Procedure

To delete a Response Procedure:

1. Click the box next to the Response Procedure name.
2. Click the minus icon at the bottom of the Response Procedure name panel.
3. Click the Save icon to save your changes.

RESPONSE PROCEDURE CONFIGURATION Save

Response Procedures

- ☐ Name
- ☐ Avaya Fix MED-GTWY
- ☐ CCMS-Stat-Test
- ☐ Default IRP
- ☐ DoNotAlert
- ☐ Email wstrolbel
- ☐ Email_Artis
- ☒ Escalation Example
- ☐ Fallover ACTIVE
- ☐ Fallover STANDBY
- ☐ First Bank 24x7
- ☐ Just Alert
- ☐ LayerX Support
- ☐ LinkIPPathToAlert

Response Procedure Details

☒ Alert ☒ Disable on Fallover

Methods

☐ Email From: arbitrator@layerstech.com To: tier1@company.com ✓

- + Email + Control + Forwarder

Do Not Run Windows

- +

4.6.5. Enable ServiceNow Integration

Name	Command and Parameters	Protection	
<input type="checkbox"/> LinkIPToAlert	LinkIPToAlert	Off	✓
<input type="checkbox"/> ReporterPush Reading	ReporterPush 172.30.15.121:65515 true	Off	✓
<input type="checkbox"/> ReporterPush-GC	ReporterPush 172.25.87.6:65515 true	Off	✓
<input type="checkbox"/> VpnSyslog	vpnSyslogAlert.sh	Off	✓
<input type="checkbox"/> Custom	<div> <div></div> <div>Select Category</div> <div>ServiceNow</div> </div> <div> <div>Select Script</div> <div>PushToServiceNow</div> </div> <div>Service Now IP Address / Hostname</div> <div></div> <div>Service Now Username</div> <div></div> <div>Service Now Password</div> <div></div>		✓

1. Navigate to Configuration (cog icon) on the arbitrator.
2. Navigate to Control and click + to enter a new control.
3. In the **Name** text box enter ServiceNow.
4. Uncheck **Custom**.
5. Fill in the following details:
 - **Select Category:** ServiceNow
 - **Select Script:** PushToServiceNow
 - **Service Now IP Address / Hostname:**
 - **Service Now Username:**
 - **Service Now Password:**
6. Tick the blue tick box.
7. Click the **Save**.
8. Navigate to the Response Procedure Configuration menu.
9. Apply the control to the required IRP, such as the default IRP.

ServiceNow One Way Incident Integration

As the Correlation Platform detects new incidents a response procedure is defined to send the event into ServiceNow utilizing their API. Incident Response Procedures (IRP) are defined on an incident basis. Thus you can choose which events need to be sent to ServiceNow based on severity, type, threshold, or others. When the IRP kicks off it will create an event, insert the following fields and send it to ServiceNow:

- short description: Arbitrator Policy, Rule and Reference_Id
- description: full message from arbitrator
- severity: severity
- urgency: based on severity
- impact: based on severity
- category: software
- comments: full message from Arbitrator

ServiceNow Requirements

- ServiceNow URL
- ServiceNow User with SOAP API rights to insert Incidents
- ServiceNow Password

Arbitrator Correlation Configuration

- Version Required: 4.0001-15b
- Script: servicenow/PushToServiceNow.pl
- parameters:
 - URL_TO_SERVICENOW_INSTANCE
 - USERNAME
 - PASSWORD

ServiceNow images:

The screenshot displays the ServiceNow 'Incident' configuration page for incident INC0010023. The left sidebar contains navigation links such as 'My Assets', 'My Notification Preferences', 'Guided Setup', 'Service Desk', 'Incident', 'Create New', 'Assigned to me', 'Open', 'Open - Unassigned', 'Resolved', 'All', 'Overview', 'Critical Incidents Map', 'Problem', 'Change', 'Configuration', 'Password Reset', 'Service Catalog', and 'Item Designer'.

The main content area shows the incident details and configuration options. The 'Short description' field contains the text: 'LXTALERT: ARB_REFERENCEID=20000-01009001-00-01-7134-14 ARB_POLICY_MODULE=MultiTest ARB_CORRELATION_RULE=Some Rule'. Below this, there are sections for 'Automatic Replies (Out Of Office)', 'Firewall Rule Change', and 'About Windows 10'. The 'Notes' tab is active, showing a 'Watch list' and 'Work notes list'. The 'Activity' section displays a list of recent actions, including a note from 'System Administrator' dated 2016-12-13 12:52:14, which includes details about the incident state and priority.

Incident	Number	Opened	Short description	Caller	Priority	State	Category	Assignment group	Assigned to
<input type="checkbox"/>	INC0020001	2016-08-10 09:14:29	test	System Administrator	3 - Moderate	New	Inquiry / Help		
<input type="checkbox"/>	INC0010023	2016-12-13 12:52:14	LXTALERT: ARB_REFERENCEID=20000-01009001-00-01-7134-14 ARB_POLICY_MODULE=MultiTest ARB_CORRELATION_RULE=Some Rule		1 - Critical	New	Software		
<input type="checkbox"/>	INC0010022	2016-12-13 12:52:11	LXTALERT: ARB_REFERENCEID=20000-01009001-00-01-7134-16 ARB_POLICY_MODULE=MultiTest ARB_CORRELATION_RULE=Some Rule Major		2 - High	New	Software		
<input type="checkbox"/>	INC0010021	2016-12-13 12:52:08	LXTALERT: ARB_REFERENCEID=20000-01009001-00-01-7134-19 ARB_POLICY_MODULE=MultiTest ARB_CORRELATION_RULE=Some Rule Info		5 - Planning	New	Software		
<input type="checkbox"/>	INC0010020	2016-12-13 12:52:04	LXTALERT: ARB_REFERENCEID=20000-01009001-00-01-7134-18 ARB_POLICY_MODULE=MultiTest ARB_CORRELATION_RULE=Some Rule Minor		4 - Low	New	Software		

4.7. Credential Configuration

4.7.1. Overview

The Credentials configuration panel allows you to define and store credentials securely. These credentials can be assigned to a Probe or Control to allow for secure access to an asset, ticketing system or script. (See: Asset Configuration, Response Procedure Configuration)

4.7.2. Create a Credential

To create a Credential:

1. Click the “key” icon in the menu bar at the top.
2. Click the plus icon in the bottom left corner.
3. Enter the name to be assigned to the Credential.
4. Enter the Username, Password and Confirm fields.

Note: The text displays as clear text only until the entry saved, whereupon it displays as asterisks (*).

5. Click the blue check box.
6. Click the Save icon to save the credential.

CREDENTIAL CONFIGURATION Errors exist Save

<input type="checkbox"/>	Name	Username	Password	Confirm	
<input type="checkbox"/>	LXTREADONLY	*****	*****	*****	
<input type="checkbox"/>	SiLo Test Cred	*****	*****	*****	
<input type="checkbox"/>	snmp community public	*****	*****	*****	
<input type="checkbox"/>	SNMP RO String	*****	*****	*****	
<input type="checkbox"/>	Tandburg	*****	*****	*****	
<input type="checkbox"/>	UCAXLAPI	*****	*****	*****	
<input type="checkbox"/>	VOSS API	*****	*****	*****	
<input type="checkbox"/>	Windows Agent probe	*****	*****	*****	

4.7.3. Delete a Credential

To delete a Credential:

1. Click the check box to the left of the credential name you wish to delete.
2. Click the minus icon in the bottom left of the screen.
3. Click the Save icon to save your changes.

<input type="checkbox"/> Name	Username	Password	Confirm	
<input type="checkbox"/> LxdAutoGen 1489019854046	*****	*****	*****	
<input type="checkbox"/> LXTREADONLY	*****	*****	*****	
<input type="checkbox"/> Silo Test Cred	*****	*****	*****	
<input type="checkbox"/> snmp community public	*****	*****	*****	
<input type="checkbox"/> SNMP RD String	*****	*****	*****	
<input checked="" type="checkbox"/> Tandburg	*****	*****	*****	
<input type="checkbox"/> UCAXLAPI	*****	*****	*****	
<input type="checkbox"/> VOSS API	*****	*****	*****	
<input type="checkbox"/> Windows Agent probe	*****	*****	*****	

Minus icon: Plus icon:

4.8. Customer Configuration

4.8.1. Overview

To enable multi-tenancy (assets, alerts and data) utilize the customer configuration panel to define a customer and their related locations (sites). Once defined, the Customer field can be applied to an asset and or a user to restrict access to other customers assets, alerts and data.

(See: Asset Configuration, Access Control Configuration).

4.8.2. Create a Customer

To create a Customer:

1. Click the “customer” icon in the menu bar at the top.
2. Click the plus icon in the bottom left corner of the customer panel.
3. Enter the name of the Customer to be added and press Enter.
4. Enter the Username and Password fields.
5. Click the Save icon to in the upper right corner.
6. Proceed to creating a Customer Site.

CUSTOMER CONFIGURATION Save

Customers		Sites	
<input type="checkbox"/> Name		<input type="checkbox"/> Name	
<input type="checkbox"/> Arda Virtual Customer 1	2		
<input type="checkbox"/> Arda Virtual Customer 2	2		
<input type="checkbox"/> Arda Virtual Customer 3	2		
<input type="checkbox"/> LayerX Virtual Customer	1		
<input type="checkbox"/> Silo Customer 1	1		
test			

Minus icon: Plus icon:

4.8.3. Create a Customer Site

To create a site for a Customer:

1. Click the customer to which you wish to add the site.
2. Click the plus icon in the bottom of the site panel.
3. Enter the site name and press Enter.
4. Add additional sites if applicable.
5. Click the Save icon in the upper right corner.

CUSTOMER CONFIGURATION Errors exist Save


Customers		Sites	
<input type="checkbox"/> Name		<input type="checkbox"/> Name	
<input type="checkbox"/> Arda Virtual Customer 1	2		
<input type="checkbox"/> Arda Virtual Customer 2	2		
<input type="checkbox"/> Arda Virtual Customer 3	2		
<input type="checkbox"/> LayerX Virtual Customer	1		
<input type="checkbox"/> Silo Customer 1	1		
<input type="checkbox"/> test	2		

Plus icon:

4.8.4. Delete a Customer

To delete a Customer:


1. Click the check box of the customer you wish to delete.
2. Click the minus icon in the bottom of the site panel.
3. Click the Save icon to in the upper right corner.

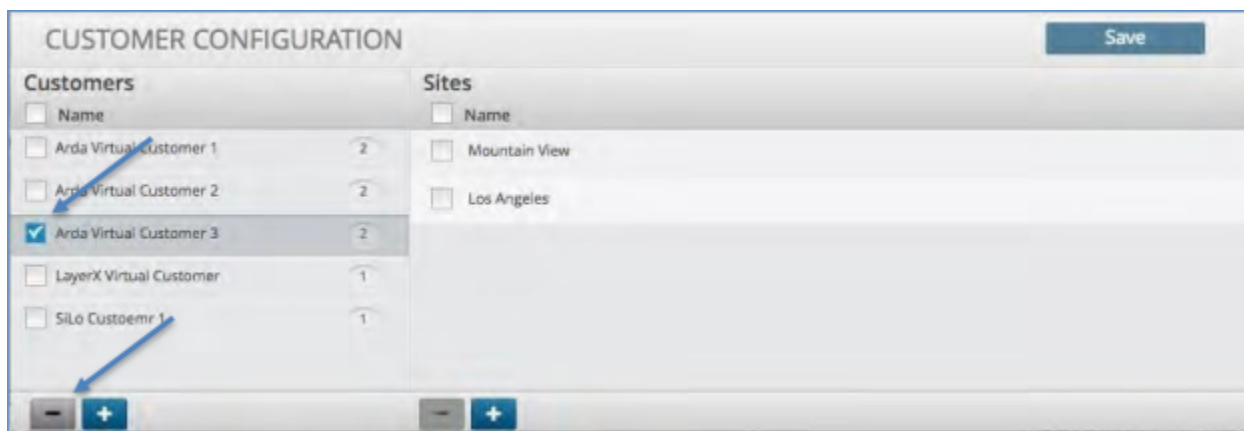

4.8.5. Delete a Customer Site

To delete a site for a Customer:

1. Click the customer in which you wish to delete the site.
2. Click the minus icon in the bottom of the site panel.
3. Click the Save icon to in the upper right corner.

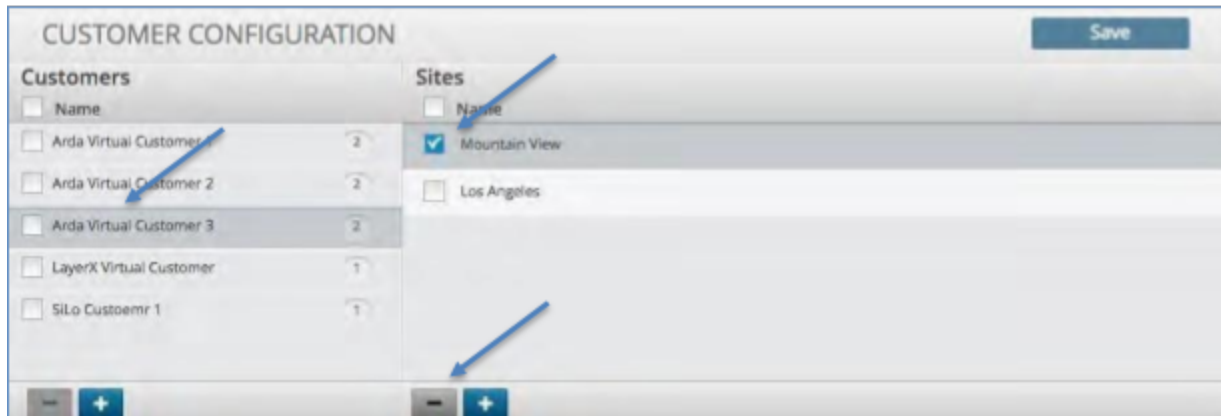

4.9. Access Control

4.9.1. Overview

The Access Controls Configuration panel allows for specific Role Based Access Controls to be enabled. These controls are based on the role of the user and the customer to which they belong.

You can select the following tabs on this page:

- *Permission Groups Tab*
- *Users Tab*
- *Nodes Tab*
- *Realms Tab*
- *Protected Subnets Tab*
- *Password Policy Tab*
- *SAML Tab*


4.9.2. Permission Groups Tab

The first tab under the Access Controls is the Permission Groups. This allows the admin to define a group that has specific capabilities/rights and subsequently add users to these groups.

Create a Permission Group

To create a Permission Group:

1. Click the Permission Group tab under the Access Control panel. A list of defined groups will be displayed.
2. Click the blue plus icon at the bottom of the panel.
3. Fill in the name of the group and select Realm Context drop-down button. This will always be local for a single Arbitrator deployment.
4. Click the Timeout box if you wish this user group to have their session timeout for non- use and require them to log back into the UI.
5. Select each system screen name tab that you wish to grant access to this group. As you select each tab it will turn green indicating that this system screen will be available to this group.
6. Click the blue check icon when complete.
7. Click Save to complete the addition of the group.

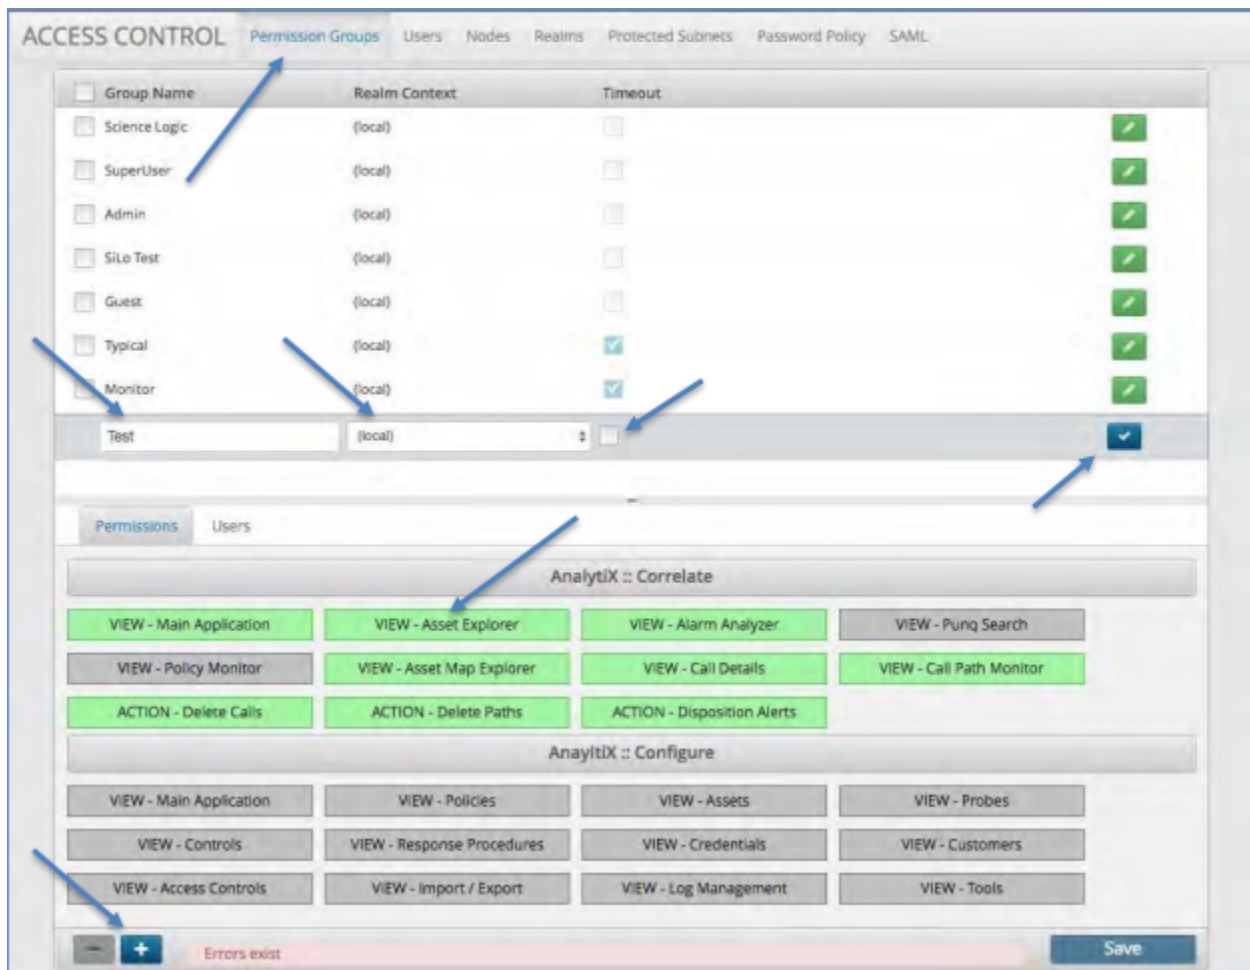


Assign and remove users to/from a permission group

Assign a User to a Permission Group

Note: From release 24.1, a permission group API has been added for the new `voss_agent_api_user`. This group has no permissions. Refer to the [Users Tab](#) for details on the new user in this group.

1. Click User next to the Permission tab. A list of All Users and Users in Groups will be displayed.
2. Click the Group to which you wish to add a User.
3. Drag the desired user(s) from the “All Users” section to the drop zone under “Users in Group”.
4. To remove a User from a Permission Group simply drag the user from the “Users in Group” section over to the “All Users” section
5. Click Save to complete the action.

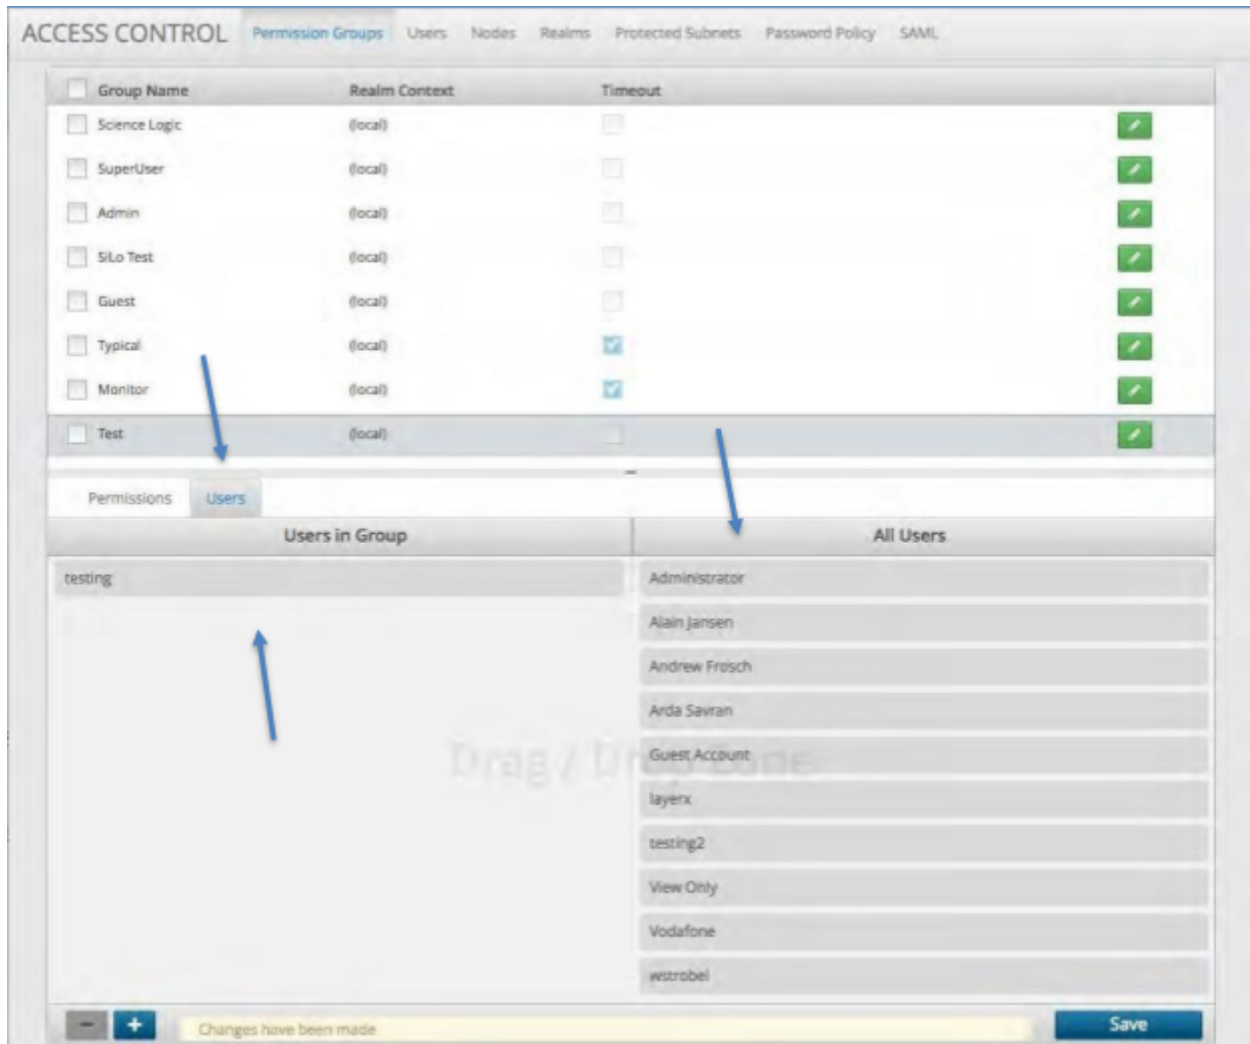

4.9.3. Users Tab

The Users tab allows you to create a new user or modify an existing one. The users can be set up as “Super Users” or assigned roles in the permission groups. Once the user is added and saved then they will be available to add to the Permission Groups per the last section.


Note: From release 24.1, a new user `voss_agent_api_user` has been added that is specifically used by the VOSS Insights Forwarder - an agent that collects statistics such as latency and response times on various cloud endpoints, along with system CPU statistics, which is sent by means of the API back to the Arbitrator (this user is restricted to these agent routes). The user has no permissions and is the single member of the new API permission group that similarly has no permissions.

In order for this user is to be used, the user password needs to be updated after upgrade, either by:

- Editing the user on the **Users** form.

or

- Using the administrator console menu: **Administration > Change Passwords.**

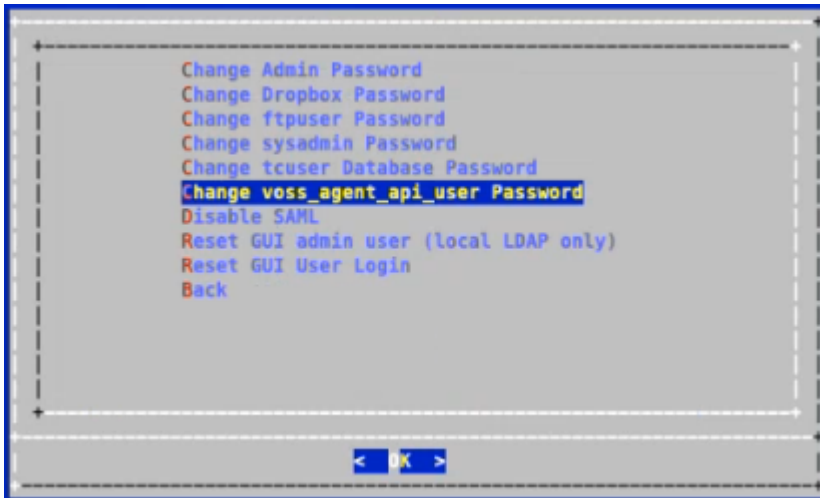

Add a new user

To create a new User:

1. Click the User tab at the top of the screen next to Permission Groups.
2. Click the blue plus icon at the bottom of the screen.
3. Fill in the required fields. (Full Name, Username, Password, Confirm and Email).
4. Check the Super-User box if applicable.
5. Check the Force Password Change if you want this user to follow the Password Policy.
6. Click the Locked Out box if you want this user to time on inactivity on the UI.
7. Select the Customer drop-down box and assign the user to a customer.
8. Check the Disable multi-tenancy if this is a single customer and multi-tenancy does not apply.
9. Click the Blue check icon to set the user.
10. Click the Save button to save the user.

ACCESS CONTROL Permission Groups **Users** Nodes Realms Protected Subnets Password Policy SAML

Filter Sort **Full Name** ▾

<input type="checkbox"/>	Full Name	Username	Password	Confirm	Email	Super-User	Force Password Change	Locked Out
<input type="checkbox"/>	Administrator	admin	*****	*****	afrosch@layerxtech.com	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Alain Jansen	ajansen	*****	*****	ajansen@layerxtech.com	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Andrew Frosch	afrosch	*****	*****	afrosch@layerxtech.com	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Arda Savran	asavran	*****	*****	asavran@layerxtech.com	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Guest Account	guest	*****	*****	support@layerxtech.com	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	layerx	layerx	*****	*****	support@layerxtech.com	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	testing	testing	*****	*****	support@layerxtech.com	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	testing2	testing2	*****	*****	support@layerxtech.com	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	View Only	viewonly	*****	*****	view@layerxtech.com	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	Vodafone	voda	*****	*****	support@layerxtech.com	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	wstrobei	wstrobei	*****	*****	wstrobei@layerxtech.com	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

☐

Customer ▾ Disable multi tenancy ☐

Super-Users can do anything in any context.

 Errors exist

Delete a user

To delete a User:

1. Click the check box next to the User name that you wish to delete.
2. Click the minus icon at the bottom of the screen.
3. Click the Save button to save your changes.


4.9.4. Nodes Tab

The Nodes tab allows you to create a new Arbitrator Correlation or Dashboard/Reporting node. Once it is added and saved then the node can be added to a Realm with other nodes.

Create a node

To create a Node:

1. Click the Node tab at the top of the screen next to Users.
2. Click the blue plus icon at the bottom of the screen.
3. Fill in the required fields. (System, GUI IP Address, Username and Password).
4. Check the either the Direct box (http) or the Secure box (https) to select the communication method.
5. Select the Appliance drop-down box and choose the type of system you are adding.
6. Click the Blue check icon to set the Node.
7. Click the Save button to save the Node.

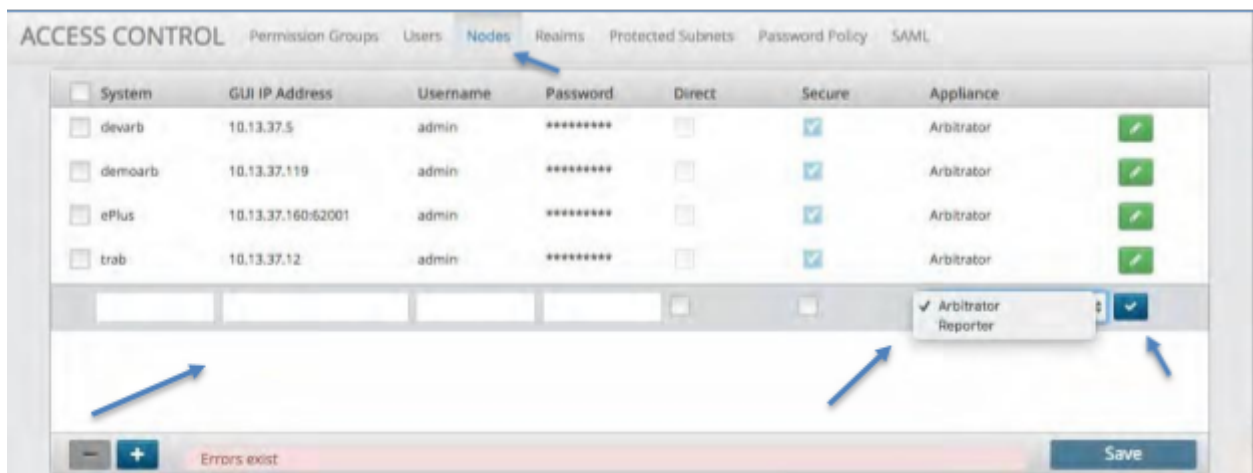

Delete a node

To delete a Node:

1. Click the check box next to the Node name that you wish to delete.
2. Click the minus icon at the bottom of the screen.
3. Click the Save button to save your changes.


4.9.5. Realms Tab

The Realm tab allows you to create a new Realm where VOSS Insights systems can be grouped to communicate with each other. Once it is added and saved then Nodes can be added to the Realm.

Create a realm

To create a Realm:

1. Click the Realm tab at the top of the screen next to Nodes.
2. Click the blue plus icon at the bottom of the screen.
3. Fill in the Realm name that you desire.
4. Click the Blue check icon to set the Realm.
5. Drag the systems that you want in the Realm into the drop zone.
6. Click the Save button to save the Realm.

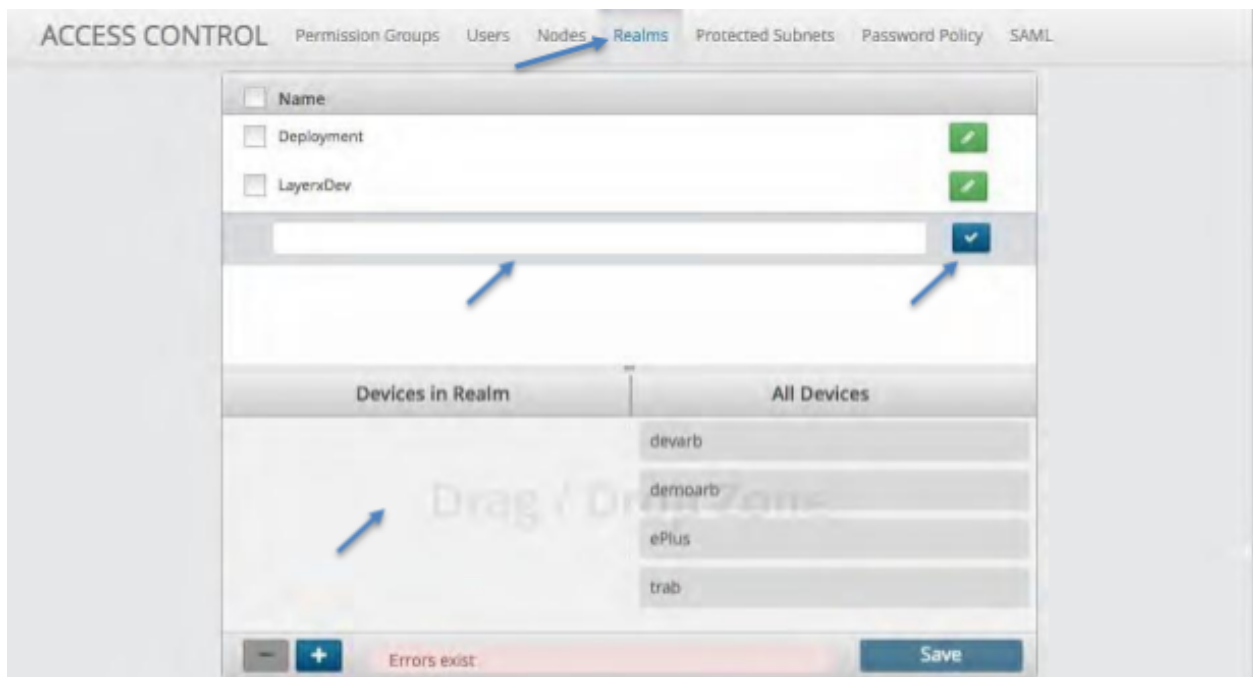

Delete a realm

To delete a Realm:

1. Click the check box next to the Realm name that you wish to delete.
2. Click the minus icon at the bottom of the screen.
3. Click the Save button to save your changes.

4.9.6. Protected Subnets Tab

The Protected Subnets tab allows you to input the IP addresses of subnets that will be protected from a control running against them. The Control will check this list prior to running and will not run a script against a device that is within a protected subnet.

Create a protected subnet


To create a Protected Subnet:

1. Click the Protected Subnet tab at the top of the screen next to Realms.
2. Click the blue plus icon at the bottom of the screen.
3. Fill in the Name, IP Address and Mask of the Protected Subnet.
4. Click the Blue check icon to set the Protected Subnet.
5. Click the Save button to save your changes.

Delete a protected subnet

To delete a Protected Subnet:

1. Click the check box next to the Protected Subnet name that you wish to delete.
2. Click the minus icon at the bottom of the screen.
3. Click the Save button to save your changes.

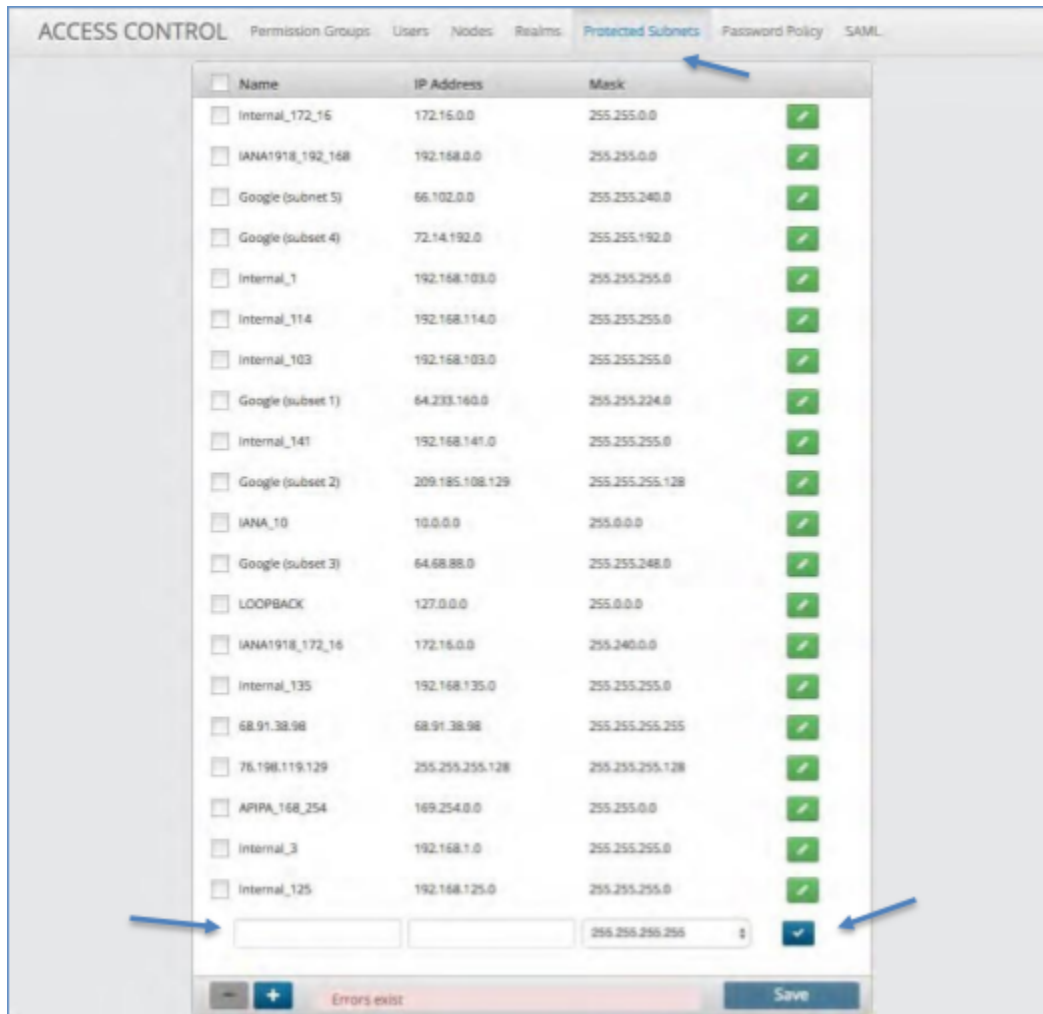

4.9.7. Password Policy Tab

The Password Policy tab allows you to set and enforce password rules to access the system. Each field is optional thus the user can choose the best policy to enforce.

Create a password policy

To create a Password Policy:

1. Click the Password Policy tab at the top of the screen next to Protected Subnets.
2. Within the box you have an option of Minimum Length, Minimum Uppercase, Minimum Lowercase, Minimum Numeric, Minimum Special, Password Lifespan and Maximum Login Attempts.
3. Fill in the desired inputs into each of these fields.
4. Click the Save button to save your changes.

The screenshot shows a web interface for 'ACCESS CONTROL' with a navigation bar containing 'Permission Groups', 'Users', 'Nodes', 'Realms', 'Protected Subnets', 'Password Policy', and 'SAML'. The 'Password Policy' tab is active, displaying a configuration window with the following settings:

Setting	Value	Character Set
Minimum Length	7	
Minimum Uppercase	1	A-Z
Minimum Lowercase	1	a-z
Minimum Numeric	1	0-9
Minimum Special	1	!@#\$%^&*()[]
Password Lifespan	0	days
Maximum Login Attempts	20	

A 'Save' button is located at the bottom of the configuration window.

4.9.8. SAML Tab

The SAML tab allows you to configure single sign-on (SSO) to other user management platforms via the Security Assertion Markup Language (SAML). This is an open standard for exchanging authentication and authorization data between systems.

VOSS

🔒 👤 📅 🏠 🔑 🛡️ 🔐

ACCESS CONTROL

Permission Groups Users Nodes Realms Protected Subnets Password Policy **SAML**

Save

Enable SAML ☒

Show All Customers' Data ☐

SAML Signature Algorithm sha1

Attribute Mappings
 Email (Optional):
 Username (Optional):
 First Name (Optional):
 Last Name (Optional):

Identity Provider Metadata XML
** Required*
 Paste your metadata XML here

```
</?xml:namespace>
</ds:KeyInfo>
</md:KeyDescriptor>
<ds:KeyInfo xmlns:ds="http://www.w3.org/2000/09/xmldsig#"
  <ds:X509Data>

<ds:X509Certificate>MIICyCjCAVYICQDkS5KPsYV3+JANBgkqhkiG9w0BAQsFADAPMQowCwYDVQQDDAARZXN0bW84XDESMTEyMVoXDTIwMDYyMAU5MDI1
MVoXDTIwMDYyMDE1UEAwEEdGVzDCCASiwDOYKoZHVzdNAEQBQAQgEPADCCAQCcggEBAMdIDJ780QTp840SNe5F8sSYOR34GF0GI2Swb/3puTX791SVijKv7W
VM5559nJSyKVfa15qoXLfdRnq3ywOhTSTs2YDX+j98AK3kak3rDR0Yh1LugBy4/4NeNpExgeBtrQk5Aj7YS+ArMzMtEjXa0fsvHw5BD02by6WwRQyP52lrT/PKWbzC04
Q2aps256-W7bs57hdcdY9/mK1qmSCIG2gzl2gfOrIKCOW43amck/TUG8XyLMJNC60FW3xTL/BG6S0Z3609Z02BgnaHGiaIdpC4toPKu+F4SGw6auJV8gt1
mi2yz7Zsa6d+hHDqyWECAwEAATANBgkqhkiG9w0BAQsFAAOCAQEAm2B14eqDF0qCTLD4OEX1102uAGWJwzhH83dmhOPNV0RUkL5HfLCB6aZQunGD8+
qdOKZoc2qd66tgT/hmrYD/SJ/nmr8gyfAV11dHUq3wVQgJuxzoAv6PNs188hvT1WK3YVJAYgFKVXSXQYR5av69ur91NYxytlMKahSWJ1TD38yRfAQghSL6FV0
OyJHyhuFT1XOVVBTEXodagfmvD90.GIPGtMLPUX4m35qaGAU48PwCL7L3cRtY9y9ZWcoIFXzcENLHYCLUS5xr8S5yhH9d3AQHz0HMFnJswm5teckgB3R17+eVqH
qGw==</ds:X509Certificate>
</ds:X509Data>
</ds:KeyInfo>
</md:KeyDescriptor>
<md:SingleLogoutService Binding="urn:oasis:names:tc:SAML:2.0bindings:HTTP-Redirect"
Location="http://192.168.68.169:8080/simplesaml/saml2/idp/SingleLogoutService.php"/>
<md:NameIDFormat urn:oasis:names:tc:SAML:2.0:nameid-format:transient/<md:NameIDFormat>
<md:SingleSignOnService Binding="urn:oasis:names:tc:SAML:2.0bindings:HTTP-Redirect"
Location="http://192.168.68.169:8080/simplesaml/saml2/idp/SSOSession.php"/>
</md:IDPSSODescriptor>
```

Note: SAML is an open standard for exchanging authentication and authorization data between parties, in particular, between an identity provider and a service provider. SAML is an XML-based markup language for security assertions (statements that service providers use to make access-control decisions).

VOSS Insights supports SSO for authentication via the SAML v2.0 standard for SSO. When SAML is enabled for your system, the **Sign Out** menu option (accessible via the **admin** menu) is not required or available as the Insights system does not initiate the termination in this case.

SAML is enabled/disabled on the SAML tab of the Configuration screen in Arbitrator. To bypass SAML authentication, you can set `nosaml=true` in the URL.

Set up SSO via SAML

To create single sign-on via SAML:

1. Click the SAML tab at the top of the screen (adjacent to Password Policy). The attributes on this page require you to interact with your administrator of allowed users.
2. Click the box next to Enable SAML.

Note: The **Sign Out** option is unavailable on the toolbar Profile menu when SAML is enabled.

By default, when SAML is enabled for SSO users, the browser session is configured to timeout after one hour of inactivity and the user will need to fill out their username and password to re-authenticate.

3. If the system is supporting a single customer, then click the Disable Multi-Tenancy.
4. Fill in the optional principal attributes.

5. From your administrator obtain the Identity Provider Metadata XML and paste it into the box provided.
6. From the following boxes provide each of the following to your Identity Provider:
 - a. Audience URL (SP Entity ID)
 - b. Single Login URL
 - c. Single Logout URL
 - d. Click to view or download the platform SAML Metadata
 - e. Click to view or download the platform X.509 Certificate (2048 Bit)
7. Click **Save** to commit the SAML configuration.

ACCESS CONTROL [Permission Groups](#) [Users](#) [Nodes](#) [Realms](#) [Protected Subnets](#) [Password Policy](#) **SAML**

Enable SAML ☒

Disable Multi Tenancy ☐

SAML Signature Algorithm

sha1

Attribute Mappings

Email (Optional):

Username (Optional):

First or Display Name (Optional):

Last Name (Optional):

Identity Provider Metadata XML

* Required

Paste your metadata XML here

Service Provider Information

Provide this information to your Identity Provider

Audience URI (SP Entity ID):

Single Login URL:

Single Logout URL:

Metadata: [View Details](#) [Download](#)

X.509 Certificate (2048 Bit): [View Details](#) [Download](#)

Save

ACCESS CONTROL

[Permission Groups](#) | [Users](#) | [Nodes](#) | [Realms](#) | [Protected Subnets](#) | [Password Policy](#) | [SAML](#)

Enable SAML ☒

Disable Multi Tenancy ☐

SAML Signature Algorithm sha1

Attribute Mappings

Email (Optional):

Username (Optional):

First or Display Name (Optional):

Last Name (Optional):

Identity Provider Metadata XML

** Required*

[Paste your metadata XML here](#)

```
<?xml version="1.0"?>
<md:EntityDescriptor xmlns:md="urn:oasis:names:tc:SAML:2.0:metadata"
xmlns:ds="http://www.w3.org/2000/09/xmldsig#"
entityID="http://demoarb.layerxtech.com/saml2/module.php/saml/sp/metadata.php/default-sp">
<md:SPSSODescriptor protocolSupportEnumeration="urn:oasis:names:tc:SAML:1.1:protocol
urn:oasis:names:tc:SAML:2.0:protocol">
<md:KeyDescriptor use="signing">
<ds:KeyInfo xmlns:ds="http://www.w3.org/2000/09/xmldsig#">
<ds:X509Data>

<ds:X509Certificate>MII DzCCAs+gAwIBAgUAlJy0+QSPIFX0MA0GCSqGSIb3DQEBCwUAMIGIMQswC
QYDVQQGEwJVUzEOMAwGA1UECAwFVGV4YXNkZANBgNVBACMBKlydmlluzZEPMAGI1UECGwGb
GF5ZXUjAQ8wDQYDVQQLEAZXICnngxEDAOBgNVBAEMB2RlbnBhcmlkLTAjA1BgqhkiG9w0BCEWF
nN1cHBycnRAbGF5ZXUjAQ8wDQYDVQdFCjE3MDUwMTUyOTUyOTUyOTUyOTUyOTUyOTUyOTUy
ELMAkGA1UEBhMCVVx0dAMBGNVBABMBVFleGFzMzQwDQYDVQQLDAZJenZpbmcxZANBgNVB
AoMBmxheWVyeDEPMA0GA1UECwwGBG5ZXUjA4MRAdDgYDVQDDADkZXZwYXJlMSUwWwYJKoZIh
vNAQkBFJ2zdXBw3JUQGxheWVyeHRIRY2guY29tMIIBIjANBgkqhkiG9w0BAQEFAAOCAQAMIBBg
CAQEA4ZgbuCZEqa3EV/RrHvoMyjjhYtcsGrTqvuuKnbkmD9eP75vBS4*QytT5SHY7DW72zGrjGqsirpk5s
DPBIM6kBILiMijUbK4V3LOTCoaCq5u0rJD9YLSeVAfsm0aNF/X1diTaB3Lc9VqMcchTPsvMn9CqChnJ+x
3J2bvAGS78OC6BUhD4d8U4E5/WsJ+x1wECeYsRGNI6c7AI56O6Yr9Bel/U000pq6mk6xYXC6XWwV
LTkIBGSZcGSNAUIKKdnTep4yhgtokRJUBXh2wVbDi/RQJZFk+D7yOLSapfo41DbVmFJRClA7LgkGdqV+R
hBOKVnjOpVQ526w2T5UvwbdwlDAQABOI AwTjAdBgNVHQ4EFggQUULvIDBASaubH6lUtzbgeVEEm8vBtlw
HwyDYVR0BBgwFoAUULvIDBASaubH6lUtzbgeVEEm8vBtlwOAYDVROTBALUAWEB/zANBgkqhkiG9w0BA
QsFAAOCAQEAAyk094TgcTgZkuoNhcx20f9T6v7IRZOI280Uh8ydBSwbNmP9XP69IA9dzIm4TUHFdwJq
Elz+M/4HKz07DZzh60LW+ZNWZIXnodxFzuYATidsVkEZn+BXT+vD3w9IPNmxxPPFBK8e6X/BelJum63cl
8Kbd4yVTS750VDQPBT2JuIVBulizjQSUR1MDIr3R9Z+EtlIKUJlt4CLVsn9h4DtzDYobr315XKOJeDIISq7Vy9
WEYXP00IHm6nkEvUs95iyLxsXcjw3NTbtzQeMBppuVOBYGVaIEWlgFYg8++/qGJuoCQR/LT06LzFek2r
Cg/19wGZeEnmjnwHYpGw==</ds:X509Certificate>

</ds:X509Data>
```

Service Provider Information

Provide this information to your Identity Provider

Audience URI (SP Entity ID): http://demoarb.layerxtech.com/saml2/module.php/saml/sp/metadata.php/default-sp

Single Login URL: http://demoarb.layerxtech.com/saml2/module.php/saml/sp/saml2-acss.php/default-sp

Single Logout URL: http://demoarb.layerxtech.com/saml2/module.php/saml/sp/saml2-logout.php/default-sp

Metadata: View Details Download

X.509 Certificate (2048 Bit): View Details Download

Save

ACCESS CONTROL

[Permission Groups](#) | [Users](#) | [Nodes](#) | [Realms](#) | [Protected Subnets](#) | [Password Policy](#) | [SAML](#)

Enable SAML ☒

Disable Multi Tenancy ☐

SAML Signature Algorithm

Attribute Mappings

Email (Optional):	<input type="text"/>
Username (Optional):	<input type="text"/>
First or Display Name (Optional):	<input type="text"/>
Last Name (Optional):	<input type="text"/>

Identity Provider Metadata XML

* Required

Paste your metadata XML here

```
-----BEGIN CERTIFICATE-----
MIIDSzCCAs+gAwIBAgIJALyO+0SPiFX0MA0GCSqGSIb3DQEBCwUAMIGJM0swCQYD
VQQGEwJlbnVzEOMAwGA1UECAwFYGV4YXNjZANBgNVBAcMBklydmduZzEPMA0GA1UE
CgwGbGF5ZXZKJ4MQ8wDQYDVQQLEDAZsYXlcnngEDA0BgnVBAMM82RidnBhmikJTAj
BgqhkiG9w0BQCQEWFnN1cHBvcnRAbGF5ZXZKJ4dGVjaC5jb20wHhcNMTE3MjIx
MzQ3WhcNMjE3MjIyMTA3WjCBITELMAkGA1UEBhMCVVmxdjAMBgNVBAGMVRRI
eGFzMzQ3Wj4MRARwDgYDVQQDDAdkZXZwYXJlMSUwLwYJKoZIhvcNAQkBFhZzdXB3b3J0
QGxheWVyHRIRY2guY29tMiBIANBgkqhkiG9w0BAQEFAAOCAQ8AMIIBCgKCAQEA
4ZgbuCZEgc3E/RrHvMYyihYtcsGiTvquKmbkmD9eP75vBS4fQylT55HY7DW72z
GrGqsJpk5sDPBiMf6kBuiMJUbK4V3L0TCoaCq5u0rJD9YLSeVAMsm0eNF/X1
diTab3Lc9Vqmceh7PsvMn9CqCimJ-x3J2BvAGS78OC6BUUhD4d8Uf4E5WsJ-x1w
EEcySRGN16cTAi56O6Yr9BelU000pq6mik8xYXiC6XWNvLTk18G5ZcG5NAUIKKdn
Tep4yhgtckRJubxh2wVbDrOUZFk-D7yDLSpfc41DbVmFJRClia7LgkGdqV-RhB0
KVtOpVQ5Z6w2T5xiwwbdwlDAQAB01AwTJAdBgNVHQ4EFgQUUVvDaBSaubH6Utz
gbEVEm8v8tlwHwYDVR0JBgBwFoAJUuvDaBSaubH6UtzgbEVEm8v8tlwDAYDVR0T
BAUwAwEB/zANBgkqhkiG9w0BAQsFAAQCAQEAYk094TvcTgzXu0NhcX20f9T6vI7I
RzOt280Urh8ydBSwbNmP9vXP68IA9dzlmI4TUHiDwkJqElz-M/4HKz07DzZh60LW-Z
NWZ2XnodxfzuYATrdsVkeZn-BXT-vD3w9fNmxpPFfKBe6X/BaJum63cllBKbd4
yVS7750VDQPBTJuAv8JizJQSUr1MDir3R8Z-ElitKUrljt4CLVsn8h40tzDY0
br315XKoJeDiSq7y9WEYXp00IHm6nkEvUs95jyLxsXcjw3NTbtzQeMBppuVOBY
GValEWlgFyg++rt/qGJuoCQR/LT06LzFek2rCg/t9wGzEnmjnwHYpGw==
-----END CERTIFICATE-----
```

Service Provider Information

Provide this information to your Identity Provider

Audience URI (SP Entity ID):	<input type="text" value="http://demoarb.layerntech.com/saml2/module.php/saml/sp/metadata.php/default-sp"/>
Single Login URL:	<input type="text" value="http://demoarb.layerntech.com/saml2/module.php/saml/sp/saml2-acss.php/default-sp"/>
Single Logout URL:	<input type="text" value="http://demoarb.layerntech.com/saml2/module.php/saml/sp/saml2-logout.php/default-sp"/>
Metadata:	View Details Download
X.509 Certificate (2048 Bit):	View Details Download

Save

4.10. Import & Export


4.10.1. Overview

The Import & Export Configuration panel allows you to select all or parts of the system configuration to be exported to file or to import already exported files into the system.

4.10.2. Exporting

To export configuration items:


1. Click the Export tab at the top of the screen.
2. On the left-hand side will be folders containing all of the configuration items. Either drag whole folders over to the drop zone or open a folder and select a specific item to drag to the drop zone.
3. Once complete give the package a name in the box next to Package Name.
4. Then give the package a description in the box next to Package Description.
5. When complete click the Export button.
6. The package file will download to your local computer.

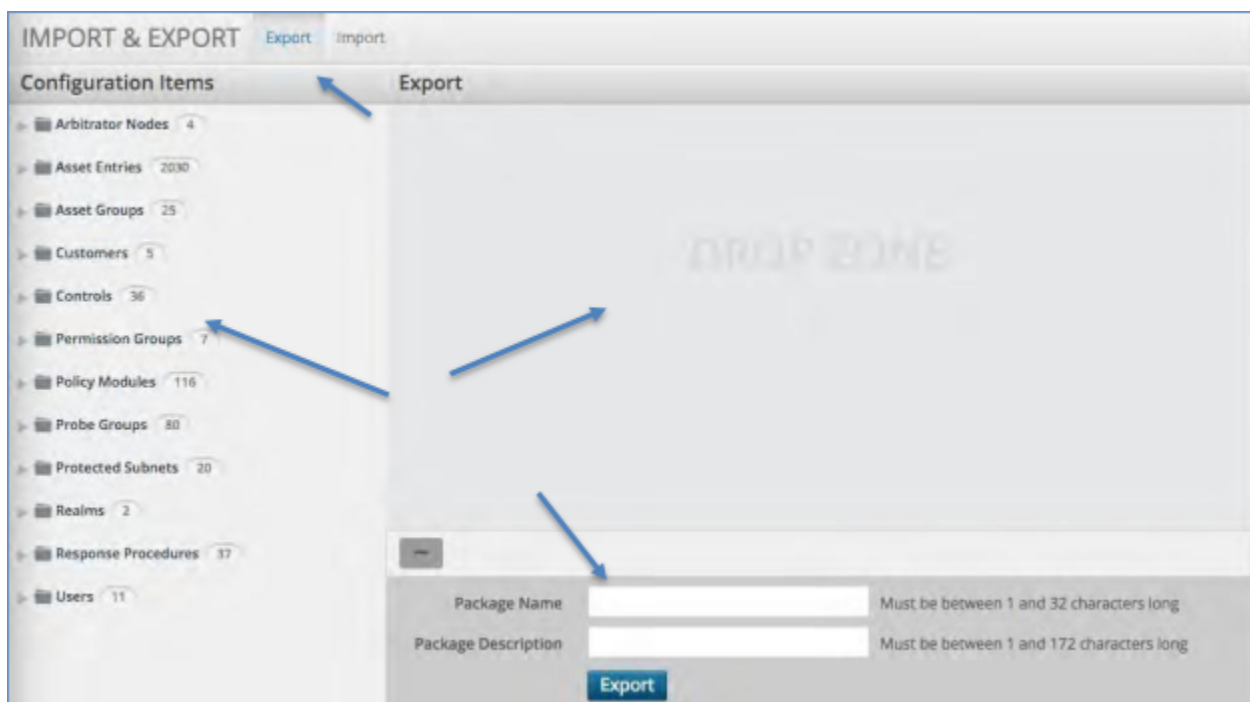

4.10.3. Importing

To import configuration items:

1. Click the Import tab at the top of the screen.
2. Select the file you wish to import by clicking the “choose file” button. This will open up your local file system to select the file from where you have it stored on your computer.
3. Double click the file or highlight it and click “Open”.
4. Click the Upload button. This will open up all of the configuration items you are importing.
5. Make any changes to the settings as required.
6. Click Import.
7. A progress screen will pop up. Once complete click OK.

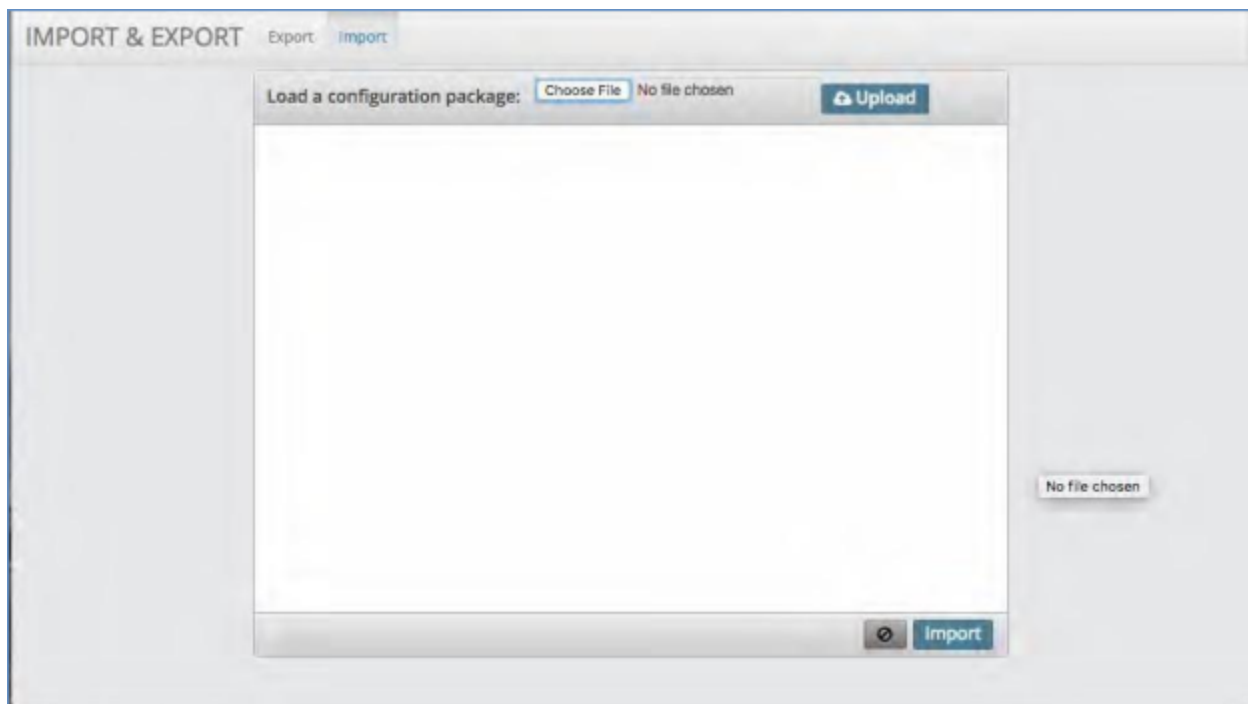

4.11. Archive Management

4.11.1. Overview

admin-users-only

The Arbitrator **Archive Management** page provides options for backing up and configuring the Arbitrator correlation platform.

You can select the following tabs on this page:

- *Configuration Management Tab*
- *Log Management Tab*

Note: Archive Management is only accessible to admin users.

The screenshot displays the VOSS Archive Management interface. The top navigation bar includes the VOSS logo, various system icons, and the user 'admin'. The main header shows 'ARCHIVE MANAGEMENT' with sub-tabs for 'Configuration Management' (selected) and 'Log Management'. Below this is a secondary navigation bar with tabs for 'API Config', 'Archive', 'Automate Datasource', 'Cisco SDL', 'Collect', 'Data User', 'Import', 'LDAP', 'License', 'Probe', 'Proxy', 'SNMP', and 'Syslog'. The 'API Config' tab is active, showing a 'Creation' form. The form has a left sidebar with 'DEM Config', 'MS Teams Config', and 'Webex Config'. The main content area has a yellow notification bar stating 'Changes have been made to this configuration item'. The 'Creation' section explains it allows for periodic monitoring of remote APIs. It contains three input fields: 'remoteAddress' (with a description to specify the URL for JSON data), 'headerLine' (with an optional description for security headers), and 'dataValues' (with an optional description for post fields). 'Save' and 'Delete' buttons are at the top right of the form area.

4.11.2. Configuration Management Tab

You can select the following tabs on the Archive Management > Configuration Management tab:


- *API Config Tab*
- *Archive Tab*
- *Automate Datasource Tab*
- Cisco SDL Tab
- *Collect Tab*
- Data User Tab
- *Import Tab*
- *LDAP Tab*
- *License Tab*
- Probe Tab
- *Proxy Tab*
- *SNMP Tab*
- *Syslog Tab*

API Config Tab

This tab allows you to set up a number of API configurations to enable monitoring, for example, of Webex or MS Teams.

Webex Config

The Webex Config option allows the configuration of Webex monitoring. A dashboard is available to visualize the data.

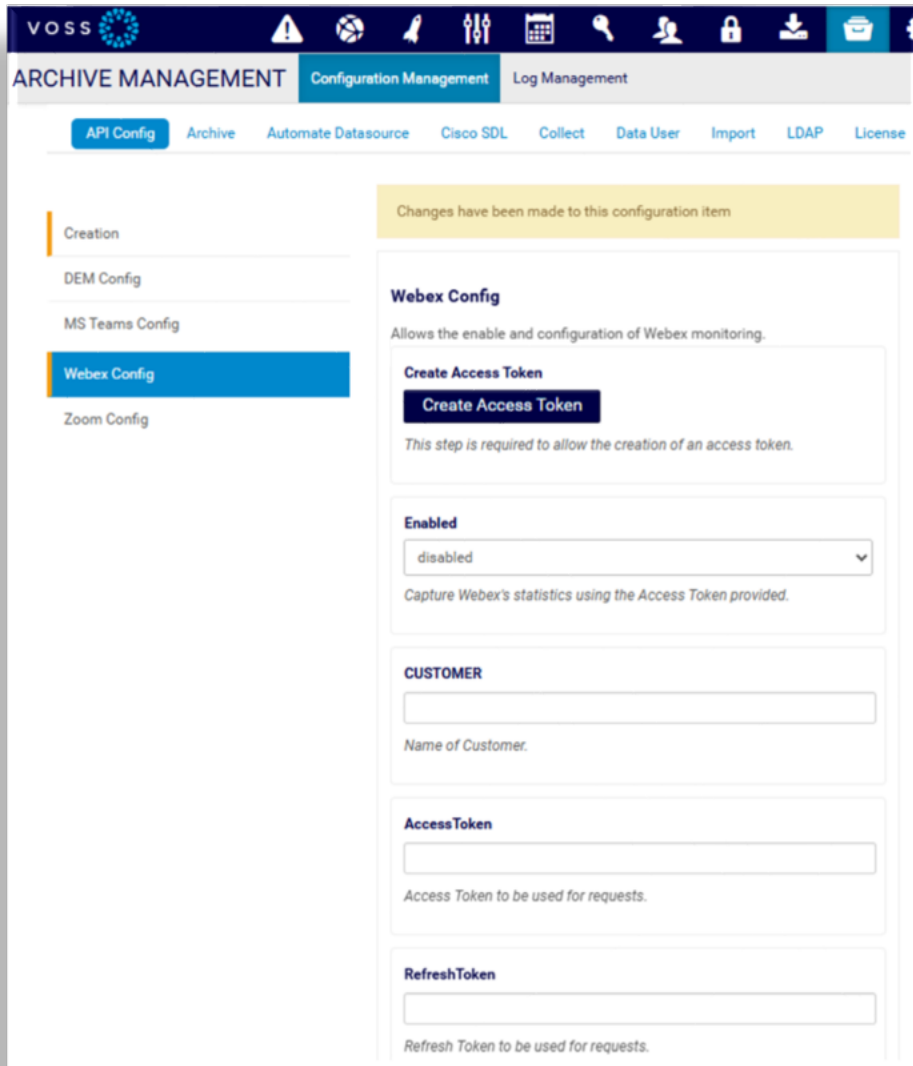

Note: For Webex API support, your network should be configured to access: <https://webexapis.com/v1>, port 443. (Admin menu > Network Configuration, **DNS Settings** may need to be configured to reach the external site.)

To configure Webex API:

1. From the Arbitrator main user interface, click the **System Configuration** toolbar icon (wrench) to open the Arbitrator **Configuration** GUI.
2. Click the toolbar **Cabinet** icon to open **Archive Management**.
3. On the **Configuration Management** tab, select the **API Config** tab.
4. On the **API Config** tab, select **Webex Config**, then configure settings in the right pane:

- a. Click the **Create Access Token** button, then fill out your account credentials and copy the JSON string that performs OAuth handshake with Webex. You'll paste this into **AccessToken**.
- b. At the **Enabled** drop-down, select enabled.
- c. At **CUSTOMER**, fill out the customer name (if multi-tenancy is required).
- d. At **AccessToken**, paste the copied JSON token from step a.

The JSON format is as follows (line breaks here not in string):

```
{
  "access_token": "xxxxxxxxxxxxxxxxxxxxxxxxxxxx",
  "expires_in": nnnnnnn,
  "refresh_token": "xxxxxxxxxxxxxxxxxxxxxxxxxxxx",
  "refresh_token_expires_in": nnnnnnn,
  "token_type": "Bearer"
}
```

- e. Click **Verify Access Token** and to verify, inspect the output in **View Output**.
- f. Click **Save Access Token**, which will create a new Customer-specific "Webex Config - <XYZ>" entry. under the **API Config** list. (You need to click away and return to **Configuration Management** to reload with the new entry.)

Created configurations can be deleted or modified. This will be needed for Access Tokens, as these contain an expires_in value.

MS Teams Config

MS Teams Config settings configure MS Teams monitoring for Insights.

The MS Teams API configuration requires an initial application registration on Microsoft Azure.

To set up Microsoft Teams integration and monitoring for Insights and to see the check of the connection and correct permissions that are set to Microsoft Graph API endpoints, see *Microsoft Teams Integration Guide for Insights*.

Zoom Config

An access token is required for the configuration of Zoom monitoring.

Zoom Config

Allows the enable and configuration of Zoom monitoring.

Create Access Token

Create Access Token

This step is required to allow the creation of an access token.

Click the **Create Access Token** button to be redirected to get an access token.

1. If Zoom statistics are to be captured, select **enabled** from the **Enabled** drop-down.
2. Enter a **Customer** name for the associated customer.
3. Enter the received access token in the **AccessToken** input box.
4. Enter a refresh token in the **RefreshToken** input box.
5. Click the **Verify Access Token** button to test the entered access token.

Archive Tab

The Archive tab provides a number of options based on the specific functions you wish to backup.

Note: From release 24.2, new configuration options are available for the archive of:

- Cisco SNMP SQL
 - Network Observability SQL
 - VMWARE SQL
-

Setup

The system does a backup daily. For the most part, there is nothing for the user to configure. All data and configurations that exists on the system are archived automatically on a daily basis.

Archived data are logically grouped together and by default stored into separate archived files locally on the box. There is a separate page for each Archive group. More detailed information about each Archive group can be found on the individual Archive group pages. The user also has the option to mount an NFS drive to the system. All archived files will then get archived to the NFS mounted drive. Note: removing the NFS mount will NOT copy the NFS contents back to local storage. Only NFS v3 mounts are currently supported today.

The screenshot shows the 'ARCHIVE MANAGEMENT' section of a web interface. The top navigation bar includes 'Archive', 'Collect', 'LDAP', 'SNMP', 'Syslog', and 'Tunnel'. The 'Archive' tab is selected. On the left, a sidebar lists 'Setup', 'Arbitrator Backup', 'Cisco Files', 'Cisco SQL', 'Pexip Files', and 'Remote Storage'. The 'Setup' page is active, displaying a 'Changes have been made to this configuration item' message. The main content area is titled 'Setup' and contains a paragraph explaining the system's daily backup process and the option to mount an NFS drive. Below this, there is a 'Storage Type' dropdown menu set to 'standard', a 'Remote Location' text input field, and a note stating 'Required only for nfs option. Specify remote nfs ip and path location'.

Arbitrator Backup

This page contains the settings for the backup of the Arbitrator. There is nothing to edit here. The settings are simply displayed for informational purposes only. This Archive group contains the following data: Arbitrator Configuration settings (Database: Assets, Alerts, Policies, Rules, Probe Groups, Response Procedures, Controls), User Permissions settings

(Idap), NDX files, Avaya data, Pexip data, and all other data currently being collected in the Arbitrator database.

The backup excludes data from the CALL table, Cisco Tables, and raw Cisco CDR/CMR files. Data in the CALL table can be very large and is expendable. Cisco Tables and raw Cisco CDR/CMR files are part of a separate Archive group.

The screenshot displays the 'ARCHIVE MANAGEMENT' section of a web application. The top navigation bar includes 'Configuration Management' and 'Log Management'. Below this, a sub-navigation bar shows 'Archive', 'Collect', 'LDAP', 'SNMP', 'Syslog', and 'Tunnel'. The 'Archive' tab is active. On the left, a sidebar menu lists 'Setup', 'Arbitrator Backup' (highlighted), 'Cisco Files', 'Cisco SQL', 'Pexip Files', and 'Remote Storage'. The main content area shows a yellow notification bar stating 'Changes have been made to this configuration item'. Below this is the 'Arbitrator Backup' configuration page. It contains a descriptive paragraph about the backup process and a list of settings: 'archive_interval' (daily), 'method' (local), 'destination' (/chroot/iscp/pub/txt_archive), and 'monthsKept' (notSupported). A 'Save' button is located at the top right of the configuration area.


Cisco Files

Archival for Cisco files. This Archive group will back up all Cisco CDR and Cisco CMR raw files. These are the files that are SFTP'd to the system by the Cisco Call Manager. The settings here are for informational purposes only. However, the user may disable the storage of raw Cisco CDR and Cisco CMR raw files on the system. This option could be used to conserve disk space.

The screenshot displays the 'ARCHIVE MANAGEMENT' web interface. At the top, there are tabs for 'Configuration Management' and 'Log Management'. Below these, a navigation bar includes 'Archive', 'Collect', 'LDAP', 'SNMP', 'Syslog', and 'Tunnel'. A 'Save' button is located in the top right corner. On the left side, a sidebar menu lists 'Setup', 'Arbitrator Backup', 'Cisco Files' (which is highlighted), 'Cisco SQL', 'Pcap Files', and 'Remote Storage'. The main content area shows a yellow notification banner stating 'Changes have been made to this configuration item'. Below this, the 'Cisco Files' configuration section is visible. It includes a description: 'Archival for Cisco files. This Archive group will backup all Cisco CDR and Cisco CMR raw files. These are the files that are shipped to the system by the Cisco Call Manager. The settings here are for informational purposes only. However, the user may disable the storage of raw Cisco CDR and Cisco CMR raw files on the system. This option could be used to conserve disk space.' The configuration fields are: 'status' (dropdown menu set to 'enabled'), 'archive_interval' (dropdown menu set to 'daily'), 'method' (dropdown menu set to 'local'), 'destination' (text input field containing '/chroot/scp/pub/ld_archive'), and 'monthsKept' (dropdown menu set to 'notSupported'). A warning note below the 'status' field states: 'enabled - keep original cisco cdr/cmr files, disabled - remove original cisco cdr/cmr files. The disabled option will cause all cdr/cmr files to be deleted from the system. This is a permanent deletion.'

Cisco SQL

Archival for Cisco SQL data. This Archive group will back up all Cisco data in the database tables. This is the data that has already been processed by the system. There is nothing to edit here. The settings here are for information purposes only. The data here is grouped together by the Cisco Call Manager IP Address. This allows for more granular control on which Call Manager data to import.

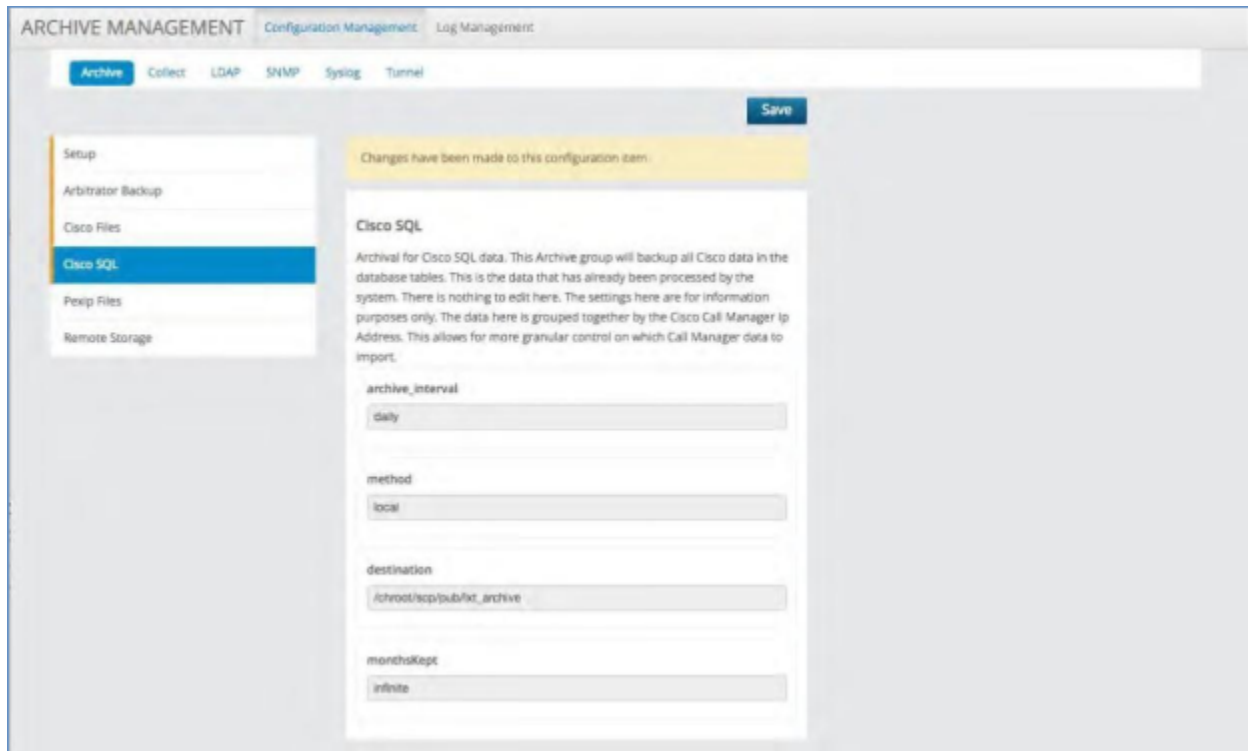

Ndx

This Archive group will manage Ndx files on the system. Default **monthsKept** is 6 months.

Ndx

This screen can be used to manage Ndx files on the system.

max_ndx_file_size

1

The maximum size the ndx searchable file should be. Once the max size is hit, the ndx server will create a new ndx file.

max_searchable_days

1

The maximum number of days that should be searchable. Ndx files greater than this time will still live on the system but will not be searchable from the UI.

monthsKept

6

The maximum number of months to keep ndx archives around. Each archived ndx will take up disk space. Warning, increasing this number too large may require customer to also increase the hard disk size.

Pexip Files

Archival for Pexip files. The system can be used to collect PEXIP data. The raw PEXIP data files are kept, by default, for historical purposes. However, in order to conserve disk space, the user may choose to disable the local storage of the raw PEXIP files.

The screenshot displays the 'ARCHIVE MANAGEMENT' section of a web interface. The top navigation bar includes 'Configuration Management' and 'Log Management'. Below this, a sub-navigation bar shows 'Archive', 'Collect', 'LDAP', 'SNMP', 'Syslog', and 'Tunnel'. A 'Save' button is located in the top right corner. On the left, a sidebar lists configuration items: 'Setup', 'Arbitrator Backup', 'Cisco Files', 'Cisco SQL', 'Pexip Files' (which is highlighted in blue), and 'Remote Storage'. The main content area features a yellow notification bar stating 'Changes have been made to this configuration item'. Below this, the 'Pexip Files' configuration section is shown. It includes a description: 'Archival for Pexip files. The system can be used to collect Pexip data. The raw pexip data files are kept, by default, for historical purposes. However, in order to conserve disk space, the user may choose to disable the local storage of the raw pexip files.' The configuration fields are: 'status' (a dropdown menu currently set to 'enabled'), 'archive_interval' (a dropdown menu set to 'daily'), 'method' (a dropdown menu set to 'local'), 'destination' (a text input field containing '/chroot/scp/pub/txt_archive'), and 'monthsKept' (a dropdown menu set to 'notSupported'). A warning message is displayed below the 'status' field: 'enabled - keep original pexip files, disabled - remove original pexip files. This disabled option should be used to conserve disk space. The disabled option will cause all pexip files to be removed. This is a permanent change.'

Remote Storage

If standard / local storage is chosen in the Archive Setup page, then this screen allows the user to configure remote archival of the Arbitrator backup files. Each Archive group produces one or many archive files. The system can be configured to SCP these archive files to a backup location or to another Arbitrator.

The archives can be sent to a separate backup location (NFS, SFTP-server, SCP or remote synced to another Arbitrator).

ARCHIVE MANAGEMENT
Configuration Management
Log Management

Araya SQL
Cisco Files
Cisco SQL
Cisco Expressway SQL
Cisco RIS SQL
Cisco RTMT SQL
MSTeams SQL (legacy data)
Ndx
Oracle Files
Oracle SQL
Pexip Files
Pexip SQL
Polycom SQL
UHE SQL
Vof Cisco
Vof Qsip
Webex SQL
Remote Storage

Remote Storage

This page does not describe an Archive Group. If standard / local storage is chosen in the Archive Setup page, then this screen allows the user to configure remote archival of the system's backup files. Each Archive group produces one or many archive files. The system can be configured to scp these archive files to a backup location or to another system.

archive_interval
daily

Select an option

☐ disabled
☐ nfs
☐ rsync
☐ rsyncToAtp
☒ scp
☐ sftp

disabled - keep archives locally.
nfs - Will mount a network file system as a local drive, which preserves local device disk space.
scp - System will copy archives to a remote location.
Sftp is not a sync. In order to reduce load on system and network, system only copies new / changing archives over to the sftp location.
sftp - System will copy archives to a remote location.
Sftp is not a sync. In order to reduce load on system and network, system only copies new / changing archives over to the sftp location.
rsync - System will sync archive directory to remote system. The remote system must have rsync installed for this to work.
rsyncToAtp - System will sync archives directory to a remote system. This utilizes the rsync protocol so both systems will always be in sync.

IP location
172.30.42.175

username
atpuser

password

options

destination
/backups

monthsKept
infinite

- **archive_interval**

This can be set on a schedule of:

- Daily
- Weekly
- Monthly

- Method: **Select an option**

- **disable** - System will reset storage options, e.g. archives locations are reset to the local system if these were previously on a remote host.
- **nfs** - System will mount the filesystem as a local drive. The system drop/1xt_archive directory is linked with a symbolic link to /mnt/nfsshare on a host, thereby saving space on the system.

Selecting this option enables additional controls:

Check NFS Host

Check NFS Host

Check NFS Mount

Check NFS Mount

Copyright © 2025 VisionOSS Limited. All rights reserved.

114

- * **Check NFS Host:** Click and use the **View Output** button to see verification output.
- * **Check NFS Mount:** Check the **destination** location (entered below) *after* saving the configuration. **View Output** shows disk usage on the destination of the NFS host.
- **rsync** - System will sync the archive directory to remote system. The remote system must have rsync installed for this to work.
- **rsyncToArb** - System will sync the archives directory to a remote Arbitrator. This utilizes the rsync protocol so both Arbitrators will always be in sync.
- **scp** - System will copy archives to a remote location. Scp is not a sync. To reduce load on system and network, system only copies new / changing archives over to the scp location.
- **sftp** - System will copy archives to a remote location. Sftp is not a sync. To reduce load on system and network, system only copies new / changing archives over to the sftp location.
- **IP location**
IP address. Also add **username** and **password**.
- **destination**
The path on the remote server to the folder where backups are to be stored.

Related topics

- [Backup and restore Arbitrator](#)

Automate Datasource Tab

Arbitrator can be set up to query Automate and extract CDR data for specific Cisco UCMs and phones, based on the Cisco UCM IP and device name, and display this data on Insights dashboards.

This tab configures an Automate datasource to securely store and manage Automate credentials. Here you can enable or disable the collection of data from a specified Automate database, specify the IP address, port, database name, and port of the Automate datasource, and the username and password to access the datasource. You can also enable or disable SSL for connecting to the Automate datasource, and test the connection to the datasource.


The screenshot displays the Voss Archive Management web interface. The top navigation bar includes the Voss logo and various system icons. Below this, the 'ARCHIVE MANAGEMENT' section is active, with sub-tabs for 'Configuration Management' and 'Log Management'. The 'Configuration Management' tab is further divided into 'API Config', 'Archive', 'Automate Datasource' (which is selected), 'Cisco SDL', 'Collect', 'Data User', 'Import', 'LDAP', and 'License'. A 'Save' button is located in the top right corner of the configuration area.

The main content area is titled 'Automate Datasource Configuration'. It includes a yellow notification banner stating 'Changes have been made to this configuration item'. The configuration itself is titled 'Automate Datasource Configuration' and includes a description: 'Allows the enable and configuration of Automate Datasource Connection.' The configuration fields are as follows:

- Enabled:** A dropdown menu currently set to 'disabled'. Below it is a note: 'Enable or Disable collection from this Automate database'.
- AUTOMATE_IP:** A text input field containing '172.30.15.201'. Below it is a note: 'IP Address of Automate datasource'.
- AUTOMATE_PORT:** A text input field containing '27020'. Below it is a note: 'Datasource Port. Default 27020.'
- AUTOMATE_DBNAME:** A text input field containing 'VOSS'. Below it is a note: 'Automate Database Name. Default VOSS.'
- AUTOMATE_USERNAME:** A text input field containing 'johnsmith'. Below it is a note: 'Username to access datasource'.

Key Automate data for the Cisco UCM phone, line, and user is collected in regular Automate syncs to enrich the the Cisco CDR data for both originating and destination devices. This data displays on Insights dashboards, for example, to include customer and site location details for multiple customers and sites, as well as information about the lines.

A data sync for the collection of data can also be forced from Automate on Arbitrator via the CLI **Administration** menu.

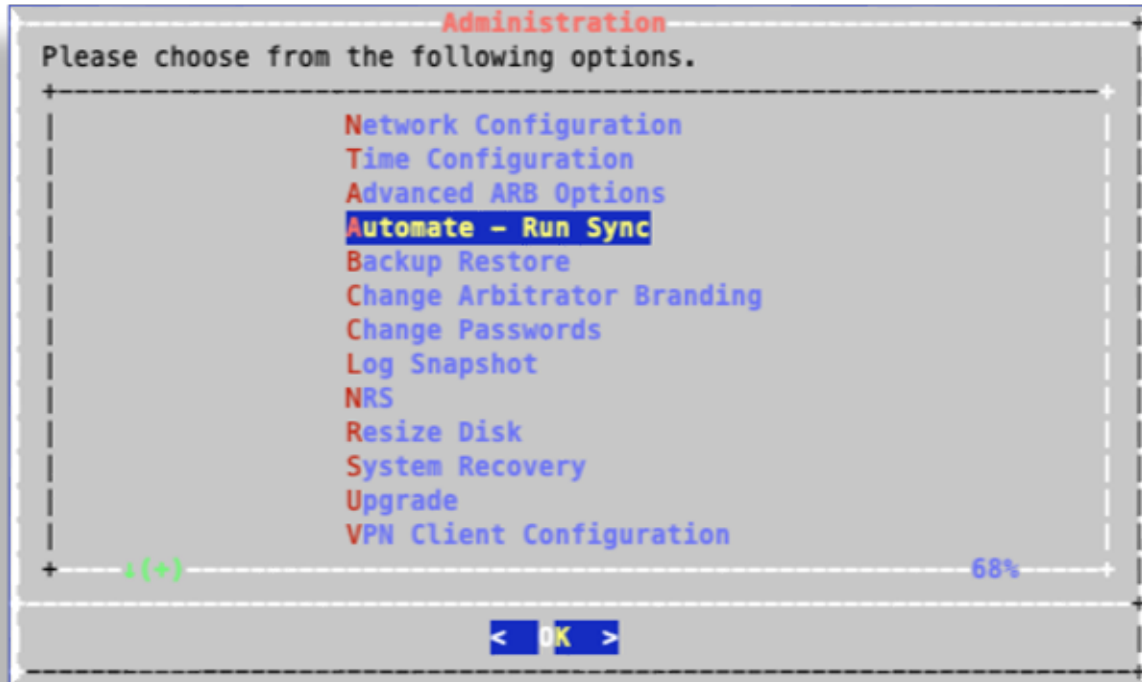

Prerequisites

- Automate, Arbitrator, Cisco UCM
- A Cisco UCM configured via Automate
- Cisco UCM configured to send its CDRs to Automate

Fields available on the arbitrator_ciscocdr resource

Dashboards displaying enriched CDR data from Automate use these fields:

- orig_voss_phone_customer
- orig_voss_phone_site
- orig_voss_phone_description
- orig_voss_phone_line_pattern
- orig_voss_phone_line_description
- dest_voss_phone_customer
- dest_voss_phone_site
- dest_voss_phone_description
- dest_voss_phone_line_pattern
- dest_voss_phone_line_description

View data

CDR data enriched with Automate data can be viewed on the following Insights reference dashboards:

- CUCM Route Pattern Analysis
- Call Analysis-All
- Cisco Call Detail - Cause Code Analysis
- Microsoft PSTN Calls
- Microsoft Teams - Call Debug Compact
- Microsoft Teams - Call Debug Details
- Microsoft Teams - Call List
- Microsoft Teams - Calls with Issues
- Microsoft Teams - Calls with over 10 Participants
- Microsoft Teams User Experience Detail
- Phone Inventory

Related topics

- Insights reference dashboards in the Dashboard Administration Guide

Collect Tab

The Collect tab defines configuration options for the collection of CDRs.

Control

This panel enables and disables the processing of various file types. When a file type is disabled, files of this type are added to a backlog, and are processed when processing is re-enabled.

The table lists the control options you can enable and disable:

DEM	<p>Enables/disables Digital Experience Monitoring (DEM) collection on the Arbitrator. DEM provides the ability to test connectivity to web-based systems, such as Microsoft Teams, and to deliver metrics for the following:</p> <ul style="list-style-type: none">• Overall round-trip times to the application• The number of hops taken• Best and worst latency• The connection path, displayed hop-by-hop <p>DEM agents on the Arbitrator provide connectivity and performance statistics to various MS Teams internet endpoints, including Microsoft Graph. When enabled, the job runs every 5 minutes, and policies (rules) imported to Arbitrator fire incident alerts when any of the DEM-collected metrics are out of the permitted thresholds. To verify that the Arbitrator policies are firing alerts and to view the logs, you can search in Arbitrator for either “dem_connectivity” or “dem_web_performance”.</p>
Cisco UCM	
Oracle SBC	
Pexip	
NGIN	Enables/disables NGIN-XML processing
Palladion	
NMR	
Infovista GSIP	
Infovista IPSLA	

The screenshot displays the Voss Archive Management Configuration Management interface. The top navigation bar includes 'ARCHIVE MANAGEMENT', 'Configuration Management', and 'Log Management'. Below this, a secondary navigation bar lists various configuration categories: API Config, Archive, Cisco SDL, Collect (highlighted), Data User, Import, LDAP, License, Probe, Proxy, SNMP, Syslog, and Tunnel. On the right of this bar are 'Save' and 'Delete' buttons. The left sidebar shows a list of configuration items: Control (selected), Avaya Datastore, Cisco, Cisco Remote Copy, Oracle Microsoft Operator Connect, Vdf, and Voss Analytics. The main content area features a yellow notification bar stating 'Changes have been made to this configuration item'. Below this, the 'Control' section is expanded, showing a description: 'This screen allows the file processing mechanism to be suspended. The system will still receive files, but the file contents will not be processed until re-enabled.' The configuration options are as follows:

Configuration Item	Value	Description
DEM	disabled	Enable/Disable Digital Experience Monitoring processing.
Cisco UCM	enabled	Enable/Disable Cisco Unified Call Manager processing.
Cisco ME	enabled	Enable/Disable Cisco ME processing.
Oracle SBC	enabled	Enable/Disable Oracle Session Border Controller processing.
Pexip	enabled	Enable/Disable Pexip processing.

Cisco Remote Copy

This panel defines the storage location of collected Cisco CDR/CMR files.

The default location is "local", which is the local Arbitrator Correlation platform. Choose "remote arbitrator" and the processed Cisco CDR/CMR files will be stored to the database of a remote arbitrator. This is useful if the data of multiple arbitrators needs to be stored to a centralized arbitrator. The "remote_ip" needs to be filled in with the IP address of the "remote arbitrator", if configured.

The screenshot displays the Voss Archive Management web interface. The top navigation bar includes the Voss logo and various icons. Below it, the 'ARCHIVE MANAGEMENT' section is active, with sub-tabs for 'Configuration Management' and 'Log Management'. A secondary navigation bar lists options: 'API Config', 'Archive', 'Blue Jeans Config', 'Cisco SDL', 'Collect' (highlighted), 'Import', 'LDAP', 'Probe', and 'SNMP'. On the right of this bar are 'Save' and 'Delete' buttons. A left sidebar contains a list of configuration categories: 'Avaya Datastore', 'Cisco', 'Cisco Remote Copy' (selected), 'Oracle Microsoft Operator Connect', 'Vdf', and 'Voss Analytics'. The main content area shows a yellow notification banner stating 'Changes have been made to this configuration item'. Below this is the 'Cisco Remote Copy' configuration form, which includes a title, a description, and four input fields: 'IP location' (containing '10.13.37.8'), 'username' (containing 'drop'), 'password' (masked with dots), and 'destination' (containing '/chroot/scp/pub/cucm'). Each input field has a descriptive label and a placeholder text. At the bottom of the form is a 'Verify Config' button.

ARCHIVE MANAGEMENT Configuration Management Log Management

API Config Archive Blue Jeans Config Cisco SDL Collect Import LDAP Probe SNMP

Save Delete

Avaya Datastore

Cisco

Cisco Remote Copy

Oracle Microsoft Operator Connect

Vdf

Voss Analytics

Changes have been made to this configuration item

Cisco Remote Copy

Use this to configure CDR/CMR forwarding to a remote system.

IP location

10.13.37.8

Specify the IP address of the remote location.

username

drop

Specify the username to be used to access the remote location.

password

.....

Specify the password to be used to access the remote location.

destination

/chroot/scp/pub/cucm

Specify the path on the remote system.

Verify Config

Oracle Microsoft Operator Connect

If customer CDR folders for Oracle Call Manager were set up during Arbitrator setup, then parsing CDRs and using API calls to create the call record in the MS Tenant via the Operator Connect API is configured from the setup up on the **Oracle Microsoft Operator Connect** screen.

The screenshot shows the Voss Archive Management web interface. The top navigation bar includes the Voss logo and various icons. Below it, the 'ARCHIVE MANAGEMENT' section is active, with sub-tabs for 'Configuration Management' and 'Log Management'. A secondary navigation bar lists various configuration options: API Config, Archive, Blue Jeans Config, Cisco SDL, Collect (highlighted), Import, LDAP, Probe, SNMP, Syslog, and Tun. On the left, a sidebar lists configuration items: Avaya Datastore, Cisco, Cisco Remote Copy, Oracle Microsoft Operator Connect (highlighted), Vdf, and Voss Analytics. The main content area displays a yellow notification: 'Changes have been made to this configuration item'. Below this, the 'Oracle Microsoft Operator Connect' configuration page is shown, with the instruction: 'Use this to configure SBC forwarding to Microsoft Operator Connect.' The page contains four input fields: 'Client ID' (with a note to specify the client_id), 'Client Secret' (with a note to specify the client_secret), 'Tenant' (with a note to specify the tenant), and 'Resource'.

For CDR folder setup, see the "Add Customer CDR Folders" topic in the Arbitrator Install Guide.


Ping Probe

This page configures ping probes to define the location to store the collection of ping probe results. By default, the storage location is "local", and all ping probe results are processed and stored on a local arbitrator.

You can configure the ping probe to store results remotely. This is useful if the data of multiple arbitrators should be stored in a central location.

1. At **method**, select *remote arbitrator*.
2. Fill out the remote IP address of the arbitrator.
3. Save your changes.

Note: Even if configuring the results of the ping probe to be stored to a remote arbitrator, results are stored both to the remote location as well as to the local storage location (the default).

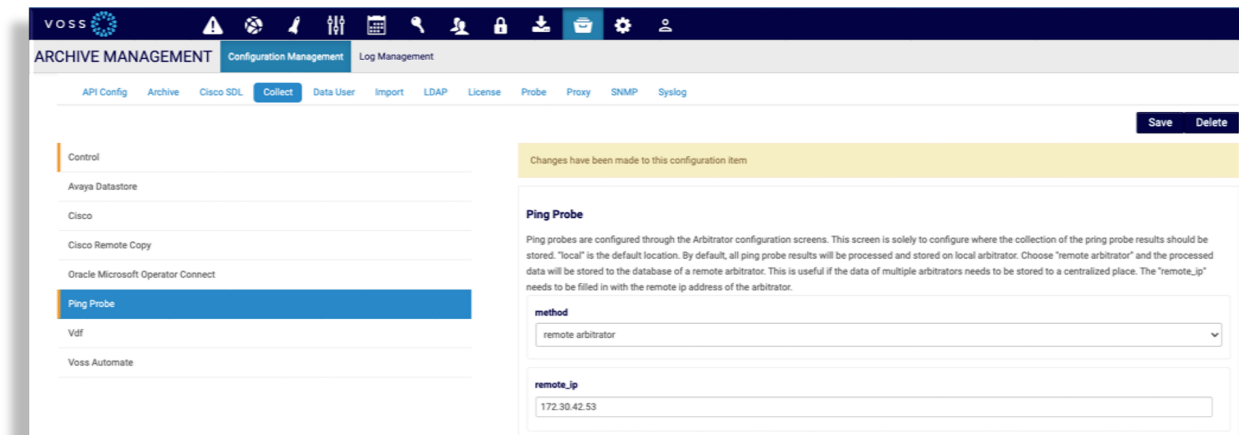

Import Tab

This tab allows you to import configuration data to a server from a csv file.

Note: Only csv file imports are supported.

LDAP Tab

The system uses a local LDAP server to store user information. The system also supports authenticating with an external Microsoft Active Directory server. If an external Microsoft AD is used, the system will automatically sync all users locally. Local user accounts are necessary to set specific system privileges. Note that Microsoft AD passwords are never stored locally. Authentication always occurs with external Microsoft AD. Once authenticated, the system allows a user access based on their local system privileges. In order to properly configure these settings, the customer administrator requires an in-depth knowledge of the customer's Microsoft AD architecture. Improper configuration may cause too little or too many users in the system.

The screenshot shows the VOSS Archive Management interface. The top navigation bar includes the VOSS logo and various system icons. Below it, the 'ARCHIVE MANAGEMENT' section is active, with sub-tabs for 'Configuration Management' and 'Log Management'. Under 'Configuration Management', there are several sub-tabs: 'API Config', 'Archive', 'Cisco SDL', 'Collect', 'Data User', 'Import', 'LDAP' (which is selected), 'License', 'Probe', 'Proxy', 'SNMP', 'Syslog', and 'Tunnel'. On the right side of the 'LDAP' tab, there are 'Save' and 'Delete' buttons. The main content area is titled 'External Config' and contains a yellow notification bar stating 'Changes have been made to this configuration item'. Below this, there is a section titled 'External Config' with a descriptive paragraph about the system's use of local and external LDAP servers. A 'Test LDAP configuration' button is present, with a note to use it to test the configuration. Below the button, there are three form fields: 'external_type' (a dropdown menu currently set to 'local'), 'is_ssl' (a dropdown menu currently set to 'true'), and 'ip' (a text input field). Each field has a small explanatory note below it.

External Config

The system uses a local ldap server to store user information. The system also supports authenticating with an external Microsoft Active Directory server. If an external Microsoft AD is used, the system will automatically sync all users locally. Local user accounts are necessary to set specific system privileges. Please note that Microsoft AD passwords are never stored locally. Authentication always occurs with external Microsoft AD. Once authenticated, the system allows the user access based on the user's local system privileges. In order to properly configure this screen, the customer administrator must have an in depth knowledge of the customer's Microsoft AD architecture. Improper configuration may cause too little or too many users in the system.

Test LDAP configuration

Test LDAP configuration

Use this button to test the configuration that is filled in the form below.

external_type

local

'local' - use this system as the ldap server; 'windows' - use external Microsoft Active Directory server. This will require additional form information to be filled.

is_ssl

true

Required only for 'windows' setting. Set to 'true' if Microsoft Active Directory requires ssl for connection.

ip

Required only for 'windows' setting. Ip Address of Microsoft Active Directory.

License Tab

This tab registers your system for integration with the VOSS Cloud License service for user license count auditing, and allows the licensed user counts files to be sent to VOSS automatically.

You can also view and download license files on this tab, and upload license files to VOSS.

The screenshot displays the VOSS ARCHIVE MANAGEMENT web interface. The top navigation bar includes the VOSS logo and various icons. Below it, the 'ARCHIVE MANAGEMENT' section is active, with sub-tabs for 'Configuration Management' and 'Log Management'. The 'Configuration Management' sub-tab is further divided into several categories: API Config, Archive, Cisco SDL, Collect, Data User, Import, LDAP, **License** (selected), Probe, Proxy, SNMP, Syslog, and Tunnel. On the right side of the 'License' tab, there are 'Save' and 'Delete' buttons. The main content area is titled 'License' and contains a yellow notification bar stating 'Changes have been made to this configuration item'. Below this, the 'License' section provides instructions: 'This screen manages licensing with VOSS. This screen may be used to enable the periodic license delivery to VOSS. If applicable, please update firewall policies to allow interaction with platform.voss-solutions.com. Additionally, please configure proxy settings for external connectivity, if necessary.' The configuration fields include:

- enabled**: A dropdown menu currently set to 'false'. Below it is a note: 'Opt-in/Enable the automatic sharing of the license file.'
- organization id**: A text input field containing 'adsl'. Below it is a note: 'The VOSS organization id associated with this device.'
- environment type**: A dropdown menu currently set to 'production'. Below it is a note: 'The VOSS account id (organisation id) associated with this device.'
- description**: A text input field containing 'A description'. Below it is a note: 'A description of this device.'

 At the bottom left, there is a 'Running command' button. At the bottom right, there is a 'Fetch License File' button.

Related Topics

- [License Auditing](#)

Proxy Tab

To allow for cloud services access, proxy configuration (both authenticated and unauthenticated) is supported. You can configure the Proxy on the Arbitrator **Settings** menu from **ARCHIVE MANAGEMENT > Configuration Management > Proxy**.

The screenshot shows the Voss Archive Management web interface. At the top, there is a dark blue header with the Voss logo and a row of icons. Below this is a light blue navigation bar with the text 'ARCHIVE MANAGEMENT' and tabs for 'Configuration Management' and 'Log Management'. Under 'Configuration Management', there are sub-tabs: 'API Config', 'Archive', 'Blue Jeans Config', 'Cisco SDL', 'Collect', 'Import', 'LDAP', 'Probe', 'Proxy' (highlighted with a red box), 'SNMP', 'Syslog', and 'Tunnel'. To the right of these tabs are 'Save' and 'Delete' buttons. Below the navigation bar, on the left, is a blue sidebar with 'Proxy Config' selected. The main content area has a yellow banner stating 'Changes have been made to this configuration item'. Below this is the 'Proxy Config' section, which includes a description: 'Adds configuration for Proxy use in external data creation.' The section contains four input fields: 'ipAddress' (with value '10.0.0.1'), 'proxyPort' (with value '19001'), 'userName' (with value 'UserX'), and 'password' (with masked characters '*****'). Each field has a descriptive label below it. At the bottom of the section are two buttons: 'Set Proxy' and 'Remove Proxy', each with a descriptive label below it.

Proxy Config

Adds configuration for Proxy use in external data creation.

ipAddress

10.0.0.1

IP Address of the proxy server.

proxyPort

19001

Port of the proxy server.

userName

UserX

User for the proxy account for external access.

password

Password for the proxy user account for external access.

Set Proxy

Set Proxy

Set the proxy with the settings above. (Values must be saved first.)

Remove Proxy

Remove Proxy

Clear the proxy config removing any previously configured proxy.

1. Fill out the required **Proxy Config** values: **ipAddress**, **proxyPort**, **userName** password.
2. Click **Save**.
3. To enable the saved values, click **Set Proxy**.

Important: The proxy is used only by services that use APIs for their data, and are set up in **Archive Management > Configuration Management > API Config**: Webex, Teams and Zoom.

If it is necessary to remove the proxy configuration, click **Remove Proxy**. This will reset the configuration to empty settings from the system. In order to clear the configuration screen, you will then need to click **Delete** at the top of the form. This will remove any confusion as to the proxy settings in the future.

SNMP Tab

This tab configures SNMP v3 user config, which allows the system to be configured to work with SNMP v3. It allows you to select the specific authentication and encryption methods to be used.

The screenshot shows the 'SNMPv3 User Config' form within the 'ARCHIVE MANAGEMENT' interface. The breadcrumb trail is 'Configuration Management > Log Management'. The 'SNMP' tab is selected in the top navigation bar. A 'Save' button is located at the top right. A yellow notification bar states 'Changes have been made to this configuration item'. The form title is 'SNMPv3 User Config' with the instruction 'Setup the configuration for SNMP.' Below this is a 'Commit SNMPv3 User Configuration' button. The form contains several input fields: 'Engine ID' (OCTECT STRING), 'User Name' (OCTECT STRING), 'Authentication Protocol' (MD5), 'Authentication Pass Phrase', 'Encryption Protocol' (AES), and 'Encryption Pass Phrase'.

Syslog Tab

This tab configures the IP address of your central syslog server.

Note: This is a system-wide setting.

The system can send out syslog messages about several of the internal functions, including backup and archival success. If an IP address is specified, the system will send any internal VOSS Insights messages onto the specified syslog server.

Only one central syslog server can be specified at this time. Please validate firewall settings are open to allow incoming messages on the specified IP address and port.

The screenshot shows the 'Syslog Server' configuration page within the 'Archive Management' section. The page has a header with 'ARCHIVE MANAGEMENT' and sub-tabs for 'Configuration Management' and 'Log Management'. Below the header, there are tabs for 'Archive', 'Collect', 'LDAP', 'SNMP', 'Syslog' (which is active), and 'Tunnel'. A 'Save' button is located in the top right corner. On the left, there is a 'Syslog Server' tab. The main content area has a yellow banner stating 'Changes have been made to this configuration item'. Below this, the 'Syslog Server' section contains instructions: 'Use this screen to configure the ip address of your central syslog server. This is a system wide setting. If an ip address is specified the system will send any internal Layer X messages onto the specified syslog server. Only one central syslog server can be specified at this time. Please validate firewall settings are open to allow incoming messages on the specified ip address and port.' There are three input fields: 'external_syslog_ip' with a placeholder 'Optional. Enter in the ip address of your organization's central syslog server. A single Ip Address or a single Domain name. Note. Domain name entries must resolve through the system configured DNS (as specified in system DNS settings)', 'protocol' with a dropdown menu showing 'tcp' and a note 'Syslog protocols to use in syslog transport. Syslog server must also support the same protocol.', and 'external_syslog_port' with a text input showing '514' and a note 'Optional. Enter in the port. Default syslog port is 514'.

4.11.3. Log Management Tab

The **Log Management** tab (in **Archive Management**) allows you to customize the archival of the index data store. It can be performed based on Size, Time or a combination of both.

Set the archival process

This procedure sets up the archival process.

1. Click on the Log Management tab.
2. Select the file size at which to start the archive.
3. Select the time interval at which to start the archive.
4. Add the location to where the archive file will be sent.
5. Set the **IP Address**, Choose the **Method** of transport (e.g. SFTP), give it a **Path** and input any **Credentials** required.

Archive Methods


IP Address	Method
0.0.0.0	SCP
	SCP
	SFTP
	SMP

ARCHIVE MANAGEMENT

Configuration Management: Log Management

Errors exist Save

Archive Settings



● Used Space (570 GB) ● Free Space (375 GB)

Current Intervals

4 GB

10 Days

Last Archive Time

Aug 19, 2018 13:50

Archive Index Every

4 GB

10 Days

Alerting Options

☐ Alert on archive success

☒ Alert on archive failure

Archive Methods

IP Address	Method	Path	Credentials
0.0.0.0	SCP		None

+

4.12. Tools


4.12.1. Overview

The **SNMP Tools** page allows you to load or import MIBs and then build SNMP actions/ scripts to be saved as probes within the platform.

Insights ships with a library of MIBs that can be opened by choosing the **Load MIB** button. If a new one is needed it can be imported by selecting the **Import MIBs** button.


4.12.2. Load a MIB

1. On the **Tools** page, click **Load MIB**.
2. In the **Select a MIB** dialog, view the choice of all the manufacturer MIBs available in the system, then select the relevant MIB.
3. Scroll through and select the desired MIB.

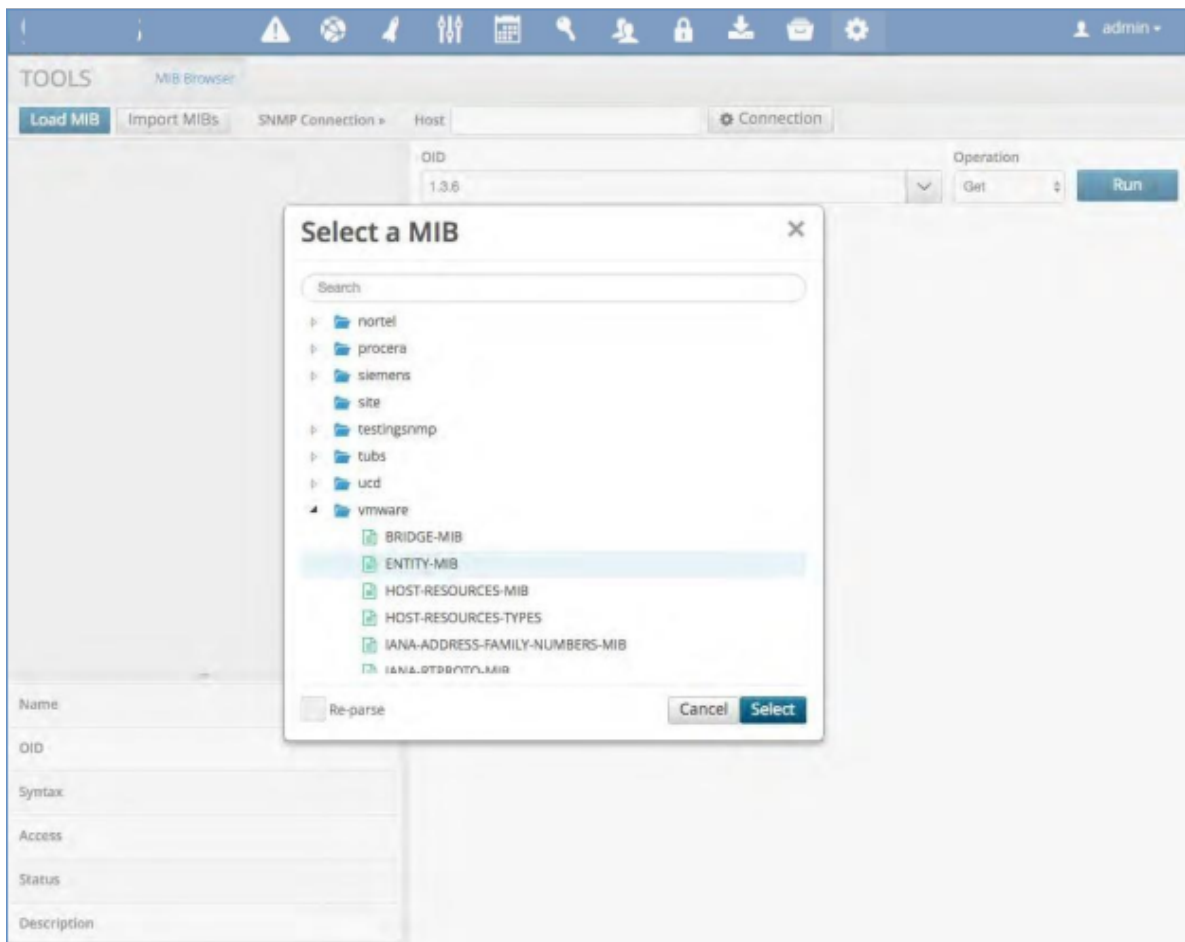

3. Once selected you can open up all of the branches and leaves and view each associated OID.
4. Choose the folder you wish to use, and fill out the connection settings for that system.

5. Select the Connection button, input the host name or IP and choose the SNMP version. If selecting V3 then a set of different parameters will pop up and you will need to fill these in.

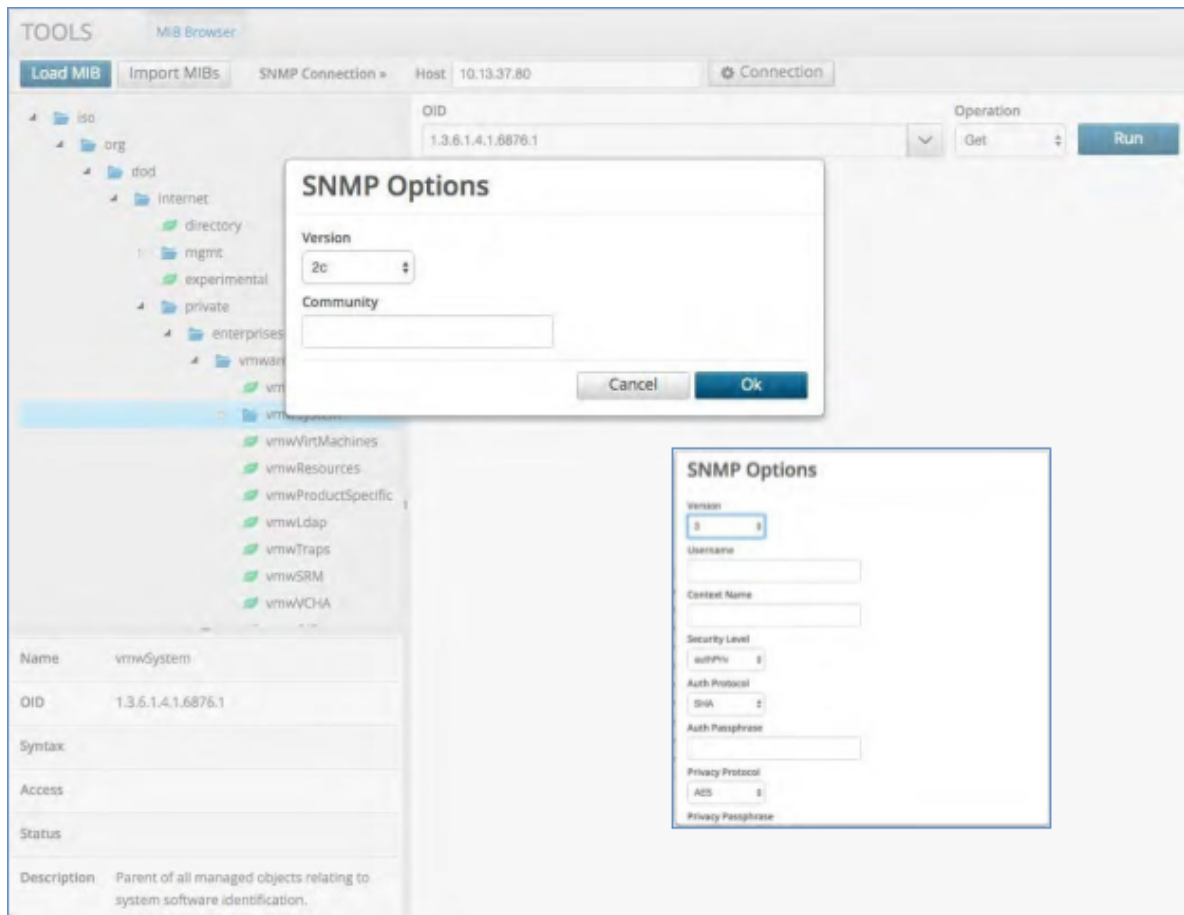

6. Choose the operation to perform: GET, GET NEXT or WALK
7. The operation will return the values of the OID you query in the field below it. Checking any of the boxes beside the field will un-gray the "Create Probe" box.
8. Do this for each Probe you want to create.

The screenshot shows the 'Create Probe' dialog box in the Insights Arbitrator interface. The dialog has the following fields and options:

- OID:** A text field containing '.1.3.6.1.4.1.6876.1.1.0'.
- Probe Name:** An empty text field.
- Radio buttons:**
 - ☒ Add to existing probe group
 - ☐ Create a new probe group
- Application:** A dropdown menu showing 'ssh probe'.
- Probe Group Name:** An empty text field.
- Buttons:** 'Cancel' and 'Create' buttons at the bottom right.

The background window shows a table of results for the selected OID:

Text OID	Value	Type
VMWARE-SYSTEM-MIB::vmwProdName.0	VMware ESXi	STRING
VMWARE-SYSTEM-MIB::vmwProdVersion.0	6.0.0	STRING
VMWARE-SYSTEM-MIB::vmwProdBuild.0	2494585	STRING
VMWARE-SYSTEM-MIB::vmwProdUpdate.0	0	STRING
VMWARE-SYSTEM-MIB::vmwProdPatch.0	0	STRING

9. When you select “Create Probe” a new box will open that will allow you to give the Probe a name and either save it to an existing Probe Group or create a new one.
10. Now you have a new Probe that will run the particular SNMP command you requested.

4.13. Agent Configuration

4.13.1. Overview

Insights Arbitrator agents are Linux service testing bots that enable synthetic connectivity and performance testing of a range of UC and business applications for greater visibility of the user experience in your environment.

The agents test connectivity to UC resources, such as Teams and Zoom, and perform synthetic testing to validate that the infrastructure can reach the application resource or a specified URL. For example, you may want to monitor the route and connectivity across a WAN link for mission-critical applications to verify jitter and per hop latency. Alerts can be set up to notify you immediately when your systems experience connectivity or performance issues. This is especially important for systems where it's important that they're up and running at all times.

Each agent makes regular (5 minute interval) API calls to the Arbitrator for updates.

You can view and configure registered Insights agents and agent profiles via the **Agent Configuration** tab in Arbitrator's **System Configuration** interface.

Note: One profile is assigned per agent.



The screenshot shows the 'AGENT CONFIGURATION' section of the Voss interface. It features a table with columns for Group Name, Arbitrator, Customer, Agent, Hostname, System IP, Profile, and Enabled. The 'Agents' group is selected, showing a single agent named 'ubuntu1' with a 'DefaultProfile' and an 'Enabled' checkbox.

Group Name	Arbitrator	Customer	Agent	Hostname	System IP	Profile	Enabled
Agents	<input checked="" type="checkbox"/>	XXXXXXXXXX	ubuntu1	XXXXXXXXXX	XXXXXXXXXX	DefaultProfile	<input checked="" type="checkbox"/>
Profiles							

4.13.2. Install Insights Agent

This procedure installs and registers an Insights agent with the Arbitrator.


System Requirements

- Minimal Linux installation on your network that can install .deb files on any of: VM, (mini)computer, Raspberry PI
- Linux should have installed: jq, curl, sysstat, mtr-tiny, util-linux
- Minimal space required: .deb file size less than 17KB

1. Download the installation package via the Arbitrator GUI or directly via the Arbitrator IP address:

`https://[Arbitrator IP Address]/insights-agent/insights-agent-[release version]-all.deb`

Note: You can verify the file against the sha value, also available at the download location: `insights-agent-[release version]-all.deb.sha256`

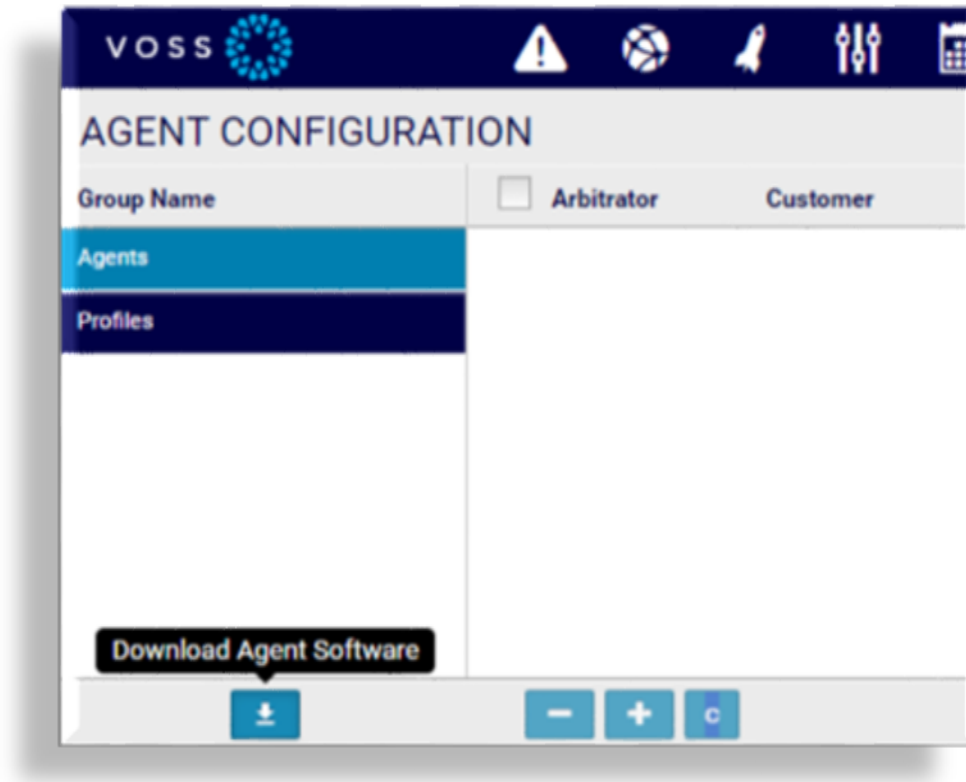

2. Install the software: `$ sudo apt-get install ./insights-agent-24.2-all.deb`
3. Enter the IP address or FQDN of the Arbitrator where you're deploying the agent.
4. Fill out credentials, user and password, and wait for authentication.

Note: Typically, these are the VOSS Agent API credentials - user can be the default, `voss_agent_api_user`. You can also use the admin, or your own user. Once the credentials are set up for the agent, they're not exposed again. The credentials are centrally managed on Arbitrator's [Credential Configuration](#) page, so that you can share them between the profiles. Users and their passwords can be added and configured in Arbitrator's [Access Control](#) page.

5. Fill out the customer name.
6. Fill out a name for the agent.
7. The agent registers with the Arbitrator. A UUID is required to be able to register so that the Arbitrator can identify the agent in its interactions.

Confirm that the agent status is "registered".

8. At the prompt, restart services.
9. Verify that the agent has been added:
 - Log in to Arbitrator.
 - Click the toolbar **Wrench** icon to open the **System Configuration** GUI.
 - Click the **Agents** icon to open the **Agent Configuration** page.
 - Select the **Agents** tab to view the agent you added.

Note: If you need to upgrade the agent for a new version of Arbitrator, you can re-run the Agent installation package.

4.13.3. View and Configure Agents and Profiles

Agents

The **Agent Configuration** page provides a centralized management interface for agents and their profiles, where you can:

- Add or delete agents and their profiles

Note: It is expected that an organization will have just one agent per site (location).

- Add tests for the agent to run and specify test attributes (destination, ports, protocol)

Note: Credentials for connecting to a destination can be configured via Arbitrator's [Credential Configuration](#) page.

- Manage the tests the agent runs, for example, to remove or disable existing tests
- Manage the agent code, for example, to view agents and their description or purpose, their versions, and their enabled tests, and to update one or more agents
- Enable or disable agents

Note: When disabling an agent on the Arbitrator, the agent still runs all its jobs (5 minute intervals), but it won't run its tests or report to the Arbitrator until it's enabled again.

- Select a profile for the agent, and update the agent or its profile - for example, you can change the customer name or the hostname, and enable or disable collection

Note: The system IP is a read-only value as it's assigned by the system.

Assign a profile to an agent

1. On the **Agents** group, click the green Pencil icon to edit the agent.
2. In the **Profile** drop-down for the relevant agent, choose a profile.
3. Save your changes.

Profiles

You can add one or more profiles. An agent can only have one profile assigned to it. One profile may be assigned to one or more agents.

Add a custom profile


Insights ships with a default profile, which is assigned to an agent on install. The default can be cloned and customized in Arbitrator.

To clone a profile:

1. On the **Profiles** group, select the checkbox at the profile name.
2. Click the taskbar **Clone Profile** button (C)
3. Give the profile a new name and description.
4. Add or remove tasks for the connectivity tests and/or the performance tests. You can also clone existing tasks then customize the clone for your requirements - for example, change the task name, specify a destination and port. Save your changes.

Configure profile

Click the green **Edit** icon (Pencil) to edit a profile.

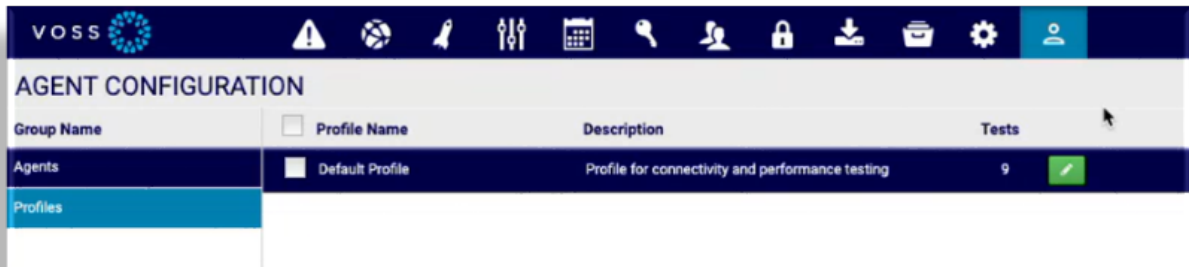

You can edit the various connectivity and performance tests for the profile. Once the profile is updated, the next time the agent checks for changes, the new settings are retrieved from the Arbitrator and the agent runs the profile with these settings against the Arbitrator.

The screenshot displays the 'AGENT CONFIGURATION' interface in the Voss application. The interface is divided into a left sidebar with 'Agents' and 'Profiles' sections, and a main content area. The 'Profiles' section is active, showing a table of configurations for a profile named 'Default Profile' (Description: 'Profile for connectivity and performance testing', ID: 9).

The main content area contains two sections: 'Connectivity Tests' and 'Performance Tests'.

Connectivity Tests Table:

Task Name	Destination	Iteration	Count	Protocol	Port	ToS	Max TTL	Packet Size	Status	
Trace graph.microsoft.com/...	graph.microsoft.com	3	3			0	0	30	64	✓
Trace teams.microsoft.com/...	teams.microsoft.com	3	3							✓
Trace graph.microsoft.com/...	graph.microsoft.com	3	3	tcp	443					✓
Trace teams.microsoft.com ...	teams.microsoft.com	3	3	tcp	443					✓

Performance Tests Table:


Task Name	Destination	Certificate Check	Authentication Type	Username	Password	Certificate	Status
Test Service graph.microsoft...	https://graph.microsoft.com/v1.0/teams	■	none				✓
Test Service teams.microsof...	https://teams.microsoft.com	■					✓
Test Service login.microsoft...	https://login.microsoftonline.com	■	basicauth	someuser	somepass	—BEGIN CERTL...	✓
Test Service outlook.office.c...	https://outlook.office.com	■	none				✓
Test Service outlook.office3...	https://outlook.office365.com	■	none				✓

View Agent Data on the Dashboards

You can view the results of agent tests on the collection of Synthetic Transactions dashboards.

When adding the agent, the system provides a unique ID (UID) to the agent, which remains associated to the agent if you uninstall and reinstall the agent. The UID comes from the Linux system, which has a unique ID. You can identify the agent data on the dashboard from the UID.

1. Log in to Insights Dashboard.
2. In the Dashboard folders, navigate to **Diagnostics > Synthetic Transactions**.

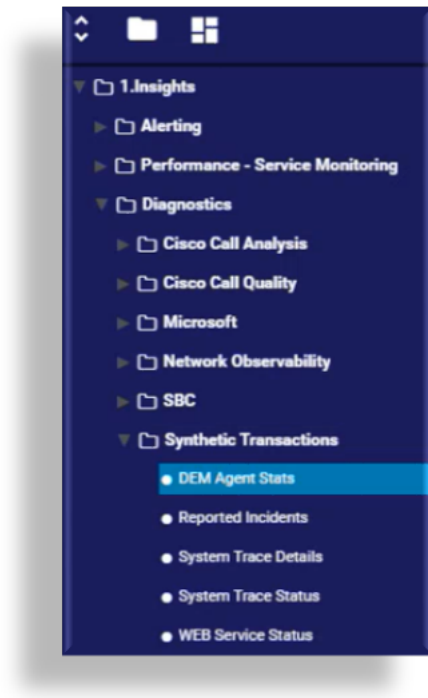

Note: See Synthetic Transactions Dashboards in the Dashboard Admin Guide.

3. Select a dashboard to view and inspect agent data.

Related Topics


- Insights Reference Dashboards - Synthetic Transactions Dashboards in the Dashboard Admin Guide

5. Advanced Admin and Maintenance

5.1. Backup and restore Arbitrator

This procedure backs up Insights Arbitrator, retrieves the backup files, and restores the system.


1. Configure the Arbitrator backup. See [Archive Tab](#).
2. Restore the Arbitrator application from a backup:
 1. Log in to CLI as an admin.
 2. In the **Administration** menu, select **Backup Restore**, then click **OK**.
 3. Select **Restore a backup**.

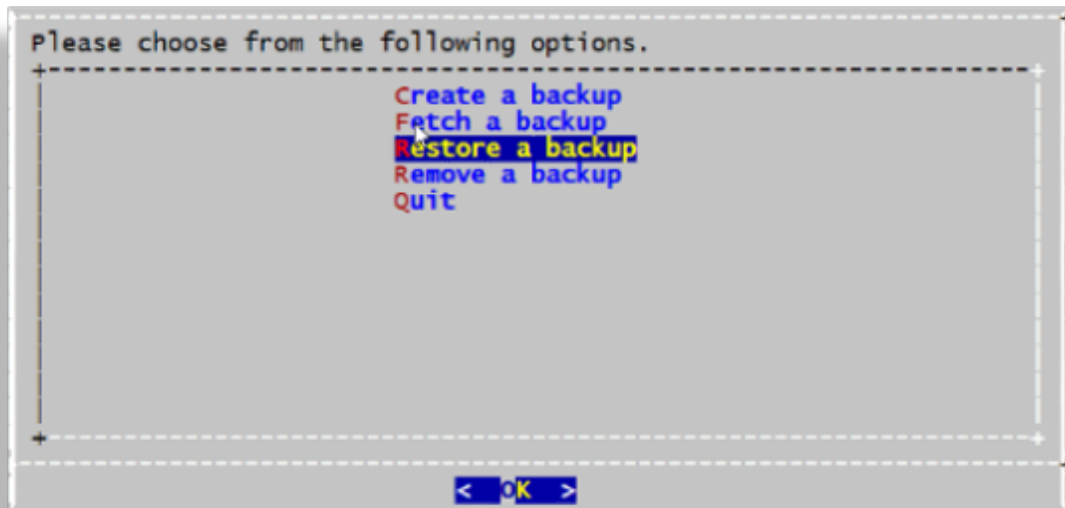

4. Optionally, run the `Fetch` command to retrieve backup files.
5. Select the local backup you wish to restore. Choose an option:
 - To restore data from the nightly backups, select `self`.
 - To restore from another source, including a remote backup of this device, select the relevant source.


Note: Additional restore locations can (optionally) be retrieved using the `Fetch` command, or the **Restore** screen selects this device as the target of the `rsyncToArb` method.

6. Select the data types to restore. The image provides an example. Later releases may include additional data types:

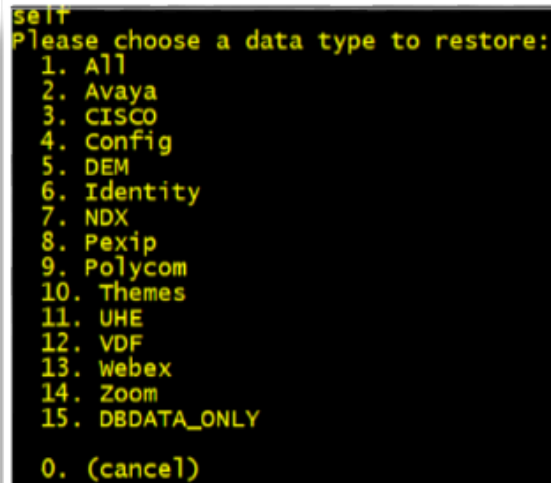


```
self
Please choose a data type to restore:
1. All
2. Avaya
3. CISCO
4. Config
5. DEM
6. Identity
7. NDX
8. Pexip
9. Polycom
10. Themes
11. UHE
12. VDF
13. Webex
14. Zoom
15. DBDATA_ONLY
0. (cancel)
```

7. Select the number of months to restore (0 to 60 or all).

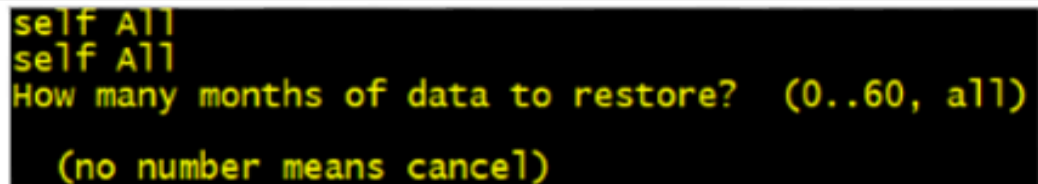

```
self All
self All
How many months of data to restore? (0..60, all)
(no number means cancel)
```

8. Confirm the restore.

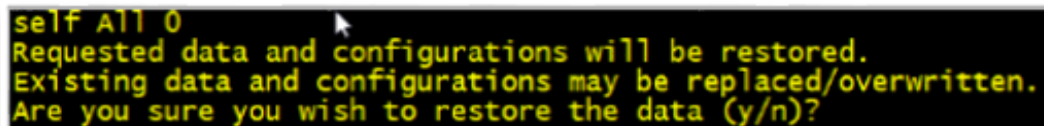

```
self All 0
Requested data and configurations will be restored.
Existing data and configurations may be replaced/overwritten.
Are you sure you wish to restore the data (y/n)?
```


9. Monitor restore progress. A system message confirms when the restore is complete.

Important: Restoring Insights Arbitrator may take several hours, especially on larger systems and/or when restoring more data.

5.2. System recovery

This procedure provides access to options that allow you to troubleshoot and recover Arbitrator services in the event of system errors.

1. Log in to CLI as an admin.
2. On the **Administration** menu, select **System Recovery**.

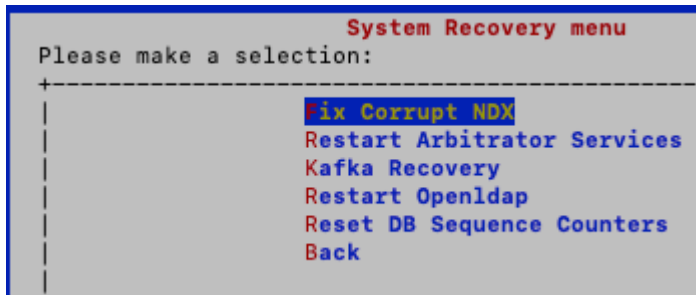

3. On the **System Recovery** menu, choose an option for the issue you're trying to resolve. Options are:

- Fix corrupt NDX


May be used to repair the NDX. The NDX is the backbone of the “Search” screen in the user interface. If the “Search” screen displays zero results, the NDX may be corrupt. This option terminates the current NDX files and start a new NDX set of files.

- Restart Arbitrator services

Allows you to restart the Arbitrator's core services involved in collection, correlation, and alerting. This option is useful when attempting to debug a scenario where alerts are not firing.

- Kafka Recovery

Arbitrator uses Kafka for communication between different processes. This menu option stops and starts the Kafka process and restarts Arbitrator services. Use this option when Kafka is slow and impacting Arbitrator system performance.

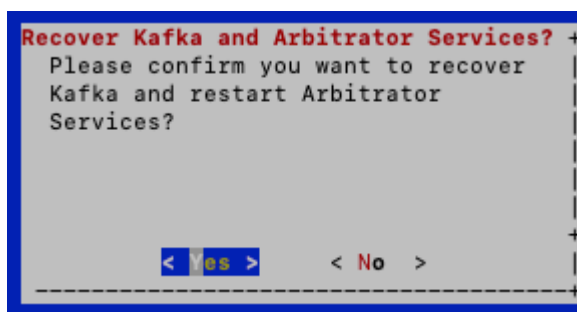

- Restart OpenLDAP

Used specifically for restarting the OpenLDAP service. This option is useful when attempting to debug authentication issues in the user interface.

- Reset DB Sequence Counters

This option provides an optional (last resort) method for resolving a rare scenario when alerts stop firing. If you've exhausted the normal troubleshooting checks for alerting, this option may be

used as a final resort. This method has been shown to fix rare issues in the past, and is provided as an option until the issue may be auto-detected and automatically repaired.

5.3. Configure network observability

5.3.1. Overview

Network observability is configured on the Arbitrator as a set of probe scripts that collect and analyze data from the customer's network devices.

Note: The probe scripts comprise a set of SNMP v2 scripts and a set of SNMP v3 scripts. Both v2 and v3 of the SNMP scripts perform the same function. The version you'll use depends on whether your device supports SNMP v2 or SNMP v3.

Data is presented for analysis via read-only network observability reference dashboards in the Insights Dashboard system. The dashboards have read access to the database tables on Arbitrator, and allow you to determine in greater detail why alerts have occurred.

Related topics

- [Probe Configuration](#)
- [Asset Configuration](#)
- Insights Reference Dashboards in the Dashboard Administration Guide

5.3.2. Configure network observability probe groups

This procedure configures network observability probe groups in Arbitrator.

1. Log in to the Arbitrator.
2. Click the toolbar Wrench icon to open the **System Configuration** interface.
3. Click the **Probes** icon to open the **Probe Configuration** page.
4. Click the Plus icon (+) at the bottom of the **Groups** panel to add the first probe group, then fill out a probe group name, and tab out of the field to add the probe group.

Important: We have provided a recommended configuration of the following four probe groups, including a recommended naming convention and probe configuration parameters, in [Configure network observability](#):

- Network Observability 5 min
- Network Observability 10 min
- Network Observability SNMP 10 min
- Network Observability SNMP 5 min,

For example, for the first probe group you add, you can use *Network Observability 5 min* as the probe group name.

5. Add the probes for the probe group you added.

Note: It is recommended that you use the probe configuration parameters provided in the table, in [Configure network observability](#).

- On the **Probes** panel, at **Select Category**, click the down-arrow, then select **Network Observability**.

Note: Clear the **Custom** checkbox to display the **Select Category** drop-down.

- Fill out the probe name.
- Select the relevant script, based on the recommended configuration in [Configure network observability](#).
- If relevant for the probe you're configuring, you will need to provide SNMP credentials.
- Click the check icon to save the probe.

The screenshot shows the 'PROBE CONFIGURATION' interface. On the left, under 'Groups', a list of probe groups is shown with checkboxes and counts: CUCM RIS (1), Local System Stats (5), Network Obs 10min (1), Network Obs 5min (2), Network Obs SNMP 10min (1), Network Obs SNMP 5min (1), Ping Probe (1), and Voss Automate Data (1). The 'Network Obs 5min' group is selected. The main 'Probes' panel has a table with columns: Name, Description, Unit, and Command and Parameters. A probe named 'network_obs_cbqoscm' is being configured. The 'Command and Parameters' section includes: 'Custom' checkbox (checked), 'Select Category' dropdown (set to 'Network Observability'), 'Select Script' dropdown (set to 'netob-alarm-probe-cbqoscm-stats.sh'), 'IP address list (default = all)' text box, 'IP address exclude list (default = none)' text box, and 'Interval in seconds (default = 900)' text box. A checkmark icon is at the bottom right of the configuration panel.

6. Repeat these steps to add the rest of the probe groups and probes required for network observability, based on the settings provided in [Configure network observability](#).
7. Click **Save**.

Next steps:

- Once you've set up the probe groups, the SNMP probe groups are applied to the device you're collecting data from.
- Assign customers to assets. For details, see [Asset Configuration](#)

In order for the network observability probe groups to return useful data, the corresponding assets should have "customer" and "site" assignment. This is done via the **Asset Configuration** menu in Arbitrator.

- In **Asset Configuration**, locate the Arbitrator (in the **Assets** panel).

- Click on the wrench icon to configure the monitor profile.
- Drag the relevant probe group into the **Templates/Profiles** panel, then click the wrench icon to set the frequency, as per the settings for the probe group in [Configure network observability](#).
Repeat this step to add other probe groups, and to configure their frequency.
- Click **Update**.

5.3.3. Recommended Network Observability Probe Group Configuration

This topic describes a recommended setup for the four probe groups required for optimal network observability.

The table describes the recommended network observability probe group configuration:

Probe Group	Configuration
1. Network Observability 5 min	<p>There are two probes to set up for this probe group:</p> <ol style="list-style-type: none"> 1. Network Observability Asset Impact This probe detects the impact of network observability alarms on locations. <ul style="list-style-type: none"> • Scripts to use with this probe: <ul style="list-style-type: none"> – <code>netob-asset-impact-assessment.sh</code> • Category: Network Observability • Parameters: N/A • Applied to: Arbitrator • Frequency: 5 minutes • Credentials: N/A 2. Network Observability Interface Event Detections This probe detects the interface counter changes for discards and errors. <ul style="list-style-type: none"> • Script to use with this probe: <ul style="list-style-type: none"> – <code>netob-alarm-probe-interface-stats.sh</code> • Category: Network Observability • Parameters: Use defaults, unless customization is required. • Applied to: Arbitrator • Frequency: 5 minutes • Credentials: N/A
2. Network Observability 10 min	<p>This probe group contains one probe. The probe detects the cbqoscm counter changes.</p> <ul style="list-style-type: none"> • Probe name: Network Observability CB QoS Event Detections • Script to use with this probe: <ul style="list-style-type: none"> – <code>netob-alarm-probe-cbqoscm-stats.sh</code> • Category: Network Observability • Parameters: Use defaults, unless customization is required. • Applied to: Arbitrator • Frequency: 10 minutes • Credentials: N/A
3. Network Observability SNMP 10 min	<p>This probe group contains one probe. The probe is used for netob-cisco-cbq-mib-stats-snmpv3 collection for group01.</p> <ul style="list-style-type: none"> • Probe name: Network Observability CBQ • Script to use with this probe - either of the following: <ul style="list-style-type: none"> – <code>netob-cisco-cbq-mib-stats-snmpv3.sh</code> – <code>netob-cisco-cbq-mib-stats-snmpv2c.sh</code> • Category: Network Observability • Parameters: Supply appropriate credentials, where applicable. • Applied to: Asset • Frequency: 10 minutes • Credentials: SNMP

Probe Group	Configuration
4. Network Observability SNMP 5 min	<p>This probe group contains one probe. The probe is used for netob-ifmib-interface-stats-snmpv3 collection for group01.</p> <ul style="list-style-type: none"> • Probe name: Network Observability Interface • Script to use with this probe - either of the following: <ul style="list-style-type: none"> – netob-ifmib-interface-stats-snmpv3.sh – netob-ifmib-interface-stats-snmpv2c.sh • Category: Network Observability • Parameters: Supply appropriate credentials, where applicable. • Applied to: Asset • Frequency: 5 minutes • Credentials: SNMP

5.4. Configure Insights integration with CUBE

5.4.1. Overview

This procedure configures Insights Arbitrator integration with Cisco Unified Border Element (CUBE) for call detail record (CDR) ingestion and monitoring.

Once the CUBE is configured to send CDRs to the Arbitrator, CDR files are placed in the relevant directory (the folder name is the IP address of the CUBE), triggering the Arbitrator to parse the CDRs files so that the data will be available on the CUBE dashboard.

Note: If you wish to monitor Cisco CUBE SRST/ISR status and display this data in the CUBE dashboard with an ssh probe over SNMP probe, run the following command:

```
show voice dial-peer status
```

- Queries syslog message for registered/unregistered to show voice registrar pool
- Queries the server via syslog and returns a list of all registered MAC addresses

This procedure involves two steps:

1. *Add the CUBE via the Arbitrator CLI*
2. *Configure the CUBE to send CDRs to the Arbitrator*


Related topics

- Insights Reference Dashboards (CUBE) in the Dashboard Administration Guide


5.4.2. Add the CUBE via the Arbitrator CLI

This procedure sets up the CUBE on the Arbitrator.

1. Log in to the Arbitrator CLI as admin.
2. On the **Administration** menu, select **Advanced ARB Options**.

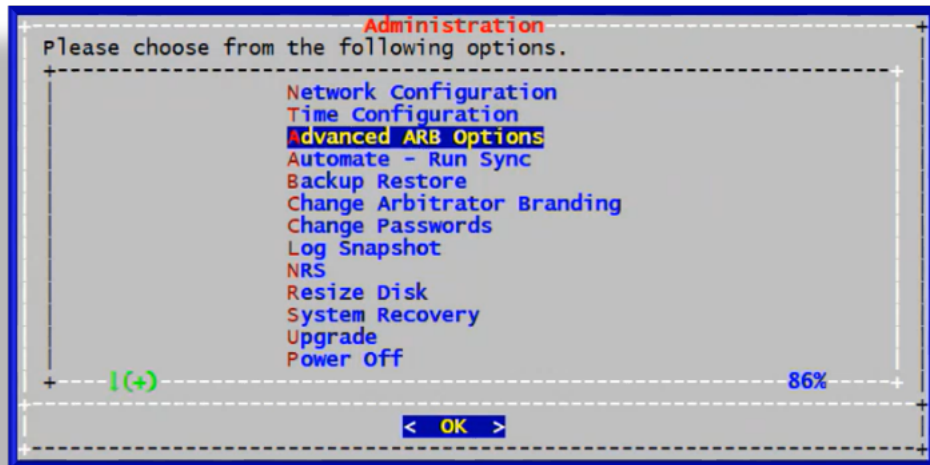

3. In the **Main Menu**, press 3 to choose option 3, **Advanced**.

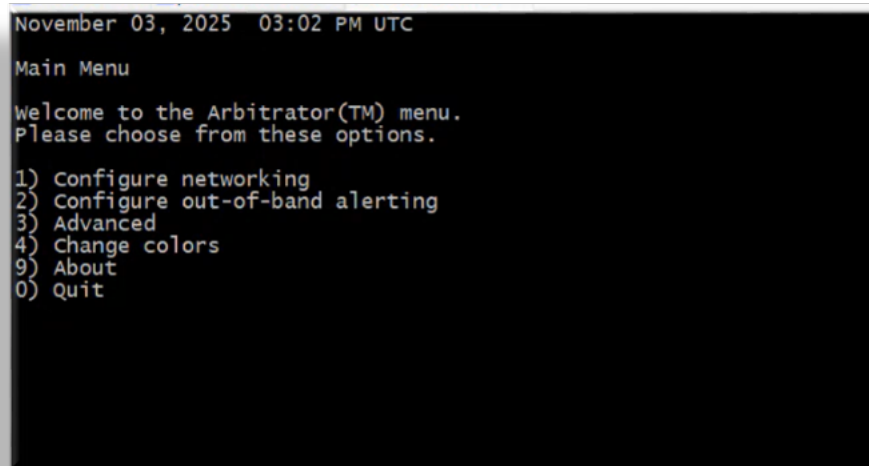

4. In the **Network Menu**, press 3 to choose option 3, **Configure services**.

```
November 03, 2025 03:02 PM UTC
Network Menu
Please choose from these options.
3) Configure services
4) Misc
0) Back
█
```

5. In the **Services Menu**, press 4 to choose option 4, **Cisco Services**.

```
November 03, 2025 03:02 PM UTC
Services Menu
Please be careful.
1) FTP Service
2) UDP Forwarding Services
3) Event Forwarding Services
4) Cisco Services
5) Oracle Services
0) Back
█
```

6. In the **Cisco Services Menu**, press 3 to choose option 3, **Configure Cisco Unified Border Element (CUBE)**.

```
Cisco Services Menu
Please be careful.
1) Configure Cisco Unified Communications Manager (CUCM)
2) Configure Cisco Call Manager Express (CME)
3) Configure Cisco Unified Border Element (CUBE)
0) Back
```

7. In the **Cisco CUBE Menu**, you can view, add, or delete Cisco CUBEs, or clear all Cisco CUBE configuration. In this case, to add a Cisco CUBE, press 2 to choose option 2, **Add Cisco CUBE**.

```

November 03, 2025 03:02 PM UTC
Cisco CUBE Menu
View Add, Delete, or Clear Cisco CUBE configuration here.
1) View configured Cisco CUBES
2) Add Cisco CUBE
3) Delete Cisco CUBE
4) Clear All Cisco CUBE Configuration
0) Back

```

8. Fill out the IP address of your CUBE to add its IP address to a folder on the Arbitrator. Press keyboard shortcut **Ctrl-X**.


The CUBE's IP address is added to the following location on the Arbitrator:

/chroot/scp/pub/cube/<IP address of your cube>

```

November 03, 2025 03:02 PM UTC
Cisco CUBE Menu
View Add, Delete, or Clear Cisco CUBE configuration here.
1) View configured Cisco CUBES
2) Add Cisco CUBE
3) Delete Cisco CUBE
4) Clear All Cisco CUBE Configuration
0) Back
Adding 10.1.2.3

```

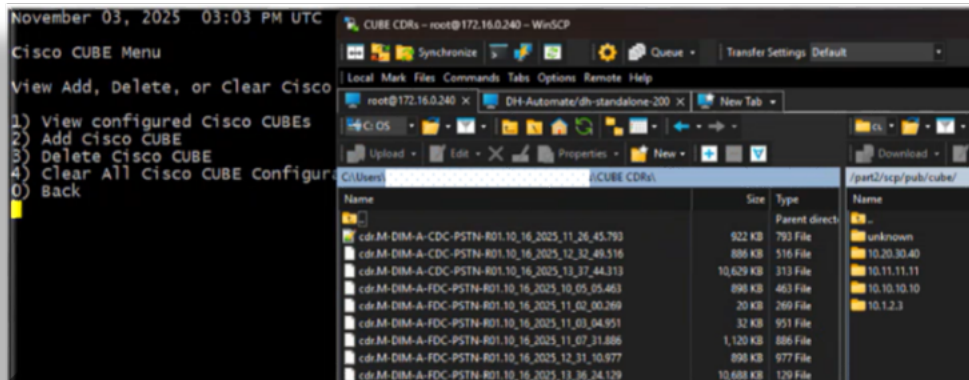

Once CDRs are placed in the directory created for the CUBE, Arbitrator parses the files and the data will be available on the CUBE dashboard.

Next steps

- [Configure the CUBE to send CDRs to the Arbitrator](#)

Related topics

- Insights Reference Dashboards (CUBE) in the Dashboard Administration Guide

5.4.3. Configure the CUBE to send CDRs to the Arbitrator

This procedure configures the queue on a CUBE to send detailed CDRs to Arbitrator via SFTP to a specified server under given user credentials, with files flushed every one second, and using “primary sftp” keyword to set the SFTP destination.

Note: Once the setup and configuration is complete, you can monitor CDR file creation and transmission status on CUBE via `show` commands or logs.

The configuration typically involves:

- Enabling file accounting on CUBE.
- Specifying the SFTP server details, including IP/hostname, username, password, and directory path. Credentials and directory path depend on your SFTP server (Arbitrator) setup. The drop account username is “drop”. You can set the drop account password via the **Administration** menu. See *Creating and managing SFTP users* in the Insights Security Guide.
- Setting retry and file retention options as required. The flush parameter can be configured as needed. In this procedure we’re configuring a maximum flush every second (parameter value of `1`).

Pre-requisites

- [Add the CUBE via the Arbitrator CLI](#)
- Ensure port 22 is open outbound from the CUBE to the SFTP server. Typically, only FTP on port 21 is available.
- Cisco CUBE version 14.6 and up.

Note: Cisco CUBE version 14.6 and up support sending CDR files directly to an SFTP server. SFTP might not be supported directly for CUBE versions earlier than 14.6.

Configure CDR file accounting on CUBE with SFTP

Perform this series of basic commands on CUBE:

```
text
enable
configure terminal
aw-accounting file
cdr-format detailed
primary sftp <SFTP-server-IP-or-hostname>/path_ username <username> password <password>
maximum cdrflush-timer 1
end
write
```

The table provides additional details for the parameters in the commands used to configure the CUBE, for example, in the following:

```
primary sftp 172.16.0.240/cube/110.1.1.1 usr: drop pass: droppassword
```

Parameter	Description
primary sftp	The primary address, which sets the SFTP destination. In the example, 172.16.0.240 is the primary address.
path	The IP address of the CUBE. In the example, this is 110.1.1.1.
drop pass	Your drop password.
maximum cdrflush-timer	Configurable retry and retention value, set to one (1) second in the example, which does a maximum flush every second.

Related topics

- Insights Reference Dashboards (CUBE) in the Dashboard Administration Guide